

VETEK A10

VETEK 6K 64MP Video Camera Camcorder Model A10 User Manual

Comprehensive Instructions for Setup, Operation, and Maintenance

1. INTRODUCTION

This manual provides detailed instructions for the VETEK 6K 64MP Video Camera Camcorder, Model A10. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its features. This camcorder is designed for capturing high-quality video and still images, suitable for various personal and creative projects.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- VETEK 6K 64MP Video Camera Camcorder (Model A10)
- External Microphone
- USB Cable
- 2.4G Remote Control
- Rechargeable Batteries (x2)
- 32GB SD Card
- User Manual

ACCESSORIES



 
Microphones



USB Cable



Remote Control

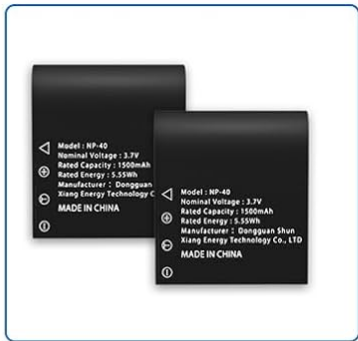

2* Batteries



32GB SD Card



User Manual

Image: VETEK 6K 64MP Video Camera Camcorder with its accessories, including an external microphone, USB cable, remote control, two batteries, a 32GB SD card, and the user manual.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your VETEK camcorder.

Front View

6K & 64MP COMS IMAGE SENSOR

6K
ULTRA HD



6K ULTRA HD



64MP



WIFI



18X digital zoom



Remote control



Webcam



Night vision



32GB SD Card



Image: Front view of the VETEK camcorder, highlighting the lens, IR lights, and microphone port.

Side View with Open Screen

6K Full-Color Night Vision

Clear images and videos in 2 Night Vision Modes

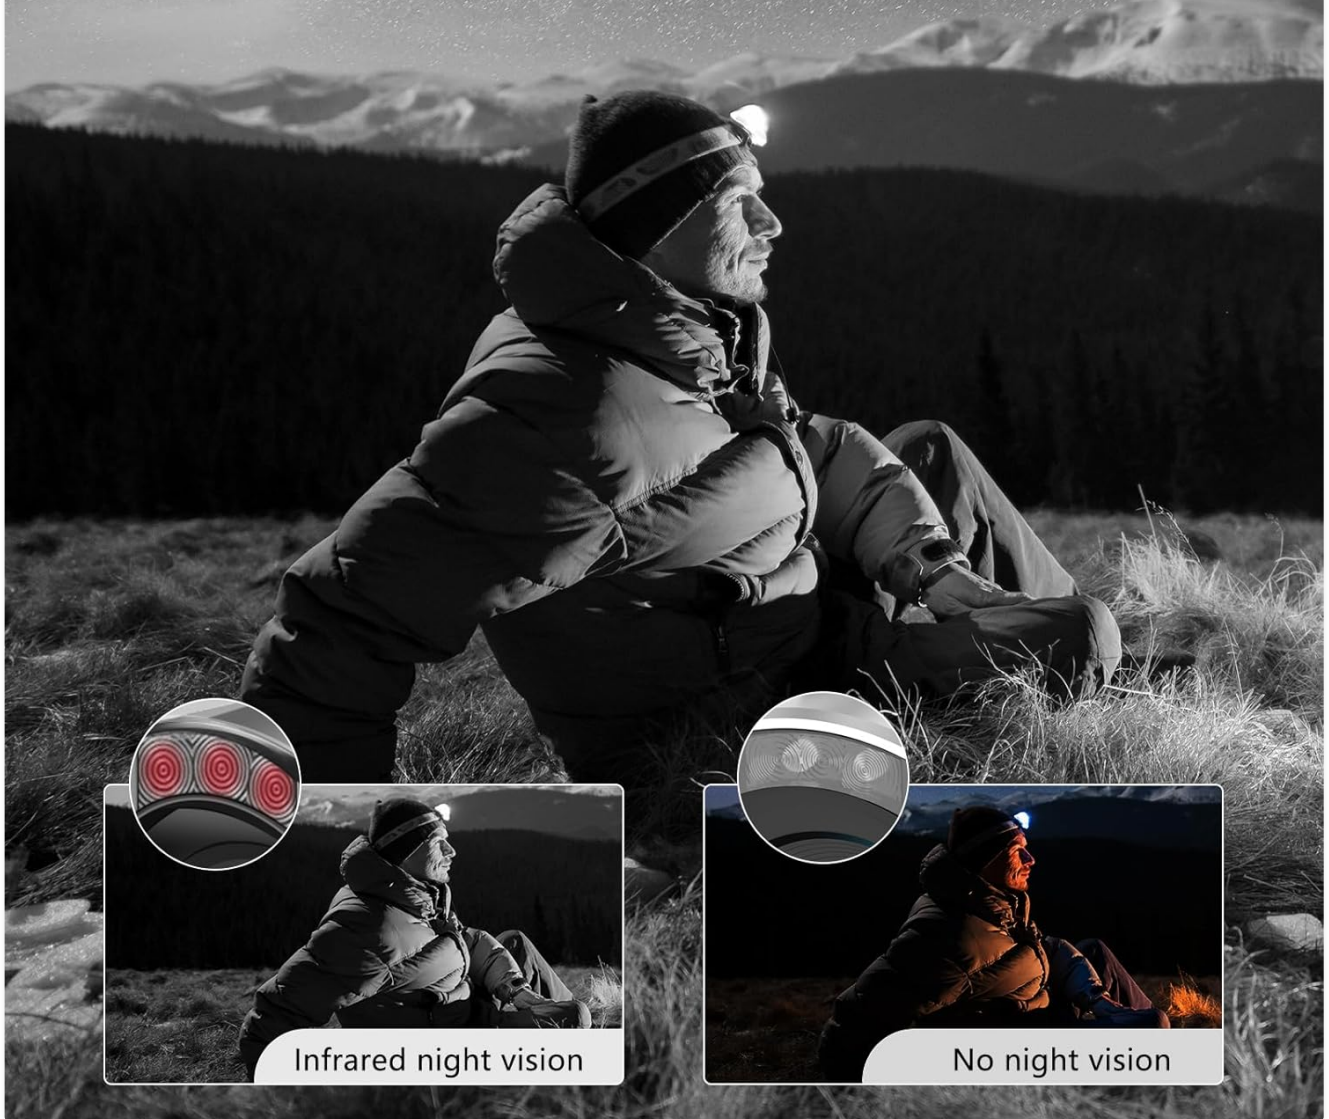 


Image: Side view of the VETEK camcorder with its 3.0-inch IPS touch screen rotated open, showing the control buttons and ports.

Key Components:

- **Lens:** Main optical component for image capture.
- **IR Lights:** For infrared night vision functionality.
- **3.0-inch IPS Touch Screen:** Rotatable 270 degrees for flexible viewing and control.
- **Microphone Port:** For connecting the external microphone.
- **Battery Compartment:** Houses the rechargeable batteries.
- **SD Card Slot:** For inserting the 32GB SD card for storage.
- **USB Port:** For data transfer and charging.
- **HDMI Port:** For connecting to an HDTV or monitor.

4. SETUP

4.1. Charging and Inserting Batteries

1. Open the battery compartment cover.

2. Insert the two included rechargeable batteries, ensuring correct polarity.
3. Close the battery compartment cover.
4. Connect the camcorder to a power source using the USB cable to fully charge the batteries before first use. The charging indicator will show the charging status.

4.2. Inserting the SD Card

1. Locate the SD card slot, usually on the side or bottom of the camcorder.
2. Insert the 32GB SD card with the metal contacts facing the correct direction until it clicks into place.
3. To remove, gently press the card until it springs out.

4.3. Attaching the External Microphone

1. Locate the microphone port on the camcorder.
2. Plug the external microphone into the port. Ensure it is securely connected for optimal audio recording.

Wireless WIFI Function

The camera has built-in wireless WIFI function, you could use your mobile phone to instantly share videos and photos online

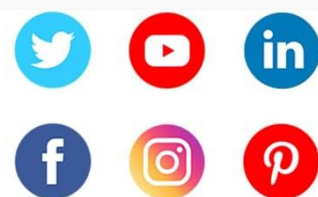 


Image: The VETEK camcorder with the external microphone attached to its top-mounted port.

4.4. Powering On/Off

- To power on, open the LCD screen or press the power button.

- To power off, close the LCD screen or press and hold the power button.

5. OPERATING INSTRUCTIONS

5.1. Basic Recording (Video/Photo Modes)

- **Switching Modes:** Use the mode button or the touch screen interface to switch between video recording mode and still photo mode.
- **Starting/Stopping Recording:** In video mode, press the record button to start recording. Press it again to stop.
- **Taking Photos:** In photo mode, press the shutter button to capture a still image.

5.2. Using the 3.0-inch IPS Touch Screen

The 3.0-inch IPS touch screen allows for intuitive control and menu navigation. It can rotate 270 degrees for various shooting angles, including self-recording.

- Tap icons to select functions or adjust settings.
- Swipe to navigate through menus or review captured media.

5.3. Zoom Function

The camcorder supports 18X digital zoom. Use the zoom controls (typically a rocker switch near the lens or on the screen) to zoom in or out, allowing you to capture distant subjects.



Image: A visual representation of the 18X digital zoom capability, showing progressive magnification from 6X to 18X.

5.4. IR Night Vision

Activate the IR Night Vision function to record clear black and white video and photos in low-light conditions or complete darkness.

- Access the Night Vision setting through the camcorder's menu.
- When activated, the infrared lights will illuminate the scene, allowing the camera to capture images.



WIFI Connection and 2.4G Remote Control

Connect the camera to the mobile phone "Hello CAM" APP WiFI to preview, play back and download photos and videos in real time



Image: A comparison showing the effectiveness of infrared night vision in capturing clear images in dark environments versus no night vision.

5.5. Using the 2.4G Remote Control

The included 2.4G remote control allows for convenient operation of the camcorder from a distance of up to 50 feet, with 360-degree control.

- Point the remote control towards the camcorder.
- Use the buttons on the remote to start/stop recording, take photos, zoom, and navigate menus.

Four Methods to Download Photos

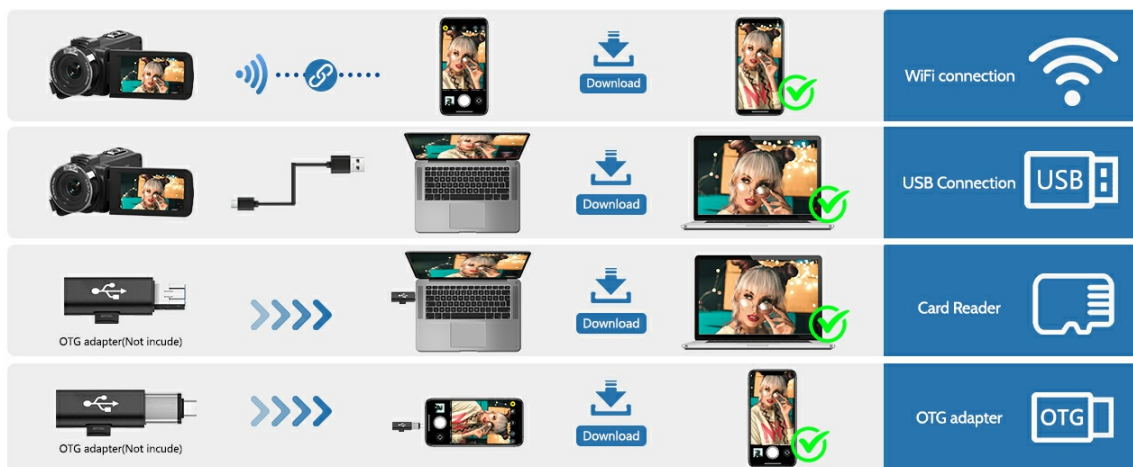 


Image: A person using the 2.4G remote control to operate the VETEK camcorder, demonstrating its long-range and wide-angle control capabilities.

6. ADVANCED FEATURES

6.1. Recording Functions

- **Loop Recording:** Continuously records, overwriting the oldest footage when the memory card is full.
- **Time-Lapse Recording:** Captures frames at set intervals to create a sped-up video.
- **Video Pause:** Allows you to pause and resume recording within a single video file.
- **Slow-Motion Recording:** Records video at a higher frame rate for slow-motion playback.

6.2. Photo Functions

- **Auto Photo:** Automatically takes photos at predefined intervals.
- **Continuous Photo:** Captures a burst of photos in quick succession.
- **Timed Photo:** Sets a timer before taking a photo, allowing you to get into position.

Vlogging camera with 18X Digital zoom

Whether the action is happening up close or afar the 18X DigitalZoom has you covered. Advanced image stabilization technology helps ensure that results can be captured with outstanding quality



Image: Demonstrations of time-lapse photography capturing a bird in flight and continuous shooting capturing moments with a baby.

7. CONNECTING TO OTHER DEVICES

7.1. WiFi Connection

The camcorder features built-in WiFi for wireless transmission to your smartphone or tablet.

1. Download the "**Hello Cam**" app from Google Play or the Apple App Store.
2. Enable WiFi on your camcorder and smartphone/tablet.
3. Connect your device to the camcorder's WiFi network.
4. Use the app for real-time image and video transmission, playback, and downloading.

PC Camera

Camera could work as a PC camera when you have a video call with your families or friends, and live streaming with social media



HDMI output

The HDMI port allows for seamless connection to external monitors or TVs, the item does not include HDMI cable. any mini HDMI cable will work with this camera

Image: The camcorder wirelessly connected to a smartphone via WiFi, displaying live footage on the phone screen.

7.2. Webcam Function

The camcorder can function as a webcam for live streaming on platforms like YouTube and Skype.

1. Connect the camcorder to your computer using the USB cable.
2. Select "Webcam Mode" on the camcorder's screen (if prompted).

3. Your computer should recognize the camcorder as a webcam. Select it in your video conferencing or streaming software.

7.3. HDMI Output

Connect the camcorder to an HDTV or monitor to view your photos and videos on a larger screen.

- Use an HDMI cable (not included) to connect the camcorder's HDMI port to your TV/monitor's HDMI input.
- Select the correct HDMI input on your TV/monitor.



Image: The camcorder demonstrating its HDMI output functionality by displaying content on a large monitor, and its use as a webcam connected to a laptop.

7.4. Downloading Photos and Videos

There are several methods to transfer your media files:

- **WiFi Connection:** Use the "Hello Cam" app to download files directly to your smartphone or tablet.
- **USB Connection:** Connect the camcorder to your computer via USB cable. The camcorder will appear as a removable disk, allowing you to copy files.
- **Card Reader:** Remove the SD card from the camcorder and insert it into a compatible card reader connected to your computer.
- **OTG Adapter:** Use an OTG adapter (not included) to connect the SD card (via a card reader) or the camcorder directly to an OTG-compatible smartphone or tablet.



Image: An illustration detailing four methods for downloading photos and videos: WiFi connection, USB connection, using a card

reader, and using an OTG adapter.

8. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Storage:** Store the camcorder in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Fully charge batteries before use. Avoid overcharging or completely draining them.
- **SD Card Care:** Format the SD card periodically to maintain optimal performance. Back up important data regularly.
- **Avoid Impacts:** Protect the camcorder from drops and impacts, which can damage internal components.

9. TROUBLESHOOTING

If you encounter issues with your camcorder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Camcorder does not power on.	Low or dead battery; incorrectly inserted battery.	Charge the batteries fully. Ensure batteries are inserted with correct polarity.
Cannot record video/take photos.	SD card full or not inserted; incorrect mode selected.	Insert or replace SD card. Ensure sufficient space. Select the correct mode (video/photo).
Poor image/video quality.	Dirty lens; insufficient lighting; incorrect settings.	Clean the lens. Use IR Night Vision in low light. Adjust exposure/ISO settings.
WiFi connection issues.	Incorrect app; camcorder WiFi not enabled; distance too far.	Ensure "Hello Cam" app is installed. Enable WiFi on camcorder. Stay within range.
Remote control not working.	Remote battery low; obstruction; out of range.	Replace remote battery. Ensure clear line of sight. Stay within 50 feet.
Touch screen unresponsive.	Temporary software glitch; screen protector interference.	Restart the camcorder. Ensure screen is clean and free of debris. If issue persists, contact support.

10. SPECIFICATIONS

Below are the technical specifications for the VETEK 6K 64MP Video Camera Camcorder Model A10:

- **Brand:** VETEK
- **Model Number:** A10
- **Video Capture Resolution:** 6K (UHD 6K & 30FPS), also supports 4.7K, 4K, 5K, 8K
- **Still Image Resolution:** 64MP
- **Photo Sensor Technology:** CMOS
- **Digital Zoom:** 18X
- **Screen:** 3.0-inch IPS Touch Screen, 270° Rotatable
- **Special Features:** IR Night Vision, WiFi Function, Webcam Function, 2.4G Remote Control, Loop Recording, Time-Lapse, Video Pause, Slow-Motion, Auto Photo, Continuous Photo, Timed Photo

- **Connectivity:** USB, HDMI
- **Flash Memory Type:** SD Card (32GB included)
- **Video Capture Format:** MP4
- **Supported Audio Format:** MP3, PCM
- **Item Weight:** 1.34 pounds
- **Product Dimensions:** 5.1 x 2.3 x 2.1 inches
- **Batteries:** 2 D batteries required (included) - *Note: Product images suggest smaller rechargeable camera batteries. Please refer to actual product for battery type.*

11. WARRANTY AND SUPPORT

VETEK is committed to providing quality products and customer satisfaction.

- **Return Policy:** All products are eligible for a free return within 30 days of purchase.
- **Customer Service:** For any questions, technical assistance, or warranty claims, please contact VETEK customer support.

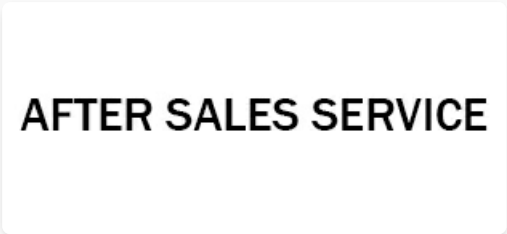 
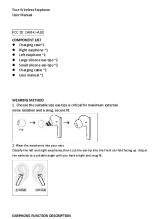 
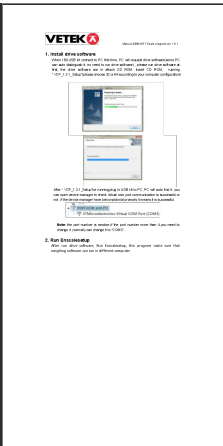 
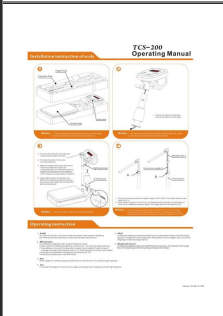 
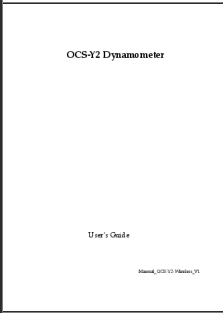 



Image: A graphic indicating the availability of 24-hour customer service.

Related Documents - A10

	A10 True Wireless Earphone User Manual User manual for the A10 True Wireless Earphone, including component list, wearing method, function description, charging case usage, LED indicators, pairing instructions, specifications, and safety rules.
	A10 Car Smart Screen User Manual Comprehensive user manual for the A10 Car Smart Screen, detailing installation, connection methods, features like Apple CarPlay and Android Auto, troubleshooting tips, product specifications, and optional dashcam/reverse camera functions.
	Vetek Load Cell Troubleshooting Guide A technical guide from Vetek detailing how to troubleshoot load cells using visual inspection and electrical tests with a digital multimeter. Covers zero balance, bridge integrity, insulation resistance, and shock resistance.

	VETEK EBW-ERT Scale Program Manual: Installation and Operation Guide Comprehensive guide to installing and operating the VETEK EBW-ERT Scale program (version 1.3.1). Learn how to connect the scale, install drivers, and use the data collection and analysis software for weighing operations.
	Vetek TCS-200 Person Scale: Operating Manual & Installation Guide Comprehensive guide for the Vetek TCS-200 person scale, covering installation, operation, error codes, maintenance, and settings. Learn to use your digital weighing and BMI scale effectively.
	OCS-Y2 Dynamometer User's Guide - Accurate Force Measurement Comprehensive user guide for the OCS-Y2 Dynamometer, detailing its features, specifications, operation, and maintenance. Learn how to use this accurate and reliable force measurement device.

 Documents - VETEK – A10

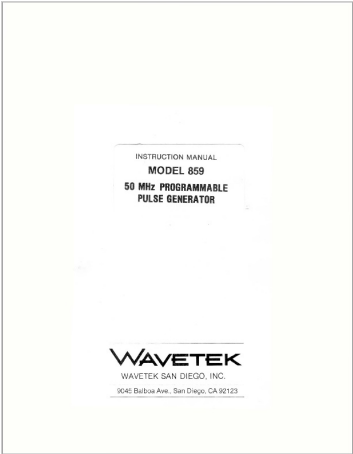

[\[pdf\]](#) User Manual Specifications Warranty

50 MHz PROGRAMMABLE PULSE GENERATOR Page 1 INSTRUCTION MANUAL MODEL 859 W
AVETEK pro grammed Table 1-1 Pulse Output Specifications High Impedance Programmable Generator
Instruction Manual 198511 bitsavers trailing edge test equipment wavetek |||
INSTRUCTION MANUAL MODEL 859 50 MHz PROGRAMMABLE PULSE
GENERATOR W AVETEK WAVETEK SAN DIEGO, INC. 90 ... Level: D Press
CURSOR and select MSD. Press VERNIER I until error occurs 5 Reprogram levels:
A10DOI 6 Normal/Complemen Output Width: N3E-4 Function: COI 7 Complement
Output: OH 8 Outpu...
lang:en **score:31** filesize: 16.8 M page_count: 167 document date: 2024-07-27




[\[pdf\]](#) User Manual Specifications Warranty

859 50 MHz Programmable Pulse Generator Instruction Manual 198511859 198511bitsavers.org test equipment wavetek 198511 |||

INSTRUCTION MANUAL MODEL 859 50 MHz PROGRAMMABLE PULSE GENERATOR W AVETEK WAVETEK SAN DIEGO, INC. 90 ... Level: D Press CURSOR and select MSD. Press VERNIER I until error occurs 5 Reprogram levels: **A10**DOI 6 Normal/Complemen Output Width: N3E-4 Function: COI 7 Complement Output: OH 8 Outpu...

 lang:en score:30 filesize: 16.8 M page_count: 167 document date: 2024-07-27

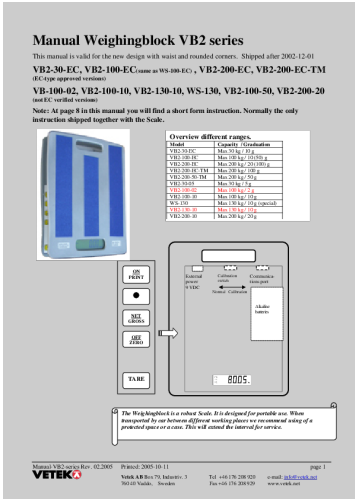


[\[pdf\]](#) User Manual

Utvecklingschef Diverse Vetek AB Patrik Viktorsson MANUAL VB2 vetek 80 Dynamics Documents a5862c61 09cd 4fdc b535 4a4556294294

Manual Weighingblock VB2 series This manual is valid for the new design with waist and rounded corne ... f 15 separate menu selections, each with its own sub-menu of choices. The User menu, except A5 and **A10** containing most of the indicator s serial communication parameters, which not are shown in this ...

 lang:en score:30 filesize: 210.01 K page_count: 9 document date: 2005-10-11

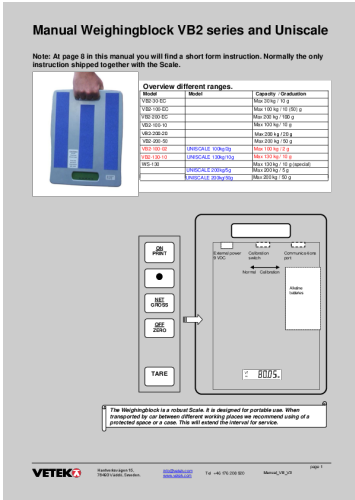


[\[pdf\]](#) User Manual

Manual Weighingblock VB2 series and Uniscale Clima Direct Veteks new of Weighingblocks are rugged digital scale casted in strong aluminum It comes standard with a large 75 LCD manual vetek climadirect documenten |||

Manual Weighingblock VB2 series and Uniscale Note: At page 8 in this manual you will find a short f ... f 15 separate menu selections, each with its own sub-menu of choices. The User menu, except A5 and **A10** containing most of the indicator s serial communication parameters, which not are shown in this ...

 lang:en score:30 filesize: 363.67 K page_count: 9 document date: 2020-09-25

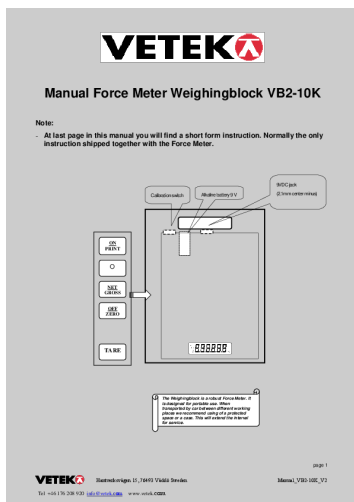


[\[pdf\]](#) User Manual Specifications

Utvecklingschef Manualer komplette tekniska Diverse Patrik Viktorsson Manual VB2 10K V2 ENG Force Meter Weighingblock Buy 10000 2daN or 22500 5lbf from Vetek here vetek Dynamics Documents 4c547fee 5735 49fd a569 0f42a1f22cdf |||

Manual Force Meter Weighingblock VB2-10K Note: - At last page in this manual you will find a short f ... of 15 separate menu selections, each with its own sub-menu of choices. The User menu, except A5 and **A10** containing most of the indicator s serial communication parameters which not are shown in this m...

 lang:en score:28 filesize: 335.44 K page_count: 8 document date: 2019-07-04

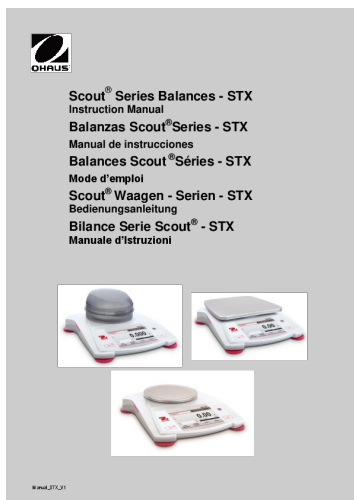


[\[pdf\]](#) User Manual

Instruction Manual Gardner STX V1 Köp Scout 620g 0 1g Ohaus från Vetek här vetek se Dynamics Documents f5790553 9c12 4cdd 9a3f 7d58af70a6d2 |||

Scout Series Balances - STX Instruction Manual Balanzas ScoutSeries - STX Manual de instrucciones Ba ... ca de Cristal Liquido LCS 109 mm / 4.3 pulgadas diagonal funcionamiento operativo 10 C a 40 C **a10** a 80 Humedad relativa, sin condensaci n especifico Condiciones de almacenamiento -20 C a 55...

 lang:en score:28 filesize: 5.63 M page_count: 240 document date: 2019-08-06

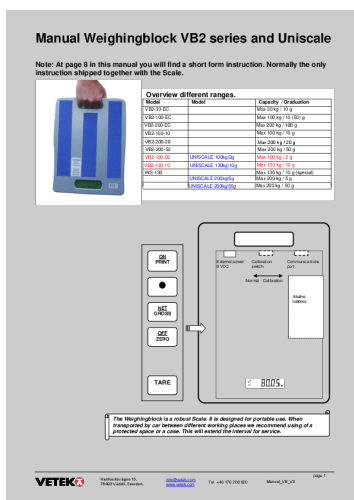


[\[pdf\]](#) User Manual

Utvecklingschef Manualer komplette tekniska Diverse Patrik Viktorsson Manual Weighingblock VB2 series and Uniscale vetek VB V3 ENG page 1 Hantverkarsvägen 15 76493 Vaddö Sweden Tel 46 176 208 920 info@vetek Buy 200kg 20g from Vetek here Dynamics Documents dfe10ad6 8a86 4bb2 bf64 894ef3877a00 |||

Manual Weighingblock VB2 series and Uniscale Note: At page 8 in this manual you will find a short f ... f 15 separate menu selections, each with its own sub-menu of choices. The User menu, except A5 and **A10** containing most of the indicator s serial communication parameters, which not are shown in this ...

 lang:en score:28 filesize: 441.62 K page_count: 9 document date: 2020-09-14

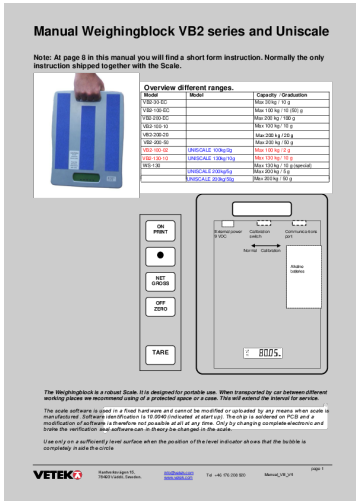

[pdf] User Manual

Utvecklingschef Manualer komplette tekniska Diverse Patrik Viktorsson Ladda ner Vågblock 200kg 50g Personvågsutförande Vetek manual vb v4 eng vetek se dynamics WebFiles document dfe10ad6 8a86 4bb2 bf64 894ef3877a00 |||

Manual Weighingblock VB2 series and Uniscale Note: At page 8 in this manual you will find a short f ... f 15 separate menu selections, each with its own sub-menu of choices. The User menu, except A5 and **A10** containing most of the indicator s serial communication parameters, which not are shown in this ...

lang:en score:28 filesize: 332.78 K page_count: 8 document date: 2025-02-19




[pdf] User Manual Specifications Declaration of Conformity

Microsoft Word Manual TI 1200 Rev 02 2002 doc Olle Viktorsson Ladda ner Golvvåg 1200x1500mm 3000kg 0 2kg Vetek ENG vetek se dynamics webfiles document 608d62ca f059 4ab2 ba4c ab891a670395 |||

COMPLETE MANUAL WEIGHING INDICATOR TI-1200 and TI-1200-S TI-1200 with rechargeable battery. TI-1200 ... Enable lb/kg Key 01 A6 Serial Port Mode A7 ID No. Enable A8 ID No. Entry A9 No. of Line Feeds **A10** Auto Power Off 01 01 Press ZERO key to begin Press ZERO key to begin OFF 1 2 3 5 8 10 15 20...

 lang:en score:27 filesize: 414.84 K page_count: 18 document date: 2004-02-23

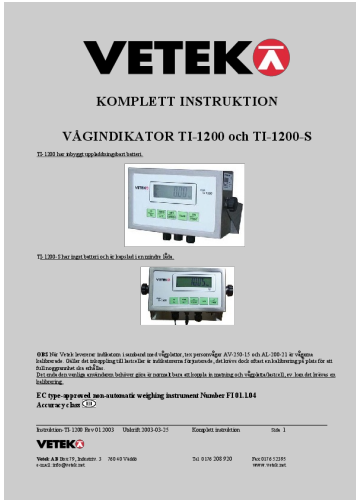

[pdf] User Manual Declaration of Conformity

Microsoft Word Instruktion TI 1200 Rev 01 2003 doc Olle Viktorsson Manual SWE vetek se Dynamics Documents dcd26d2d ed6b 4e29 84c0 248cfedb2d1e |||

KOMPLETT INSTRUKTION VGINDIKATOR TI-1200 och TI-1200-S TI-1200 har inbyggt uppladdningsbart batteri. ... Enable lb/kg Key 01 A6 Serial Port Mode A7 ID No. Enable A8 ID No. Entry A9 No. of Line Feeds **A10** Auto Power Off 01 01 Press ZERO key to begin Press ZERO key to begin OFF 1 2 3 5 8 10 15 20...


lang:no score:27 filesize: 419.94 K page_count: 19 document date: 2003-03-25

[pdf] User Manual Instructions

MB62 Moisture Analyzer Instruction Manual Vetek ScalesEN 23 Treating the sample during drying
Occasionally following OHAUS offers this possibility in manual operating mode Such Manual V1
ENGvetek en dynamics WebFiles document 4300830c 098f 43d7 b071 48a45ff23062 ENG srslltd
AfmBOOpKCRxRc MHLRwy6Q8rJPhyTo0VyUo29vAgpBBhSyZEChTgTM a ENGManual avetek
AfmBOOpsLTTq1FhO1MCA6OKaiBd 4O4egQbEIAXioZOsBFL1XS63FYRPP
4O4egQbEIAXioZOsBFL1XS63FYRPPvetek
AfmBOOpjQOIhFhBcHPQHui2TRirfAvXttJ8CIPCoFuz34kRbRIJltHwXo
AfmBOOpjQOIhFhBcHPQHui2TRirfAvXttJ8CIPCoFuz34kRbRIJltHwXovetek
AfmBOorwZia0XBhQQe7oUrV7xoeE7LuX8nZRfJp3Y kGQNPnVOBI 38 38vetek
AfmBOOp7GJf8RDNLrANzFg6Hx1s8yyWFBogum zsp7XaKfRY3uFsRWI6 zsp7XaKfRY3uFsRWI6vetek
AfmBOoo5XP9WMP2knkP12zJmlBjl2FKm8KYclktwlgkluZ0dGmRQAgR4
AfmBOoo9ujRkgK2hDFj5n4OTfEcZURXUgBY1K5ayKrxTuYoMGShJl7B0vetek
AfmBOor0J8ymdBfP2yylOfq6x3YLc3 ZatWPlwa4SnITZxojNfI9AJ9pvetek ||| ||| MB62 Moisture Analyzer
Instruction Manual Manual_MB62_V1 ENG Version History Date 2024/6/10 Version A 2024/9/11 B
Description Initial Release Updated the Password Protection section Add instructions of working with
Bluetooth Printer SF40A/B ||| MB62 Moisture Analyzer Instruction Manual Manual_MB62_V1 ENG
Version History Date 2024/6/10 Version A 2024/9/11 B Description Initial Release Updated the Password
Protection section Add instructions of working with Bluetooth Printer SF40A/B ||| MB62 Moisture Analyzer
Instruction Manual Manual_MB62_V1 ENG Version History Date 2024/6/10 Version A 2024/9/11 B
Description Initial Release Updated the Password Protection section Add instructions of working with
Bluetooth Printer SF40A/B ||| MB62 Moisture Analyzer Instruction Manual Manual_MB62_V1 ENG
Version History Date 2024/6/10 Version A 2024/9/11 B Description Initial Release Updated the Password
Protection section Add instructions of working with Bluetooth Printer SF40A/B ||| MB62 Moisture Analyzer
Instruction Manual Manual_MB62_V1 ENG Version History Date 2024/6/10 Version A 2024/9/11 B
Description Initial Release Updated the Password Protection section Add instructions of working with
Bluetooth Printer SF40A/B ||| MB62 Moisture Analyzer Instruction Manual Manual_MB62_V1 ENG
Version History Date 2024/6/10 Version A 2024/9/11 B Description Initial Release Updated the Password
Protection section Add instructions of working with Bluetooth Printer SF40A/B ||| MB62 Moisture Analyzer
Instruction Manual Manual_MB62_V1 ENG Version History Date 2024/6/10 Version A 2024/9/11 B
Description Initial Release Updated the Password Protection section Add instructions of working with
Bluetooth Printer SF40A/B

MB62 Moisture Analyzer Instruction Manual Manual_MB62_V1 ENG Version History
Date 2024/6/10 Ver ... h-off criterion is inactive during the first 30 seconds. Auto Shut
Off Options of Auto Shut Off: **A10** - Less than 1mg loss in 10 seconds, used for
samples which dry very quickly surface moisture o...

 lang:en score:27 filesize: 13.43 M page_count: 69 document date: 2024-11-21



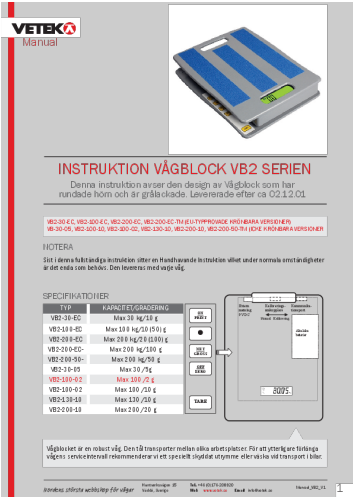


[pdf] User Manual

Download Universal portable scale 200kg 100g Vetek Manual VB2 V1 SWE vetek en dynamics webfiles
document aec0aeb9 7a1c 4024 91df 927e06c98a6a |||

Manual INSTRUKTION VGBLOCK VB2 SERIEN Denna instruktion avser den design
av Vgblock som har rundade ... om helst. Vilket vrde som helst. Tryck p ZERO fr att
brja. F17 Maxkalibrering A5 Displayfunktion **A10** Auto power off Maxkalibrering. Stega
vidare ZERO fr att pbrja proceduren. Stnger lb/kg knappen ...

   lang:no score:27 filesize: 446.03 K page_count: 9 document date: 2019-07-02

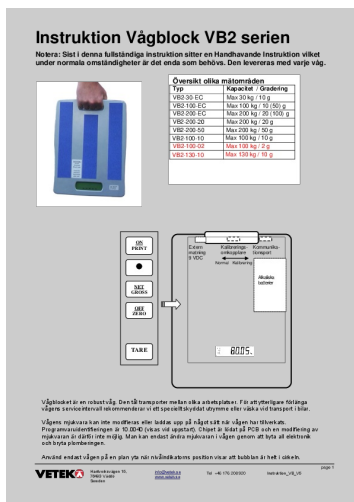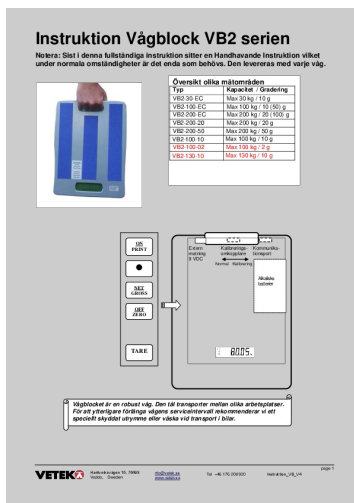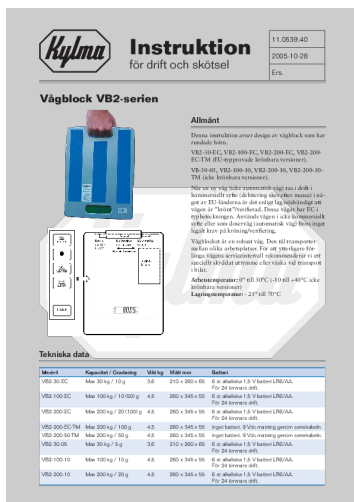

[\[pdf\]](#) Instructions

11 0539 40 Vågblock VB2serien indd Vetek Instructions vagblock SE Våg VB2 100 10 1746518 kylma se
media 91 52 02 1696860763 |||

Instruktion fr drift och sktsel 11.0539.40 2005-10-28 Ers. Vgblock VB2-serien Allmnt
Denna instru ... elar F10 Decimalkomma F11 Doserfunktion F16 Nollkalibrering F17
Maxkalibrering A5 Displayfunktioner **A10** Auto power off Beskrivning Anger
vgblockets skaldelar ver hela viktsomrdet. Frstrkningen r rela...

lang:no score:26 filesize: 674.39 K page_count: 6 document date: 2005-10-28

[pdf]

Utvecklingschef Manualer komplette tekniska Diverse Patrik Viktorsson Download Weighingblock 200kg
50g Personal scale Vetek Instruktion VB V4 SWE vetek en dynamics webfiles document f68de973 d20d
4a18 894b 751908aa8c26 |||

Instruktion Vgblock VB2 serien Notera: Sist i denna fullstndiga instruktion sitter en Handhavande In ... F3 osv., vardera med egen undermeny av olika valmjligheter. Anvndar Menyn Frutom parameter A5 och **A10** handlar det bara om seriell datakommunikation och det behandlas inte i denna instruktion. SETUP...



lang:no score:26 filesize: 420.52 K page count: 9 document date: 2020-09-14

[\[pdf\]](#)

Utvecklingschef Manualer komplette tekniska Diverse Patrik Viktorsson instruktion vb v5 swe vetek se
dynamics WebFiles document f68de973 d20d 4a18 894b 751908aa8c26 |||

Instruktion Vgblock VB2 serien Notera: Sist i denna fullständiga instruktion sitter en Handhavande In ... 2 F3 osv., vardera med egen undermeny av olika valmjligheter. Anvndar Menyn Frutom parameter A5 och **A10** handlar det bara om seriell datakommunikation och det behandlas inte i denna instruktion. SETUP...

  lang:no score:25 filesize: 373.04 K page count: 8 document date: 2025-02-20

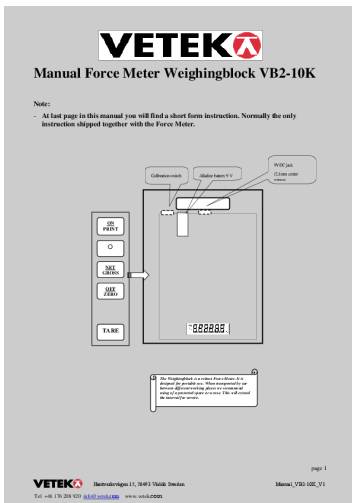

100kg 50g from here Hantverksvägen 15 76493 Vaddo Sweden Tel 46 0 176 208920 Web vetek Email
info@vetek Dynamics Documents a6bb6549 8dea 4f09 be9a 913c7d0f1d0e |||

Manual Weighingblock VB2 series and Uniscale Overview different ranges model VB2-30-EC VB2-100-EC ... 15 separate menu selections, each with its own sub-menu of choices. - The User menu; except A5 and **A10** contains most of the indicator's serial communication parameters, which are not shown in this ma...

lang:en score:25 filesize: 422 K page_count: 10 document date: 2019-07-02

[\[pdf\]](#) User Manual Specifications

Microsoft Word Manual VB2 10K Rev 01 2005 Patrik Viktorsson 3 Force Meter Weighingblock V1 ENG
vetek se Dynamics Documents 173b7404 ebb5 4980 8ecc f95cdc68377a |||

Manual Force Meter Weighingblock VB2-10K Note: - At last page in this manual you will find a short f ... of 15 separate menu selections, each with its own sub-menu of choices. The User menu, except **A5** and **A10** containing most of the indicator s serial communication parameters which not are shown in this m...

lang:en score:25 filesize: 178.16 K page_count: 8 document date: 2019-07-04

[\[pdf\]](#) User Manual Specifications Decleration of Conformity

Microsoft Word Manual TI 1200 Rev 02 2002 doc Olle Viktorsson MANUAL WEIGHING INDICATOR

1200Manual ENGvetek Dynamics Documents 608d62ca f059 4ab2 ba4c ab891a670395 ENG srsItd

AfmBOooJOmLODtCDf4FTK9Kk3 BjgGoiLWfwzneiZ1LbgZsWi9QVqHWT 1200MANUAL ENGManual

BigGoiLWfwzneiZ1LbgZsWi9QVqHWTvetek AfmBOoo2orSP6S4LpZYIMz WveHFZJRCwHm5vP8

bn2X3aRtpENTXQ7 bn2X3aRtpENTXQ7vetek AfmBOopLjqNChcJGCjpEJLtP9E4QtcQCmxCNZso0Z9m

2HyJ3UPuIPmi 2HyJ3UPuIPmivetek AfmBOopKLJl1d7ihU

10kgQWBa1MSwVitcwZDgltEPYFoKqFDwjxfa3F |||

COMPLETE MANUAL WEIGHING INDICATOR TI-1200 and TI-1200-S TI-1200 with

rechargeable battery. TI-1200 ... Enable lb/kg Key 01 A6 Serial Port Mode A7 ID No.

Enable A8 ID No. Entry A9 No. of Line Feeds **A10** Auto Power Off 01 01 Press ZERO

key to begin Press ZERO key to begin OFF 1 2 3 5 8 10 15 20...

lang:en score:23 filesize: 414.85 K page count: 18 document date: 2004-02-23



[\[pdf\]](#) User Manual Declaration of Conformity

Microsoft Word TI 500SL UG 12 doc Jon Manual V1 K p Balkv g 3000kg 0 1kg fr n Vetek h r vetek se


Dynamics Documents 383183e1 5c49 456b 9942 d0b1d8096523 |||

DIGITALWEIGHT INDICATOR Setup / Operation Manual Manual_TI-500SL_V1

Hantverkssvgen 15 76493 Vdd, Sw ... 6 is set to 1 . Pressing the ZERO/OFF key to scroll down one level begins the sequence. 0 - 99 8 **A10** Auto Power Off Period

Selects the automatic power off time in minutes indicator must be inactiv...

 lang:i-klington **score:22** filesize: 564.21 K page_count: 20 document date: 2019-05-21

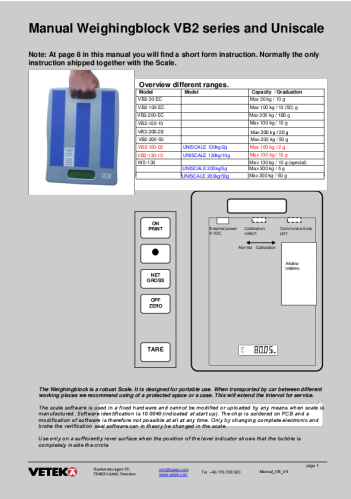

[\[pdf\]](#) User Manual

Utvecklingschef Manualler komplette tekniska Diverse Patrik Viktorsson DownloadWeighingblock EU type

approved 200kg 1kg Vetekmanual vb v4 engvetek en dynamics WebFiles document dfe10ad6 8a86 4bb2

bf64 894ef3877a00 manual eng |||

Manual Weighingblock VB2 series and Uniscale Note: At page 8 in this manual you will find a short f ... f 15 separate menu selections, each with its own sub-menu of choices. The User menu, except A5 and **A10** containing most of the indicator s serial communication parameters, which not are shown in this ...

lang:en **score:22** filesize: 332.79 K page_count: 8 document date: 2025-02-19



[\[pdf\]](#) User Manual Declaration of Conformity

Microsoft Word TI 500SL UG 12 doc Jon DIGITALWEIGHTINDICATOR Setup Operation Manual Vetek

ScalesThe 500 SL indicator has been designed to operate from 10 VDC and Transcell recommends

having your weighing equipment checked by a Manual V1vetek Dynamics Documents 383183e1 5c49

456b 9942 d0b1d8096523 V1 srsltid AfmBOopKE5aMGLv69nsL6fRcYJ Qpu 2LC4rqskz6rbM0FO

iUcXqBHR |||

DIGITALWEIGHT INDICATOR Setup / Operation Manual Manual_TI-500SL_V1

Hantverkssvgen 15 76493 Vdd, Sw ... 6 is set to 1 . Pressing the ZERO/OFF key to scroll down one level begins the sequence. 0 - 99 8 **A10** Auto Power Off Period

Selects the automatic power off time in minutes indicator must be inactiv...

lang:i-klington **score:20** filesize: 564.22 K page_count: 20 document date: 2019-05-21



[\[pdf\]](#) User Manual

Ladda nerLadda nerUniversalvåg portabel 100kg 50g VetekUniversalvåg 200kg 100g VetekManual VB2 V1 ENGManual ENGvetek se dynamics webfiles document a6bb6549 8dea 4f09 be9a 913c7d0f1d0e

Manual WebFiles ENG WeiGhINGBloCk SeRIeS ANd UNISCAle Vetek ScalesLadda nerVB2 30 eC max
kg 10 g 100 50 200 20 Tm TmUniversalvåg Dynamics Documents srsItd

AfmBOooevKdmN5tHETPwGe9ZcOFmtylgCqKYC JDSAMS9DojEfQ7SLafvetek ScalesWeiGhINGBloCk
TmThe Weighingblocks are suitable for use in various weighing applications such as the of refrigeration
cylinders fire protection CO2 Universalvåg AfmBOoqLJj7DBRlrJRV740 STslphkz

buwksT6Q2YIYc7daCJuMpiZvetek Scalesvetek 1Ladda Vetek EC HVAC BRL100 weegschaal robuuste
ERC geijkte weegsch — Installatiegilde nUniversalvåg AfmBOooeqKUZ4TObgHjgWfXd

HBF4nxwflKcygC0Z3noLknlOjbWVAm3 utm source chatgptvetek |||

Manual Weighingblock VB2 series and Uniscale Overview different ranges model VB2-30-EC VB2-100-EC ... 15 separate menu selections, each with its own sub-menu of choices. - The User menu; except A5 and **A10** contains most of the indicator's serial communication parameters, which are not shown in this ma...

lang:en score:20 filesize: 422 K page_count: 10 document date: 2019-07-02

Service Manual Indicator JIK-6	Page 1
Chapter I Basic Introduction	
1-1 Dimension	1
1-2 Cross-reference List of Parts	1
1-3 Product Specification Sheet	2
Chapter II Parameter Function Setting	
2-1 General Parameter Setting	3
2-2 Advanced Parameter Setting	5
2-3 Weighing Capacity, Tareed Weight Setting and Weight Calibration	7
Chapter III Various Assemblies and Related Illustrations	
3-1 Back Cover Assembly and Disassembly	9
3-2 Installation of Additional Board	9
3-3 Wiring Cross-reference Chart	9
3-4 Illustration of Connect of Additional Board	12
Chapter IV Troubleshooting	
4-1 Preliminary Examination	13
4-2 Error Message and Troubleshooting	13
4-3 Summary Table of Error Message	16
Chapter V Structural Part of Platform Scale	
5-1 Connection of Metal Connectors	17
5-2 LAC Replacement Process	17
5-3 LAC-related Technology	16
Chapter VI Exploded Drawing and Cross-reference List of Parts	
6-1 JIK-6-CAB	20
6-2 JIK-6-C-30	21
6-3 JIK-6-CSN	22

Yiwu A.R.
Hangzhou Jik-6, 15, SHUI YUAN - Street,
72, 441510, 301500, Shaoxing, China, www.jik-6.com

Items: JIK6_EEA_1/1

[\[pdf\]](#) User Manual Troubleshooting Guide Specifications

Olle Viktorsson Vetek AB Service Manual JIK 6 V1 ENG Indicator Page Köp Vågindikator CAB 30 000 ext
delar OIML från här Hantverkarsvägen 15 76493 Väddö Sweden Tel 46176 208920 info@vetek vetek se


Dynamics Documents 9a8bf271 0aed 47a3 839b 24c6a44d8925 |||

Service Manual Indicator JIK-6 Page 1 Chapter I Basic Introduction 1-1 Dimension-----

----- ... when variation is within 2e-8e RS232-Receiving Port : One-way transmission output Selection **A10** Overview: To select one-way : Two-way transmission output/input or two-way transmission. ...

lang:en score:19 filesize: 1.46 M page count: 25 document date: 2019-11-13

 lang:no score:17 filesize: 953.89 K page_count: 4 document date: 2019-08-20

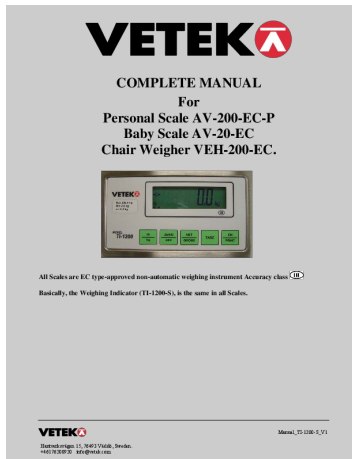


[\[pdf\]](#) User Manual Specifications

Cover transcell Download Chair Weigher 200kg 100g MDD approved class III Vetek Manual TI 1200 S V1

ENG vetek en dynamics webfiles document 079c188a b10c 4cd5 addc d1a9c424a6e4 |||

COMPLETE MANUAL For Personal Scale AV-200-EC-P Baby Scale AV-20-EC Chair Weigher VEH-200-EC. All Sca ... ration F2 Span gain 100 100 100 A5 Disable the lb/kg Key 0 0 0 F3 Zero Track Band 3 3 3 **A10** Auto power off oFF oFF 2 F4 Zero range F5 Motion Band 20 2 EC-v. 21 2 EC-v. 1,9 1 3 ...

 lang:en **score:17** filesize: 492.6 K page_count: 18 document date: 2019-08-20

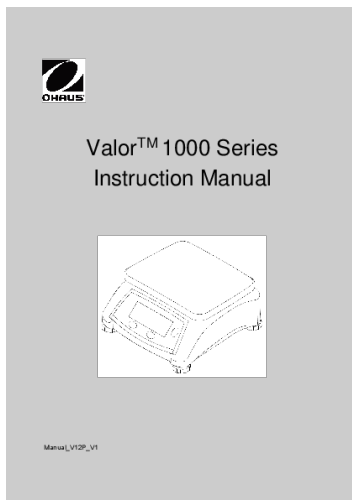


[\[pdf\]](#) User Manual

Qian YiMei Elena OHCT Download Compact scale Ohaus Valor 1000 3kg 1g Verified M Vetek Manual

V12P V1 ENG vetek en dynamics webfiles document 39d08c44 b894 484a 94ac ecd2793e145e |||

Valor™ 1000 Series Instruction Manual Manual_V12P_V1 Valor™ 1000 Series EN-1 Table of Content ... nce parameters. Light: Unit: Auto shut-off: End Off, On, Auto kg, g, lb, oz, lb:oz A00, A01, A05, **A10**, Off Exit menu Note: Units vary for different regions or models. Light L.I.G.H.t This sets t...

 lang:tl **score:17** filesize: 2.33 M page_count: 116 document date: 2020-01-27

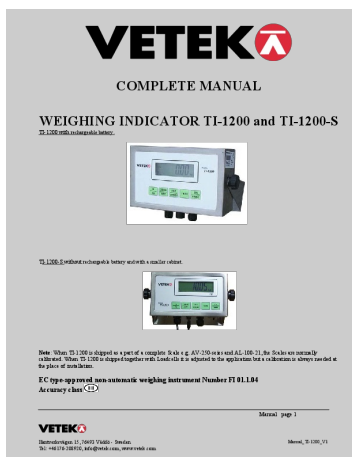

[\[pdf\]](#) User Manual Specifications Declaration of Conformity

Microsoft Word Manual TI 1200 Rev 02 2002 doc Olle Viktorsson Ladda ner Vågindikator S OIML Rostfri

Väggmontage Vetek V1 ENG vetek se dynamics webfiles document a99b5b60 f922 4f37 983e

3e53bee6f711 |||

COMPLETE MANUAL WEIGHING INDICATOR TI-1200 and TI-1200-S TI-1200 with rechargeable battery. TI-1200 ... Enable lb/kg Key 01 A6 Serial Port Mode A7 ID No. Enable A8 ID No. Entry A9 No. of Line Feeds **A10** Auto Power Off 01 01 Press ZERO key to begin Press ZERO key to begin OFF 1 2 3 5 8 10 15 20...

lang:en **score:16** filesize: 436.59 K page_count: 18 document date: 2019-11-13



ÁLLÓ VENTILÁTOR
STANDA FAN

AR5S41PBT



[pdf] User Manual

AR5S41PBTARDES AR5S41PBT hasznalati utasitas HUN ENGardesshop hu documents Ardes user manual ARDES ENG srsltid AfmBOooe1EEEm3QJumfBbipsx9w3UseSQflEbJrlzzqIkRLN8aXaV1N0 ||| IT ISTRUZIONI PER L USO EHNU IHNASSTZRNU CLTAIOTNI STFMOURTAUTS E FERN MINOSTDREUDC TEIO ... 1 A 7 9 B 5 10 6 11 12 13 14 15 16 17 18 19 70 20 A2 A4 A3 A5 A1 A8 A6 A9 A7 21 **A10** 71 A11 A12 A13 A14 A15 A16 A17 72 22 A18 A19 A20 73 23 Import r: MULTIKOMPLEX BUDAPEST KF...

lang:no **score:16** filesize: 2.21 M page_count: 24 document date: 2024-05-22



MB32 Moisture Analyzer Instruction Manual



Manual_MB32_V1 ENG

[pdf] User Manual Instructions

Ladda ner Fukthaltsvåg MB32 med kolfibervärmare 90g 1mg 4 LCD 2 torkprofiler Vetek Manual V1 ENG vetek se dynamics WebFiles document 712eb317 5fe7 455d bf38 79976404e348 |||

MB32 Moisture Analyzer Instruction Manual Manual_MB32_V1 ENG Version History Date 2024/6/10 Ver ... h-off criterion is inactive during the first 30 seconds. Auto Shut Off Options of Auto Shut Off: **A10** - Less than 1mg loss in 10 seconds, used for samples which dry very quickly surface moisture o...

lang:en **score:16** filesize: 8.6 M page_count: 57 document date: 2024-11-21



Scout® Series Balances - SKX
Instruction Manual
Balanzas Scout® - SKX Series
Manual de Instrucciones
Balances Scout® Série - SKX
Mode d'emploi
Balance Serie Scout® - SKX
Manuale d'istruzioni
Scout® Waagen-Serien - SKX
Bedienungsanleitung




Manual_SKX_V1

[pdf] User Manual Instructions

Nav XT User Manual olesen 1 SKX V1 Buy Scout 120g 0 001g Ohaus from Vetek here vetek Dynamics Documents 4d9e6dcb b0c6 4eb6 a681 15c475d4379d |||

Scout Series Balances - SKX Instruction Manual Balanzas Scout- SKX Series Manual de Instrucciones Ba ... Determinaci n de la densidad,Pesaje de Mol 80 horas 120 horas 80 horas 120 horas 10 C a 40 C **a10** a 80 Humedad relativa, sin condensaci n - 20 C a 55 C **a10** a 90 Humedad relativa, sin condens...

 lang:en **score:16** filesize: 3.54 M page_count: 86 document date: 2019-08-06

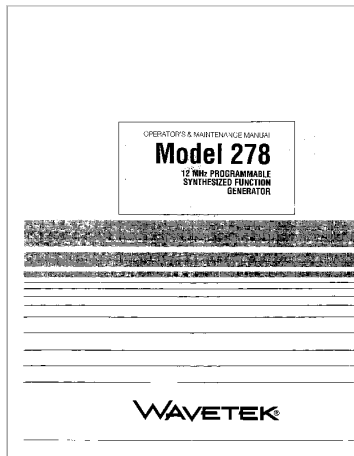

[\[pdf\]](#) User Manual Specifications Warranty


Wavetek Model 278 12 MHz Programmable Synthesized Function Generator Test Equipment

Manuals Wavetek Operators Manual gbppr net test Manual |||

OPERATORIS MAINTENANCE MANUAL Model 278 1-t-liHz PROGRAMMABLE SYNTHESIZED FUNCTION GENERATOR VVAVE ... ION, OPERATION, AND MAINnNANCE WITHOUT WRITTEN AUTHORIZATION. weo AUXILLARY

=VNCTION BOARD ASSY **A10** -2.0P26 THRU TY-WRAP // --, ----or--J 1----: : :J,, J
I. = -. ,_.. I I ...

 lang:en **score:14** filesize: 9.35 M page_count: 147 document date: 2013-08-06

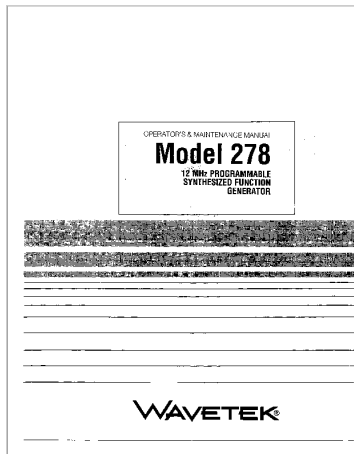

[\[pdf\]](#) User Manual Specifications Warranty

OPERATORIS MAINTENANCE MANUAL Model 278 Manual Revision 1 90 Part Number 1300 00 0185

Instrument 1000 ii WARRANTY Wavetek warrants that all products manufactured by conform to published specifications and are free from defects in materials workmanship for a period of one year the date delivery when used under normal 278 Operators qsl net n9zia test

OPERATORIS MAINTENANCE MANUAL Model 278 1-t-liHz PROGRAMMABLE SYNTHESIZED FUNCTION GENERATOR VVAVE ... ION, OPERATION, AND MAINnNANCE WITHOUT WRITTEN AUTHORIZATION. weo AUXILLARY

=VNCTION BOARD ASSY **A10** -2.0P26 THRU TY-WRAP // --, ----or--J 1----: : :J,, J
I. = -. ,_.. I I ...

lang:en **score:14** filesize: 9.35 M page_count: 147 document date: 2013-08-06



[\[pdf\]](#)

ANVÄNDAR INSTRUKTION STOLVÅG VEH 200 EC Vågen är klar att använda Användainstruktioner tryggsaker se upload |||

ANVNDAR INSTRUKTION STOLVG VEH-200-EC VEH-200-EC r krn / verifierbar och kalibrerad 200 kg / 100 g ... r mrkt TI-1200 eller den nya vita indikatorn tryck ON ka eller TARE minska till displayen visar **A10**. 5. Tryck ZERO fr att visa vrdet i minuter. Str det inte p 2 eller enligt egen nskan s tryck p O...

lang:da **score:12** filesize: 225.04 K page_count: 4 document date: 2021-02-26

BA
QUALITY

Features	Technical data
- Easy to use. All primary functions have their own key on the keypad - Compact size, practical for small spaces - Capacity display: A bargraph display lights up to show how much of the weighing range is still available - Level indicator and leveling feet for precise leveling of the scale, fitted as standard, to give the most accurate weighing result - Draught shield standard for models with weighing plate size 80 and 80 kg weighing space	- Backlit LCD display, digit height 15 mm - Dimensions weighing surface, Stainless Steel 80 x 80 mm 80 x 120 mm 80 x 120 x 150 mm, see larger picture - Overall dimensions WxDxH 210 x 310 x 90 (without draught shield) - Net weight approx. 2,5 kg - Permissible ambient temperature 15 °C/20 °C

Technical data

- Easy to use. All primary functions have their own key on the keypad
- Compact size, practical for small spaces
- Capacity display: A bargraph display lights up to show how much of the weighing range is available
- Level indicator and levelling feet for precise levelling of the scale, fitted as standard, to give the most accurate weighing result
- Draught shield standard for models with weighing plate size 80 x 80, weighing space 100 x 100 mm
- Backlit LCD display, digit height 17 mm
- Dimensions: display, 215 x 155 mm
- Φ = 80 mm
- Φ = 120 mm
- Φ = 150 mm
- Φ = 190 mm
- Φ = 250 mm
- Φ = 300 mm
- Φ = 350 mm
- Φ = 400 mm
- Φ = 450 mm
- Φ = 500 mm
- Φ = 550 mm
- Φ = 600 mm
- Φ = 650 mm
- Φ = 700 mm
- Φ = 750 mm
- Φ = 800 mm
- Φ = 850 mm
- Φ = 900 mm
- Φ = 950 mm
- Φ = 1000 mm
- Φ = 1050 mm
- Φ = 1100 mm
- Φ = 1150 mm
- Φ = 1200 mm
- Φ = 1250 mm
- Φ = 1300 mm
- Φ = 1350 mm
- Φ = 1400 mm
- Φ = 1450 mm
- Φ = 1500 mm
- Φ = 1550 mm
- Φ = 1600 mm
- Φ = 1650 mm
- Φ = 1700 mm
- Φ = 1750 mm
- Φ = 1800 mm
- Φ = 1850 mm
- Φ = 1900 mm
- Φ = 1950 mm
- Φ = 2000 mm
- Φ = 2050 mm
- Φ = 2100 mm
- Φ = 2150 mm
- Φ = 2200 mm
- Φ = 2250 mm
- Φ = 2300 mm
- Φ = 2350 mm
- Φ = 2400 mm
- Φ = 2450 mm
- Φ = 2500 mm
- Φ = 2550 mm
- Φ = 2600 mm
- Φ = 2650 mm
- Φ = 2700 mm
- Φ = 2750 mm
- Φ = 2800 mm
- Φ = 2850 mm
- Φ = 2900 mm
- Φ = 2950 mm
- Φ = 3000 mm
- Φ = 3050 mm
- Φ = 3100 mm
- Φ = 3150 mm
- Φ = 3200 mm
- Φ = 3250 mm
- Φ = 3300 mm
- Φ = 3350 mm
- Φ = 3400 mm
- Φ = 3450 mm
- Φ = 3500 mm
- Φ = 3550 mm
- Φ = 3600 mm
- Φ = 3650 mm
- Φ = 3700 mm
- Φ = 3750 mm
- Φ = 3800 mm
- Φ = 3850 mm
- Φ = 3900 mm
- Φ = 3950 mm
- Φ = 4000 mm
- Φ = 4050 mm
- Φ = 4100 mm
- Φ = 4150 mm
- Φ = 4200 mm
- Φ = 4250 mm
- Φ = 4300 mm
- Φ = 4350 mm
- Φ = 4400 mm
- Φ = 4450 mm
- Φ = 4500 mm
- Φ = 4550 mm
- Φ = 4600 mm
- Φ = 4650 mm
- Φ = 4700 mm
- Φ = 4750 mm
- Φ = 4800 mm
- Φ = 4850 mm
- Φ = 4900 mm
- Φ = 4950 mm
- Φ = 5000 mm
- Φ = 5050 mm
- Φ = 5100 mm
- Φ = 5150 mm
- Φ = 5200 mm
- Φ = 5250 mm
- Φ = 5300 mm
- Φ = 5350 mm
- Φ = 5400 mm
- Φ = 5450 mm
- Φ = 5500 mm
- Φ = 5550 mm
- Φ = 5600 mm
- Φ = 5650 mm
- Φ = 5700 mm
- Φ = 5750 mm
- Φ = 5800 mm
- Φ = 5850 mm
- Φ = 5900 mm
- Φ = 5950 mm
- Φ = 6000 mm
- Φ = 6050 mm
- Φ = 6100 mm
- Φ = 6150 mm
- Φ = 6200 mm
- Φ = 6250 mm
- Φ = 6300 mm
- Φ = 6350 mm
- Φ = 6400 mm
- Φ = 6450 mm
- Φ = 6500 mm
- Φ = 6550 mm
- Φ = 6600 mm
- Φ = 6650 mm
- Φ = 6700 mm
- Φ = 6750 mm
- Φ = 6800 mm
- Φ = 6850 mm
- Φ = 6900 mm
- Φ = 6950 mm
- Φ = 7000 mm
- Φ = 7050 mm
- Φ = 7100 mm
- Φ = 7150 mm
- Φ = 7200 mm
- Φ = 7250 mm
- Φ = 7300 mm
- Φ = 7350 mm
- Φ = 7400 mm
- Φ = 7450 mm
- Φ = 7500 mm
- Φ = 7550 mm
- Φ = 7600 mm
- Φ = 7650 mm
- Φ = 7700 mm
- Φ = 7750 mm
- Φ = 7800 mm
- Φ = 7850 mm
- Φ = 7900 mm
- Φ = 7950 mm
- Φ = 8000 mm
- Φ = 8050 mm
- Φ = 8100 mm
- Φ = 8150 mm
- Φ = 8200 mm
- Φ = 8250 mm
- Φ = 8300 mm
- Φ = 8350 mm
- Φ = 8400 mm
- Φ = 8450 mm
- Φ = 8500 mm
- Φ = 8550 mm
- Φ = 8600 mm
- Φ = 8650 mm
- Φ = 8700 mm
- Φ = 8750 mm
- Φ = 8800 mm
- Φ = 8850 mm
- Φ = 8900 mm
- Φ = 8950 mm
- Φ = 9000 mm
- Φ = 9050 mm
- Φ = 9100 mm
- Φ = 9150 mm
- Φ = 9200 mm
- Φ = 9250 mm
- Φ = 9300 mm
- Φ = 9350 mm
- Φ = 9400 mm

Technical data

- Backlit LCD display, digit height 15 mm
- Dimensions weighing surface, Stainless Steel
 - $\varnothing$ 90 mm
 - $\varnothing$ 120 mm
 - $\varnothing$ 155-145 mm, see larger picture
- Overall dimensions W-D-H 213-375-93 (without draught shield)
- Net weight approx. 2,8 kg
- Permissible ambient temperature 15 °C/32 °C

Accessories

- Protective working cover, scope of delivery: 5 liters, KERN PFS-A12505
- Separate second display, ideal for training and demonstration purposes in laboratories or industry, not permitted for direct sales to the public, KERN PFS-A08
- Bluetooth data interface for wireless data transfer to PC or tablets, must be ordered at purchase
Bluetooth 2.0: KERN PFS-A10
Bluetooth 4.0: KERN PFS-A11
- Further details, identity of further accessories




Datasheet PFB V1 Buy Precision balance Kern 600g 0 01g from Vetek here vetek Dynamics Documents
611be353 7d6c 49e1 830f b63192c410af ||

KERN BALANCES TEST SERVICES CATALOGUE 2021 Compact laboratory balance KERN PFB A B 03 1 Quick ... ce for wireless data transfer to PC or tablets, must be ordered at purchase Bluetooth 2.0: KERN PFB-**A10** Bluetooth 4.0: KERN PFB-A11 Further details, plenty of further accessories and suitable printer...


lang:en score:11 filesize: 262.59 K page count: 2 document date: 2021-10-05

KERN BALANCES & TEST SERVICES CATALOGUE 2021

 Floor scales KERN BID/BID-D

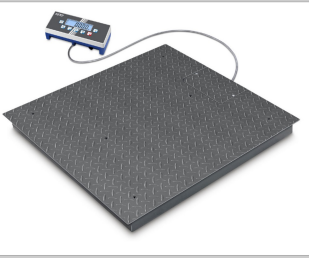

 Floor scale with EC type approval (M)¹ and the best price-to-performance ratio – now also as high-resolution dual-range balance



Do you know? Our floor scales are delivered in a robust wooden box. This protects the high-precision weighing platform from mechanical influences and ensures during transportation, KERN always stays steady.

1) Verification plug, for verified balances this enables you to separate the display device and operate without affecting the verification.

KERN & KERN GmbH, Dagersheim 71273 Balingen, Germany Tel: +49 7433 9333-0 Fax: +49 7433 9333-140 www.kern.com info@kern.com

[pdf] Datasheet Catalog

Datasheet BID V1 Köp Golvvåg 1500kg 0 5kg 1000x1000 mm Krönt från Vetek här vetek se Dynamics

Documents dc9d39d1 f155 4d65 986f 2b70f1271a60 |||

KERN BALANCES TEST SERVICES CATALOGUE 2021 Floor scales KERN BID/BID-D Floor scale with EC type a ... as tablets, laptops or smartphones, continuous data transfer, must be ordered at purchase, KERN KIB-**A10** Ethernet data interface, to connect an IP-based Ethernet network, continuous data transfer, mus... lang:en **score:10** filesize: 429.71 K page_count: 3 document date: 2021-04-07

KERN BALANCES & TEST SERVICES CATALOGUE 2021

Industrial platform scale KERN IOC



Allround platform scale with a wide range of communication options and EC type approval (M)

Features:

- Industry 4.0: A wide range of optional data interfaces allows that it is easy to transfer weighing data to various networks, PCs, controllers, PLCs, etc.
- High stability: Thanks to a compact design, the platform scale is suitable for use in various locations: laboratory, production, quality control, etc.
- Accuracy: Weighing with a precision of 0.1 mg to 1 kg.
- Flexibility: The platform scale can be adapted to various applications: for example, for weighing of bulk materials, for weighing of large objects, for weighing of small objects, etc.
- Connectivity: The platform scale can be connected to various communication options: for example, for weighing of bulk materials, for weighing of large objects, for weighing of small objects, etc.

Technical data:

Model	Capacity	Resolution	Dimensions (mm)	Weight (kg)
KERN IOC 1	1000 kg	0.1 g	1000 x 1000 x 120	120
KERN IOC 2	2000 kg	0.1 g	2000 x 2000 x 120	240
KERN IOC 3	3000 kg	0.1 g	3000 x 3000 x 120	360
KERN IOC 4	4000 kg	0.1 g	4000 x 4000 x 120	480
KERN IOC 5	5000 kg	0.1 g	5000 x 5000 x 120	600
KERN IOC 6	6000 kg	0.1 g	6000 x 6000 x 120	720
KERN IOC 7	7000 kg	0.1 g	7000 x 7000 x 120	840
KERN IOC 8	8000 kg	0.1 g	8000 x 8000 x 120	960
KERN IOC 9	9000 kg	0.1 g	9000 x 9000 x 120	1080
KERN IOC 10	10000 kg	0.1 g	10000 x 10000 x 120	1200

KERN & KERN GmbH, Dagersheim 71273 Balingen, Germany Tel: +49 7433 9333-0 Fax: +49 7433 9333-140 www.kern.com info@kern.com

[pdf] Datasheet Catalog

Datasheet IOC V1 Buy Platform scale Kern 30kg 10g 60kg 20g 500x400x120 mm Verified M from Vetek

here vetek Dynamics Documents 4af726b2 5507 47e9 8b2c aa105c1992f0 |||

KERN BALANCES TEST SERVICES CATALOGUE 2021 Industrial platform scale KERN IOC 1 2 2 Benchtop s ... as tablets, laptops or smartphones, continuous data transfer, must be ordered at purchase, KERN KIB-**A10** Ethernet data interface, to connect an IP-based Features industrial control systems and othe... lang:en **score:10** filesize: 279.21 K page_count: 2 document date: 2021-09-02

MEDICAL SCALES 2020

Step-on personal floor scale KERN MPD MPD-E



Professional step-on personal floor scales approved as a medical device with EC type approval class II

Your KERN specialist dealer

KERN & KERN GmbH, Dagersheim 71273 Balingen, Germany Tel: +49 7433 9333-0 Fax: +49 7433 9333-140 www.kern.com info@kern.com

[pdf] Datasheet

Datasheet MPD V2 Buy Personal floor scale Kern 250kg 0 1kg Verification class III from Vetek here vetek

Dynamics Documents 47cbf783 83fe 4f4e 9445 0edc58931e75 |||

MEDICAL SCALES 2020 Step-on personal floor scales KERN MPD MPD-E Professional step-on personal floo ... ing time approx. 12 h, KERN MBC-A08 Mains adapter external, 230 V/50 Hz, standard EU, CH, KERN MBC-**A10** KERN MPD: Mains adapter external, 100-240 V, 50-60 Hz, standard EU, GB, CH, USA, AUS, KERN MBC-... lang:en **score:10** filesize: 306.34 K page_count: 2 document date: 2020-05-18

