

## **Greesum PSB0641**

# **Greesum 230 Gallon Outdoor Storage Box User Manual**

Model: PSB0641

## **1. INTRODUCTION**

Thank you for choosing the Greesum 230 Gallon Outdoor Storage Box. This manual provides essential information for the proper assembly, operation, maintenance, and troubleshooting of your new storage box. Please read this manual thoroughly before use and retain it for future reference.



Figure 1: The Greesum 230 Gallon Outdoor Storage Box in its closed state, showcasing its gray finish and vertical panel design.

## **2. SAFETY INFORMATION**

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Do not allow children to play inside the storage box to prevent suffocation.
- Ensure the lid is fully open or fully closed to prevent accidental closure and pinching. The hinged lid is designed to prevent pinching fingers.
- Do not exceed the maximum weight capacity of 300 lbs on the lid if using as a bench.

- Do not store flammable or hazardous materials inside the box.
- Place the storage box on a flat, stable surface to prevent tipping.
- Regularly inspect the box for any damage or wear, especially after severe weather conditions.

## 3. SETUP AND ASSEMBLY

---

The Greesum Outdoor Storage Box is designed for straightforward assembly. It is delivered in two packages and includes 6 panels and 1 divider. Follow the provided diagram and instructions carefully.

### 3.1 Unpacking

1. Open both packages and carefully remove all components.
2. Verify that all parts listed in the instruction manual are present and undamaged.
3. Lay out the panels on a clean, flat surface to prepare for assembly.

### 3.2 Assembly Steps

Assembly typically involves snapping panels together. No special tools are required.

1. Connect the side panels to the base panel, ensuring they click securely into place.
2. Attach the front and back panels to the assembled sides and base.
3. Carefully attach the lid to the main body using the integrated hinges. Ensure the hinges are properly aligned for smooth operation.
4. If desired, insert the removable partition into the designated slots to customize your storage space.



Figure 2: Illustrates the installation of the removable divider, allowing for customized storage organization within the box.

## 4. OPERATING INSTRUCTIONS

### 4.1 Storage Use

The 230-gallon capacity provides ample space for various outdoor items.

- Open the lid by lifting it from the front handle. The lid will stay open for easy access.
- Store items such as patio cushions, gardening tools, pool equipment, or pet supplies.
- Close the lid firmly to ensure a secure and weatherproof seal.
- For added security, a lock can be attached to the designated lockable feature.



Figure 3: The storage box with its lid fully open, demonstrating its large capacity suitable for storing multiple patio cushions and other outdoor essentials.

## 4.2 Seating Function

The sturdy lid can support up to 300 lbs, allowing the box to double as a bench.

- Ensure the lid is fully closed and latched before using it as a seat.
- Do not stand on the box.

## 4.3 Placement Considerations

The Greesum storage box is suitable for various outdoor environments.



## SUITABLE FOR A VARIETY OF SCENES



Figure 4: Examples of suitable placements for the storage box, including in a yard, on a lawn, or by the poolside, highlighting its versatility.

## 5. MAINTENANCE

Regular maintenance will prolong the life and appearance of your storage box.

- **Cleaning:** Clean the exterior with mild soap and water using a soft cloth or sponge. Rinse thoroughly with clean water. Avoid abrasive cleaners or harsh chemicals.
- **Weather Protection:** The box is crafted from durable, waterproof, and UV-resistant resin (PP material). While designed for outdoor use, extreme weather conditions may require additional protection or securing.
- **Inspection:** Periodically check all connections and hinges to ensure they remain secure.



Figure 5: A close-up view of the box's durable, waterproof material, demonstrating its resistance to moisture.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not close properly.	Obstruction in the box; misaligned hinges; uneven surface.	Remove any obstructions. Check hinge alignment and adjust if necessary. Ensure the box is on a flat, level surface.
Water inside the box.	Lid not fully closed; damaged seal; extreme weather conditions.	Ensure the lid is securely latched. Inspect the seal around the lid for damage; if damaged, contact support. During heavy rain, consider placing the box under additional cover.
Box feels unstable or wobbly.	Uneven ground; panels not fully snapped into place.	Relocate the box to a level surface. Press firmly on all panel connections to ensure they are fully engaged.

Problem	Possible Cause	Solution
---------	----------------	----------

## 7. SPECIFICATIONS

Feature	Detail
Brand	Greesum
Model Number	PSB0641
Color	Gray
Material	PP (High-Density Polyethylene)
Product Dimensions (L x W x H)	63" x 31.5" x 34.25"
Capacity	230 Gallons (Note: Some specifications indicate 245 Gallons)
Item Weight	48.5 lbs
Maximum Weight Recommendation (Lid)	300 lbs
Special Features	Adjustable Storage Space (with removable divider), Lockable, Waterproof, UV-resistant

## 230 GALLON STORAGE BOX SIZE

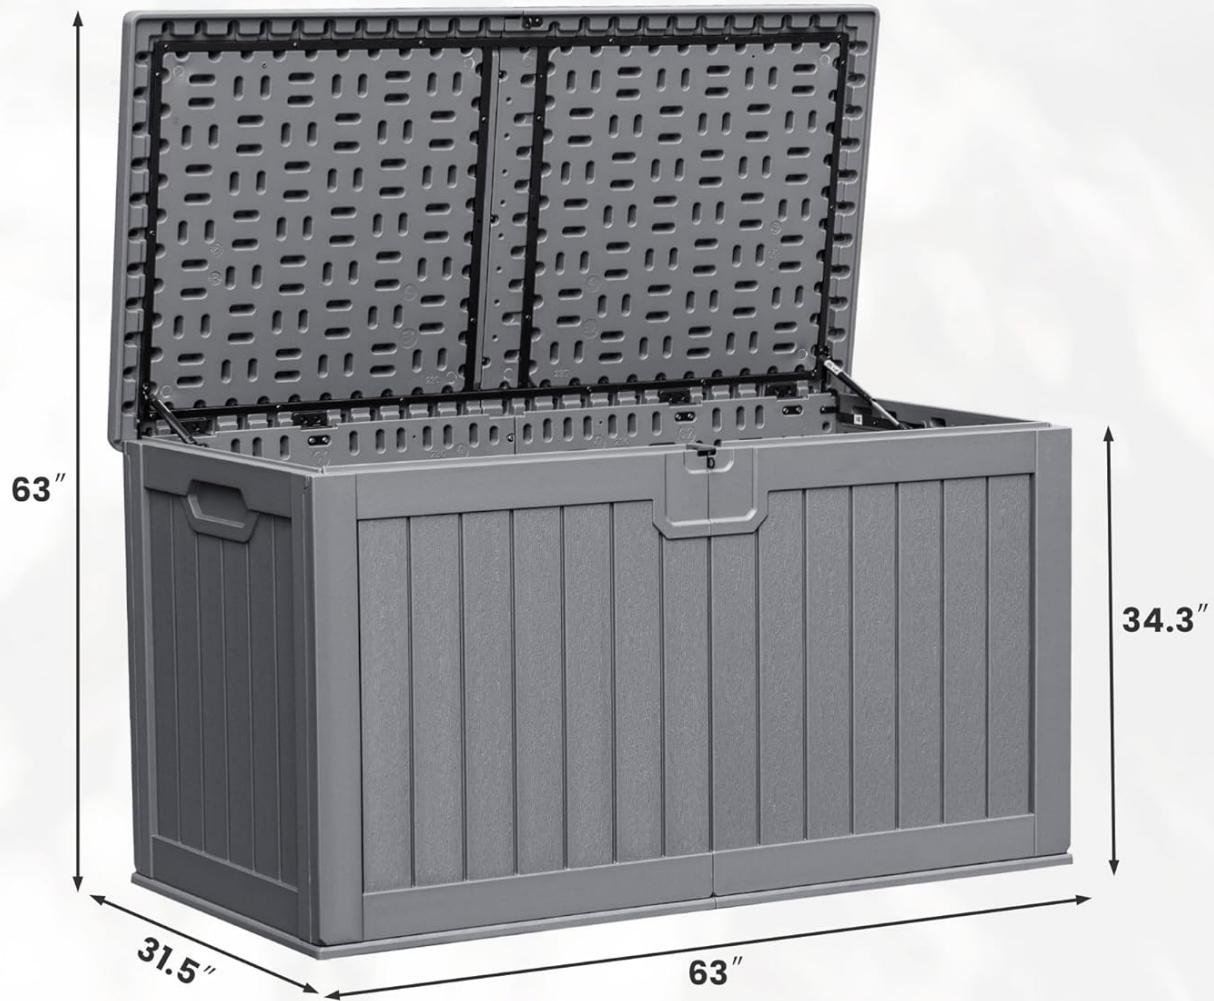


Figure 6: Detailed dimensions of the Greesum 230 Gallon Outdoor Storage Box.

## 8. WARRANTY INFORMATION

Specific warranty details for the Greesum 230 Gallon Outdoor Storage Box are not provided in this manual. Please refer to the product packaging or the manufacturer's official website for the most current warranty information.

## 9. CUSTOMER SUPPORT

For assistance with assembly, parts, or any other inquiries regarding your Greesum Outdoor Storage Box, please contact Greesum customer service. Contact information is typically available on the product packaging or the official Greesum website.

You may also visit the [Greesum Store on Amazon](#) for more product information and support resources.

© 2025 Greesum. All rights reserved.