

SakerPlus VAC716

SakerPlus VAC716 4-in-1 Cordless Handheld Vacuum & Air Duster Instruction Manual

MODEL: VAC716

Brand: SakerPlus

1. Introduction

Thank you for choosing the SakerPlus VAC716 4-in-1 Cordless Handheld Vacuum & Air Duster. This versatile device is designed for efficient cleaning and maintenance in various environments, including your car, home, and office. It combines vacuuming, blowing, inflating, and air extraction functions into one compact unit, offering convenience and powerful performance.

2. Safety Instructions

- Read all instructions before use.
- Keep the device away from water and liquids. **DO NOT ABSORB WATER OR LIQUID.**
- Do not use the device near flammable or combustible materials.
- Keep out of reach of children.
- Use only the provided charging cable and ensure proper charging practices.
- Do not operate if the device or charging cable is damaged.
- Ensure filters are properly installed before operation.

3. Package Contents

Your SakerPlus VAC716 package includes the following items:

- SakerPlus VAC716 Main Unit
- Floor Brush
- 2-in-1 Flat Nozzle with Brush

- Telescopic Hose
- Long Blowing Pipe with Brush
- Small Inflator Nozzle
- Large Inflator Nozzle
- Air Extraction Nozzle
- USB Type-C Charging Cable
- Storage Bag
- Additional HEPA Filters (2 included)



Figure 1: All components included with the SakerPlus VAC716.

This image displays the main SakerPlus VAC716 unit along with all its accessories, including various nozzles, brushes, hoses, filters, and the charging cable, neatly arranged.

4. Product Features

- **4-in-1 Functionality:** Vacuuming, Blowing, Inflating, and Air Extraction.

- **Adjustable Suction Levels:** Three levels (10000PA, 15000PA, 20000PA) for varied cleaning needs.
- **Dual Filtration System:** Front filter for large debris and HEPA filter for fine particles. Filters are washable and reusable.
- **Long Battery Life:** 7800mAh rechargeable battery provides up to 40 minutes of runtime.
- **Fast Charging:** Fully charges in 4 hours via USB Type-C.
- **Touchscreen Control:** LED display for real-time battery life and easy suction level adjustment.
- **Compact & Lightweight:** Weighs 1.12 lbs, measuring 10.6 x 7.5 x 2.6 inches for easy portability and storage.



Vacuum Cleaner



Air Duster

4-IN-1 VERSATILE VACUUM CLEANER



Air Pump



Air Extractor

Figure 2: Illustration of the 4-in-1 versatile functions of the SakerPlus VAC716.

This image visually demonstrates the four primary functions of the device: vacuuming, air dusting, air pumping, and air extraction, highlighting its versatility.

5. Setup

Before first use, ensure the device is fully charged. Connect the USB Type-C cable to the charging port and a power source. The touchscreen display will indicate battery status.

Attaching the Dust Cup and Filter

1. Ensure the main unit is powered off.
2. Align the dust cup (with filter inside) with the vacuum intake port on the main unit.
3. Twist gently until it clicks securely into place.

Attaching Nozzles/Accessories

1. For vacuuming, attach the desired nozzle (e.g., 2-in-1 flat nozzle, floor brush, or telescopic hose) to the dust cup's opening.
2. For blowing, inflating, or air extraction, attach the appropriate nozzle to the air outlet port on the opposite side of the main unit.

3-SUCTION LEVEL TOUCHSCREEN ADJUSTMENT

Low **10000PA** MID **15000PA** High **20000PA**

Powerful Brushless Motor

- ✓ Max 20000PA Suction
- ✓ Max 680L/Min Air Volume
- ✓ Efficient Cleaning

OTHERS Common Motor

- ✗ 9000PA Suction
- ✗ Max 360L/Min Air Volume
- ✗ Low Efficiency

Figure 3: A selection of nozzles and accessories for different functions.

This image showcases the variety of attachments available, including brushes, hoses, and specialized nozzles, designed for different cleaning and air-related tasks.

6. Operating Instructions

Power On/Off and Suction Adjustment

1. To power on, press and hold the power button for 2 seconds.
2. Tap the power button to cycle through the three suction levels (10000PA, 15000PA, 20000PA). The LED display will show the current level.
3. To power off, press and hold the power button for 2 seconds.



Figure 4: The touchscreen display indicating the three adjustable suction levels.

This image illustrates the device's LED display, showing the three distinct suction power levels (Low, Mid, High) that can be selected via the touchscreen.

Vacuuming

Attach the appropriate vacuum nozzle for your cleaning task. The 2-in-1 flat nozzle is ideal for tight spaces like car seats and air vents, while the floor brush is suitable for larger carpeted areas. The telescopic hose provides extended reach.

EFFORTLESS CLEANING WITH EXTENDABLE HOSE



Perfect for car seat gaps



home corners, and hard-to-reach spots!

VS



MORE EFFORT WITH BASIC MODEL

Figure 5: Demonstrating the use of the extendable hose for cleaning hard-to-reach areas in a car.

This image shows the device being used with an extendable hose to clean car seat gaps, emphasizing its ability to reach confined spaces effectively.

Blowing / Air Duster

Attach the long blowing pipe with brush to the air outlet port. This function is perfect for dusting keyboards, camera lenses, or blowing debris out of crevices.

Inflating / Air Extraction

Use the small or large inflator nozzles for inflating items like swimming rings or air mattresses. The air extraction nozzle can be used to remove air from storage bags.

Your browser does not support the video tag.

Video 1: SakerPlus VAC716 Hand Held Car Vacuum Cordless in action.

This video demonstrates the SakerPlus VAC716 in various usage scenarios, showcasing its vacuuming and air duster capabilities for car cleaning and other tasks.

7. Maintenance

Emptying the Dust Cup

1. Ensure the vacuum cleaner is powered off.
2. Press the one-click emptying button to release the dust cup contents into a trash bin.



Figure 6: The one-click dust cup emptying feature for convenient disposal of collected debris.

This image shows the user easily emptying the 200ml dust cup with a single click, demonstrating the hassle-free cleaning process.

Cleaning the Filters

1. Remove the dust cup from the main unit.
2. Carefully take out the HEPA filter and front filter.
3. Brush off any large debris. If necessary, wash the filters with water.
4. Allow the filters to dry completely before reinserting them into the dust cup and reattaching to the main unit.

TYPE-C FAST CHARGING & TOUCHSCREEN CONTROL



Figure 7: Step-by-step guide on how to clean the washable and reusable HEPA filter.

This image provides a visual guide for maintaining the dual filtration system, showing how to remove, clean, and dry the filters to ensure optimal performance.

8. Troubleshooting

- **Device not turning on:** Ensure the battery is charged. Connect to the USB Type-C charger.
- **Low suction power:** Check if the dust cup is full and empty it. Clean or replace the filters if they are clogged. Ensure all attachments are securely fitted.
- **Weak blowing power:** Ensure the correct nozzle is attached to the air outlet port and that the air outlet is not obstructed.
- **Unusual noise:** Power off the device and check for any obstructions in the nozzles, dust cup, or filter area.

9. Specifications

Feature	Specification
Brand	SakerPlus
Model Name	VAC716
Special Feature	Cordless
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	1.1 Pounds (Dust Cup)
Form Factor	Handheld
Color	Black
Product Dimensions	10.7"L x 7.59"W x 2.65"H
Battery Life	Up to 40 minutes
Charging Time	4 hours (USB Type-C)
Number of Speeds	3
Item Weight	1.12 pounds

10. Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official SakerPlus website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question