Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- FLEXISPOT /
- > FLEXISPOT One-Piece Electric Standing Desk 48x24 Inch Instruction Manual

FLEXISPOT One-Piece Electric Standing Desk 48x24

FLEXISPOT One-Piece Electric Standing Desk Instruction Manual

Model: One-Piece Electric Standing Desk 48x24

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your FLEXISPOT One-Piece Electric Standing Desk. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.



Image: The FLEXISPOT One-Piece Electric Standing Desk, featuring a black desktop and black frame, set up with a laptop and monitor.

SETUP AND ASSEMBLY

Your FLEXISPOT Electric Standing Desk is designed for straightforward assembly. The desk ships in two separate packages, which may arrive at different times. Please ensure all components are present before beginning assembly.

Required Tools (Not Included):

• Electric drill (recommended for faster assembly)

Assembly Steps:

- 1. Unpack all components and verify against the parts list provided in the separate assembly guide.
- 2. Attach the desk legs to the desktop frame. The main bracket and motor are pre-attached for convenience.
- 3. Secure the desktop to the frame. The desktop is a single, seamless piece, 1 inch thick, providing

- enhanced stability.
- 4. Connect the control panel and power cables according to the wiring diagram in the assembly guide.
- 5. Install any optional accessories, such as the headphone hooks, if desired.

Important: Always follow the detailed assembly instructions included in your product packaging. Ensure all screws are tightened securely to prevent instability. Do not exceed the maximum weight recommendation of 132 pounds.



Image: A close-up view highlighting the seamless, one-piece desktop with rounded edges, emphasizing its solid construction.

OPERATING INSTRUCTIONS

The FLEXISPOT Electric Standing Desk features an intuitive control panel for easy height adjustment and memory presets.

Height Adjustment:

- Use the **Up** and **Down** arrow buttons on the control panel to adjust the desk height.
- The desk can be adjusted from a minimum height of 28.1 inches to a maximum height of 45.7 inches.

• The motor operates quietly, under 50 dB, ensuring minimal disruption to your workspace.

Memory Presets:

The desk includes four programmable memory height presets, allowing you to save and recall your preferred sitting and standing positions instantly.

- 1. Adjust the desk to your desired height using the Up/Down buttons.
- 2. Press the 'M' button (or similar memory set button, refer to your control panel diagram).
- 3. Immediately press one of the numbered preset buttons (1, 2, 3, or 4) to save the current height to that position.
- 4. To recall a saved height, simply press the corresponding numbered preset button. The desk will automatically move to the saved position.



Image: A detailed view of the smart control panel, showing the LED display for height, up/down buttons, and four memory preset buttons.

LARGE ADJUSTMENT RANGE

Height Options for Everyone



Image: A visual representation of the desk's height adjustment range, indicating minimum (28.1 inches) and maximum (45.7 inches) heights.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your standing desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- Cable Management: Periodically check and organize cables to prevent tangles and ensure smooth operation during height adjustments.
- **Weight Limit:** Do not exceed the maximum weight capacity of 132 pounds. Overloading can strain the motor and frame.
- Environmental Conditions: Keep the desk away from direct heat sources and excessive moisture.
- Fastener Check: Occasionally check all screws and fasteners to ensure they remain tight. Retighten if necessary.

Made For Multiple Desktop Sizes

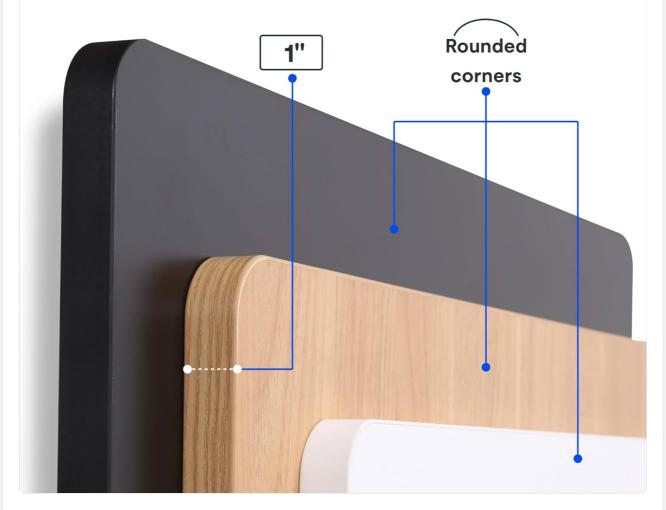


Image: The desk in operation, illustrating its smooth and quiet movement, ideal for maintaining concentration.

TROUBLESHOOTING

If you encounter issues with your FLEXISPOT Electric Standing Desk, refer to the following common problems and solutions.

Desk Not Adjusting Height:

- Power Connection: Ensure the power cord is securely plugged into both the desk and a working electrical outlet.
- Cable Connections: Check all cables connecting the control panel to the motor and power supply for secure connections.
- **Overload:** Verify that the weight on the desk does not exceed the maximum capacity of 132 pounds. Remove excess weight and try again.
- Reset Procedure: Consult your specific assembly guide for any factory reset procedures for the control
 panel.

Unusual Noises During Adjustment:

- **Clicking Sound:** A clicking sound, particularly when lowering, may indicate an issue with the motor or leg mechanism. Ensure the desk is not overloaded. If the issue persists, contact customer support.
- Wobbling: Ensure all assembly screws are tightly secured. Check that the desk is on a level surface.

If these steps do not resolve the issue, please refer to the warranty and support section for further assistance.

SPECIFICATIONS

Detailed specifications for the FLEXISPOT One-Piece Electric Standing Desk (48x24 inch model).

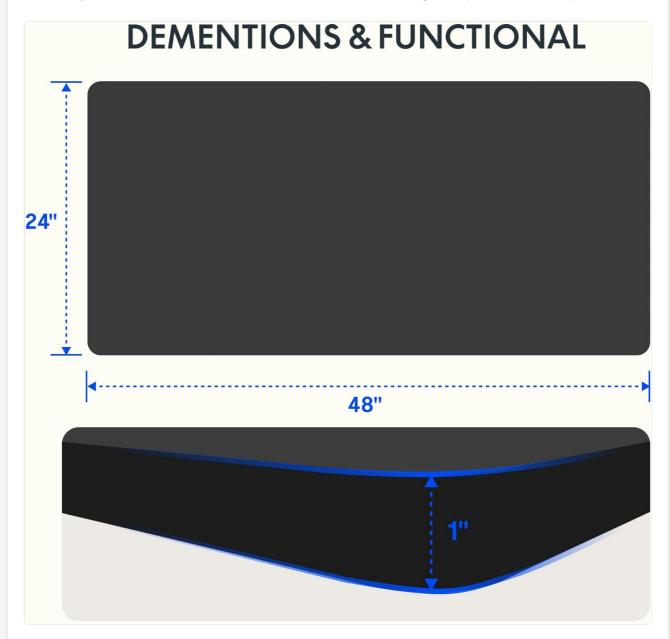


Image: A diagram illustrating the key dimensions of the desk: 48 inches in width, 24 inches in depth, and a 1-inch desktop thickness.

Feature	Detail
Brand	FLEXISPOT
Model	One-Piece Electric Standing Desk 48x24
Desktop Dimensions (W x D)	48 inches x 24 inches

Desktop Thickness	1 inch
Height Adjustment Range	28.1 inches (min) to 45.7 inches (max)
Motor Noise Level	Under 50 dB
Memory Presets	4
Maximum Weight Capacity	132 pounds
Frame Material	Alloy Steel
Desktop Material	Engineered Wood
Color	Black Top + Black Frame
Special Features	One-Piece Desktop, Headphone Hook
Assembly Required	Yes

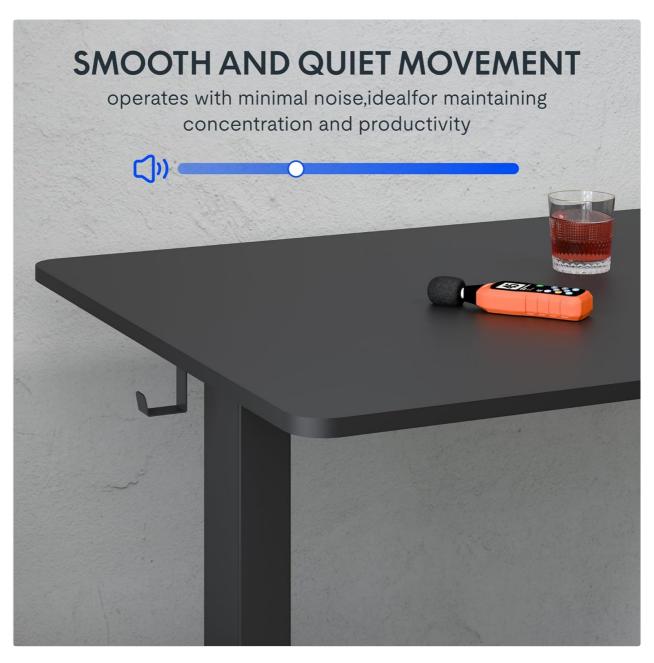


Image: A close-up view of the desk's underside, highlighting the two convenient headphone hooks for storage.

WARRANTY INFORMATION

FLEXISPOT provides the following warranty for your Electric Standing Desk:

- Frame, Motor, and Mechanical Parts: 5-year limited warranty.
- Electronic Components: 2-year limited warranty.

This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your product or visit the official FLEXISPOT website.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty claims, please contact FLEXISPOT customer service. You can typically find contact information on the official FLEXISPOT website or through the retailer where you purchased the product.

When contacting support, please have the following information ready:

- Product Model: One-Piece Electric Standing Desk 48x24
- ASIN: B0DRFZWN7X
- · Date of Purchase
- · A detailed description of the issue

Visit the FLEXISPOT Store on Amazon for more product information and support resources.

© 2023 FLEXISPOT. All rights reserved.

Related Documents - One-Piece Electric Standing Desk 48x24



Electric Single Motor Standing Desk Assembly and Operation Guide

Comprehensive assembly instructions, safety guidelines, component lists, and operational details for the Electric Single Motor Standing Desk. Learn how to assemble, adjust height, use memory functions, and maintain your standing desk.

Electric Height Adjustable Standing Desk



Electric Height Adjustable Standing Desk User Manual

Comprehensive user manual for the Electric Height Adjustable Standing Desk, covering assembly instructions, operation, display settings, troubleshooting, and maintenance.

