

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY A-TV2 Universal Replacement Remote Control User Manual

ECONTROLLY A-TV2

ECONTROLLY A-TV2 Universal Replacement Remote Control User Manual

Model: A-TV2 URC-1234ALB

1. INTRODUCTION

Thank you for choosing the ECONTROLLY A-TV2 Universal Replacement Remote Control. This remote is designed to be a direct replacement for your original TV remote, offering broad compatibility with various television brands including LG, Philips, RCA, Vizio, Sharp, Zenith, and Panasonic LCD TVs. It features a durable ABS material construction and requires no programming or pairing for immediate use.

This manual provides essential information for setting up, operating, and maintaining your new remote control.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY A-TV2 Universal Replacement Remote Control

Note: Batteries are not included and must be purchased separately. This remote typically uses two AAA batteries.

3. SETUP

3.1 Battery Installation

To install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.





Image: Back view of the remote control with the battery compartment open, illustrating where to insert the two AAA batteries.





Image: Back view of the remote control with the battery cover securely closed after battery installation.

3.2 Initial Use

The ECONTROLLY A-TV2 remote control requires **no programming or pairing**. Once batteries are installed, it is ready to operate compatible televisions directly. Simply point the remote at your TV and begin using it.

4. OPERATING THE REMOTE CONTROL

This remote control is designed for intuitive operation with clearly labeled buttons for common TV functions.





Image: Front view of the ECONTROLLY A-TV2 remote control, displaying all buttons and overall dimensions.

4.1 Button Functions Overview

Button	Function
Power ()	Turns the TV On or Off.
Mute ()	Mutes or unmutes the TV audio.
Input/AV	Selects the input source (e.g., HDMI 1, AV, Component).
CC	Activates or deactivates Closed Captions.
PREV.CH	Returns to the previously viewed channel.
VOL + / -	Increases or decreases the volume level.
CH ^ / _	Changes the channel up or down.
Number Buttons (0-9)	Direct channel selection.
+100	Used for selecting channels above 99 (e.g., for channel 101, press +100 then 1).
SET	(Typically for advanced setup or code entry, though this remote is advertised as no programming needed. May be for specific TV models or future features.)

Note: Some buttons may have secondary functions or specific uses depending on the TV brand and model. Refer to your TV's original manual for detailed information on specific features.

5. MAINTENANCE

5.1 Cleaning

To clean your remote control:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly installed batteries.	Check battery orientation. Replace with fresh AAA batteries.
Remote has limited range or intermittent response.	Weak batteries; obstruction between remote and TV; infrared sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor. Remove any obstructions.
Certain buttons do not work.	Button malfunction; remote not fully compatible with a specific TV function.	Try replacing batteries. If the issue persists for specific functions, it may indicate a compatibility limitation for that particular TV model or feature.
Remote does not control my TV.	TV brand not supported; remote malfunction.	Verify your TV brand is listed as compatible (LG, Philips, RCA, Vizio, Sharp, Zenith, Panasonic). Ensure batteries are fresh and correctly installed. If issues persist, contact customer support.

7. SPECIFICATIONS

Model Number	A-TV2 (URC-1234ALB)
Brand	ECONTROLLY
Compatible Devices	Television (LG, Philips, RCA, Vizio, Sharp, Zenith, Panasonic LCD TVs)
Special Feature	No Programming Required
Color	Black
Power Source	2 x AAA Batteries (not included)
Product Dimensions	5 x 1 x 0.5 inches (approximately 12.7 x 2.54 x 1.27 cm)
Item Weight	1 ounce (approximately 28 grams)

8. WARRANTY AND SUPPORT

8.1 Customer Support

ECONTROLLY is committed to providing quality products and customer satisfaction. If you encounter any issues or have questions regarding your A-TV2 remote control, please do not hesitate to contact our customer support team. We are here to assist you.

Please refer to your purchase platform or product packaging for specific contact information.

8.2 Warranty Information

Specific warranty details may vary by region and retailer. Please retain your proof of purchase for any warranty claims. The product is tested before shipping to ensure proper functionality.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question