

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Portable Mini Bluetooth Speaker User Manual

ASHATA ASHATAg54kzvnsyq

ASHATA Portable Mini Bluetooth Speaker User Manual

Model: ASHATAg54kzvnsyq

INTRODUCTION

Thank you for purchasing the ASHATA Portable Mini Bluetooth Speaker. This compact and versatile speaker is designed to provide high-quality audio on the go, featuring Bluetooth connectivity, memory card support, USB playback, and FM radio functionality. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for assistance.
- Keep the speaker away from water and other liquids. If it gets wet, power it off immediately and allow it to dry completely before use.
- Use only the specified charging voltage (DC 5V) to prevent damage.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the package for the following items:

- ASHATA Portable Mini Bluetooth Speaker
- USB Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your ASHATA Portable Mini Bluetooth Speaker.



Figure 1: Front view of the ASHATA Portable Mini Bluetooth Speaker, showcasing its compact design and integrated hand strap.



Figure 2: Angled view highlighting the top control buttons and the durable hand strap for portability.



Figure 3: Detailed view of the top panel buttons: Mode (M), Previous/Volume Down (-), Play/Pause/Call (+), Next/Volume Up (>).



Figure 4: Rear view displaying the power switch (ON/OFF), DC 5V charging port, TF card slot, and USB port.

Button Functions:

- **M (Mode) Button:** Press to switch between Bluetooth, FM Radio, TF Card, and USB modes.
- **- (Previous/Volume Down) Button:**
 - Short press: Go to the previous track (in Bluetooth/TF/USB mode) or previous FM station (in FM mode).
 - Long press: Decrease volume.
- **+ (Play/Pause/Call) Button:**
 - Short press: Play/Pause music.
 - Short press (during call): Answer/End call.
 - Long press: Reject incoming call.
 - Long press (in FM mode): Auto-scan and save FM stations.
- **> (Next/Volume Up) Button:**
 - Short press: Go to the next track (in Bluetooth/TF/USB mode) or next FM station (in FM mode).
 - Long press: Increase volume.

SETUP

1. Charging the Speaker:

1. Connect the small end of the USB charging cable to the DC 5V port on the back of the speaker.
2. Connect the other end of the USB cable to a USB power adapter (e.g., phone charger, computer USB port) with a DC 5V output.
3. The charging indicator light will illuminate (color may vary) during charging and turn off once fully charged.
4. A full charge typically takes 2-3 hours.

2. Powering On/Off:

- To power on, slide the ON/OFF switch on the back of the speaker to the "ON" position. You will hear an audible prompt.
- To power off, slide the ON/OFF switch to the "OFF" position.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing:

1. Ensure the speaker is powered on and in Bluetooth mode (it usually defaults to Bluetooth mode upon power-on, indicated by an audible prompt). If not, press the **M** button to switch to Bluetooth mode.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available Bluetooth devices. The speaker will appear as "ASHATA Speaker" or similar.
4. Select "ASHATA Speaker" to connect. Once paired, you will hear a confirmation sound.
5. You can now play audio from your device through the speaker.

2. TF Card (Memory Card) Playback:

1. Insert a TF (Micro SD) card with MP3 audio files into the TF card slot on the back of the speaker.
2. The speaker will automatically switch to TF card mode and begin playing music. If not, press the **M** button to switch to TF card mode.
3. Use the **-** and **>** buttons for previous/next track, and the **+** button for play/pause.

3. USB Playback:

1. Insert a USB flash drive with MP3 audio files into the USB port on the back of the speaker.
2. The speaker will automatically switch to USB mode and begin playing music. If not, press the **M** button to switch to USB mode.
3. Use the - and > buttons for previous/next track, and the + button for play/pause.

4. FM Radio Function:

1. Press the **M** button repeatedly until you enter FM radio mode.
2. For automatic station scanning, long press the + (Play/Pause) button. The speaker will scan and save available FM stations.
3. Once scanning is complete, short press the - or > buttons to navigate between saved stations.
4. For better FM reception, ensure the speaker is in an open area.

5. Answering/Ending Calls:

- When a call comes in while connected via Bluetooth, the music will pause.
- Short press the + (Play/Pause) button to answer the call.
- Short press the + (Play/Pause) button again to end the call.
- Long press the + (Play/Pause) button to reject an incoming call.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the speaker. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or dead.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Bluetooth is not enabled on the speaker or device; speaker is too far from device; speaker is already paired with another device.	Ensure speaker is in Bluetooth mode. Move speaker closer to device. Disconnect from other devices. Restart both speaker and device.
No sound or low volume.	Volume is too low on speaker or connected device; incorrect mode selected.	Increase volume on both speaker and connected device. Press M button to ensure correct playback mode (Bluetooth, TF, USB, FM).
FM radio reception is poor.	Weak signal; environmental interference.	Move the speaker to an open area. Perform auto-scan again.

Problem	Possible Cause	Solution
TF card/USB not playing.	Card/drive not inserted correctly; unsupported file format; corrupted files.	Reinsert the TF card/USB drive. Ensure files are in MP3 format. Try a different card/drive.

SPECIFICATIONS

Feature	Detail
Model Name	ASHATAg54kzvnsyq
Connectivity Technology	Bluetooth 4.2
Supported Modes	Bluetooth, TF Card, USB, FM Radio
Power Input	DC 5V
Product Dimensions (L x W x H)	5.11"D x 3.14"W x 1.57"H (approx. 13cm x 8cm x 4cm)
Item Weight	3.81 ounces (approx. 108g)
Material	ABS Plastic, Cloth
Recommended Use	Indoor/Outdoor



Figure 5: Product dimensions for reference.

WARRANTY AND SUPPORT

ASHATA products are manufactured to high quality standards. For any issues or questions regarding your ASHATA Portable Mini Bluetooth Speaker, please refer to your purchase platform for warranty details and customer support contact information. Please retain your proof of purchase for warranty claims.

For further assistance, you may visit the ASHATA Store on Amazon: [ASHATA Store](#)

© 2024 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DRG9CT48>

More documents and user manuals: **<https://manuals.plus/>**