

AN-20241225-06

# Generic Lightweight Stick Vacuum Cleaner

MODEL: AN-20241225-06 USER MANUAL

[Introduction](#) [Safety Instructions](#) [Package Contents](#) [Product](#)  
[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. Introduction

This manual provides essential information for the safe and effective use of your Generic Lightweight Stick Vacuum Cleaner, Model AN-20241225-06. Please read these instructions carefully before operating the appliance and retain them for future reference.

## 2. Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using this vacuum cleaner.
2. Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
3. To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
4. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
5. Use only as described in this manual. Use only manufacturer's recommended attachments.
6. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
7. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
8. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
9. Do not handle plug or appliance with wet hands.
10. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
14. Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
15. Do not use without dust bag and/or filters in place.
16. Turn off all controls before unplugging.
17. Use extra care when cleaning on stairs.

### **3. Package Contents**

---

Verify that all components are present and in good condition:

- Corded Stick Vacuum (Main Unit) x 1
- Extension Pole x 1
- Floor Brush x 1
- 2-in-1 Long Flat Suction Nozzle x 1
- Small Hair Brush Suction Nozzle x 1
- User Manual x 1

### **4. Product Overview**

---

The Generic Lightweight Stick Vacuum Cleaner is designed for efficient cleaning across various surfaces. It features a powerful motor, multi-stage filtration, and versatile attachments.

## Lightweight Corded Vacuum Cleaner

Powerful Suction, New Cleaning Experience



400W  
High Power



15000Pa  
Powerful Suction



5 Meter/16.4 Ft  
Power Cable



1.5 Kg Lightweight  
Host



Washable Filters



Multi-purpose



**Figure 4.1:** Overview of the Lightweight Corded Vacuum Cleaner highlighting its 400W high power, 15000Pa powerful suction, 5-meter power cable, 1.5 kg lightweight design, washable filters, and multi-purpose functionality. The image displays the vacuum in both stick and handheld configurations.

## 5 Meter/16.4ft Power Cable


Larger Cleaning Range, No Need to Worry About Frequent Plug Replacement



**Figure 4.2:** Illustration of the vacuum cleaner's 5-meter (16.4 ft) power cable, allowing for a larger cleaning range without frequent plug changes.

## 15000 Pa Powerful Suction


High power pure copper motor, Provides powerful suction.  
Counter-rotating design, Further optimization to enhance suction power.

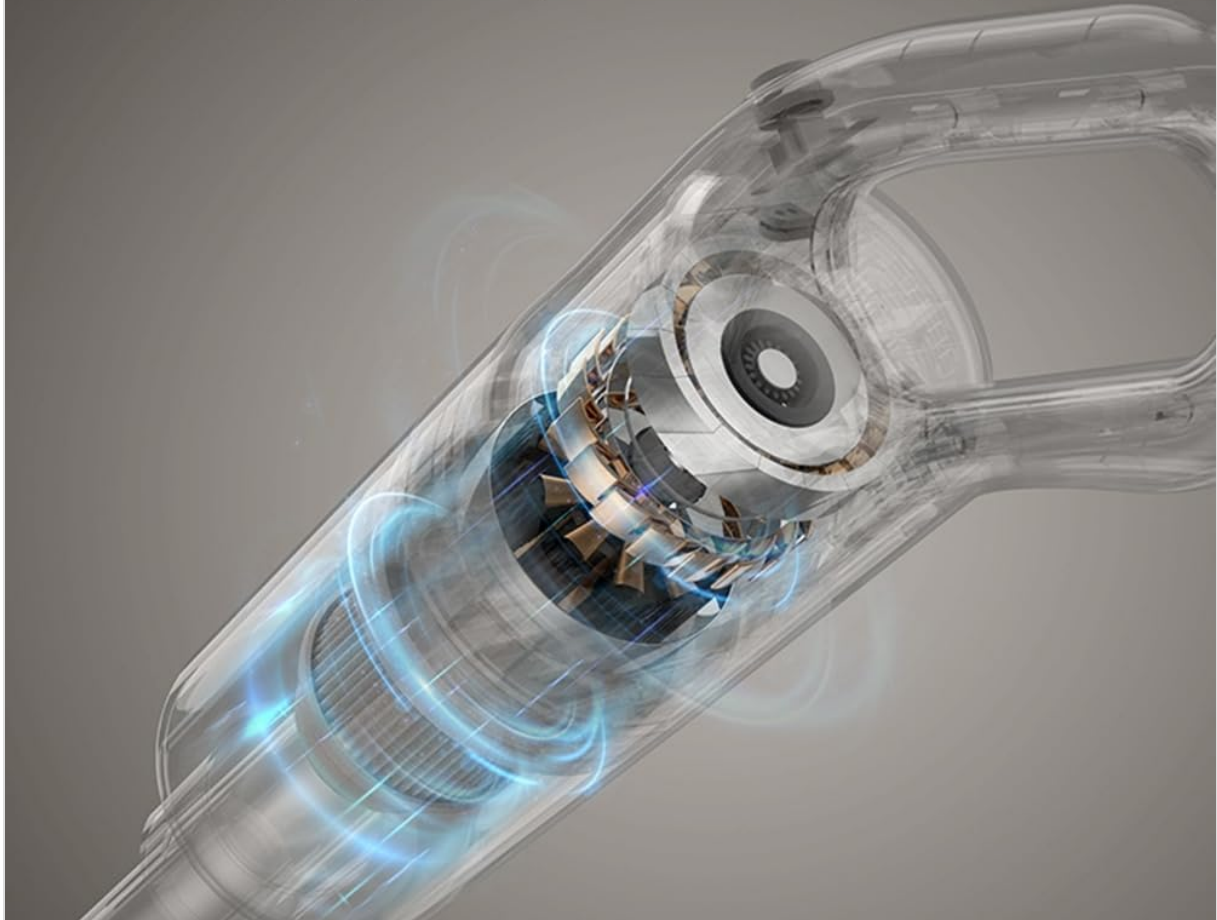

**Figure 4.3:** Detailed view of the 15000 Pa powerful suction system, featuring a high-power pure copper motor and an innovative counter-rotating double blade design for enhanced suction.

## Thin Floor Brush

Easy Access to Narrow and Bottom Areas,  
Cleaning Without Dead Space

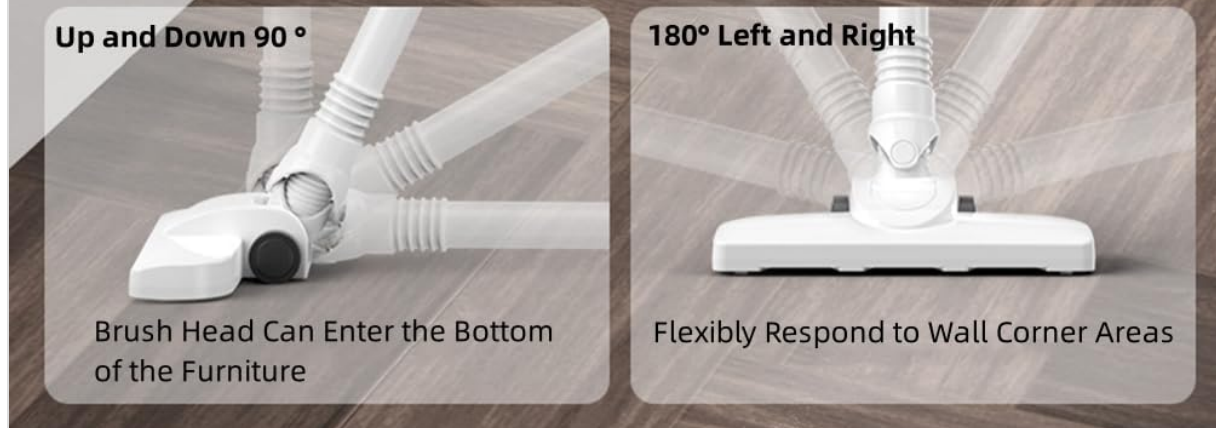

**Figure 4.4:** Demonstration of the thin floor brush's maneuverability, showing its ability to bend 90 degrees vertically and 180 degrees horizontally to access narrow and hard-to-reach areas.

## Upgraded Multiple Filtration System

Lock in the Dust, Clean Air Outlet

### Air Outlet Filter

Effective Filtration of Pollen, Dust, Etc.

### Inner Hood Dust and Gas Separation

Cyclone Separation to Separate Air and Dust

### HEPA Filtration

Filtering Nanoscale Dust

### Grey Cup Primary Filtration

Centrifugal Force Initial Separation of Dust and Gas



**Figure 4.5:** Diagram of the upgraded multiple filtration system, which includes primary filtration, cyclone separation, HEPA filtration, and an air outlet filter to capture dust and ensure clean air exhaust.

## Multiple Cleaning Scenarios, Responding to Different Needs

### Floor Brush

Suitable for Floor Tiles



### Round Head Brush

Suitable for Beds, Sofas and Tables



### Long Flat Suction Head

Suitable for Dead Ends in Crevices



**Figure 4.6:** Examples of multiple cleaning scenarios using the included attachments: Floor Brush for tiles, Round Head Brush for beds, sofas, and tables, and Long Flat Suction Head for crevices.

Your browser does not support the video tag.

**Video 4.1:** This video demonstrates the powerful suction capabilities of the vacuum cleaner on various surfaces and debris, showcasing its effectiveness in different cleaning tasks.

## 5. Setup

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Pole:** Insert the extension pole into the main vacuum unit until it clicks

securely into place.

2. **Attach the Floor Brush:** Connect the floor brush to the other end of the extension pole. Ensure it is firmly attached.
3. **Alternative Handheld Setup:** For handheld use, attach the desired nozzle (2-in-1 Long Flat Suction Nozzle or Small Hair Brush Suction Nozzle) directly to the main vacuum unit.
4. **Power Connection:** Plug the power cord into a standard electrical outlet (110V).

## 6. Operating Instructions

---

To operate your vacuum cleaner:

1. **Power On/Off:** Press the power button located on the main unit to turn the vacuum cleaner on or off.
2. **Cleaning Surfaces:**
  - For hard floors, tiles, wood, carpets, and rugs, use the floor brush with the extension pole.
  - For sofas, beds, tables, and car interiors, use the main unit with the Small Hair Brush Suction Nozzle.
  - For narrow gaps, corners, and hard-to-reach areas, use the main unit with the 2-in-1 Long Flat Suction Nozzle.
3. **Maneuvering:** The floor brush head can swivel 90 degrees up and down, and 180 degrees left and right, allowing for easy cleaning under furniture and around obstacles.
4. **Emptying the Dustbin:** When the dustbin is full, press the one-touch release button to detach it. Empty the contents into a waste bin.

## 7. Maintenance

---

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### 7.1 Cleaning the Dustbin and Filters

1. **Detach Dustbin:** Ensure the vacuum is unplugged. Press the dustbin release button and remove the dustbin from the main unit.
2. **Empty Dustbin:** Empty all collected debris into a trash receptacle.
3. **Disassemble Filters:** The internal components, including the HEPA filter and other filtration parts, are detachable. Carefully separate them.
4. **Wash Components:** Wash the dustbin and all filter components (except the main motor unit) with cold water. Do not use hot water or detergents.
5. **Dry Thoroughly:** Allow all washed parts to air dry completely before reassembling. Ensure the HEPA filter is absolutely dry to prevent blockage and maintain suction power.
6. **Reassemble:** Once dry, reassemble the filters and dustbin, then attach the dustbin back to the main unit.

### 7.2 General Care

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners.
- Check the floor brush for tangled hair or debris regularly and remove as needed.
- Store the vacuum cleaner in a dry place, away from direct sunlight and extreme temperatures.

## 8. Troubleshooting

If you encounter issues, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet issue; Damaged cord/plug	Ensure plug is fully inserted; Test outlet with another device; Contact customer support if cord/plug is damaged.
Low suction power	Dustbin full; Filters clogged; Blockage in nozzle/hose	Empty dustbin; Clean/wash filters and ensure they are dry; Check for and remove any blockages.
Unusual noise	Foreign object in brush head/hose; Motor issue	Turn off and unplug, then inspect for and remove foreign objects; If noise persists, contact customer support.
Dust escaping from vacuum	Dustbin not properly closed; Filters not installed correctly or damaged	Ensure dustbin is securely latched; Check filter installation; Replace damaged filters.

## 9. Specifications

Feature	Detail
Brand	Generic
Model Name	Light Weight Stick Vacuum Powerful Suction with Corded
Model Number	AN-20241225-06
Power Source	Corded Electric
Wattage	400 watts
Voltage	110 Volts
Suction Power	15000 Pa
Filter Type	HEPA Filter
Dustbin Capacity	800 Milliliters
Power Cord Length	5 Meter / 197 inches
Item Weight	3.3 Pounds
Item Dimensions (L x W x H)	11 x 4.72 x 42.5 inches
Noise Level	65 Decibels
Surface Recommendation	All floors
Included Components	2-in-1 Long Flat Suction Nozzle, Small Hair Brush Suction Nozzle

## 10. Warranty and Customer Support

---

For warranty information or technical assistance, please refer to the purchase documentation or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.