

[Manuals.plus](#) /

› [SUPERLEX](#) /

› SUPERLEX 15-in-1 Multifunction Steam Mop Instruction Manual

SUPERLEX Dampfreiniger Blau

SUPERLEX 15-in-1 Multifunction Steam Mop Instruction Manual

Model: Dampfreiniger Blau

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your SUPERLEX 15-in-1 Multifunction Steam Mop. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

The SUPERLEX 15-in-1 Multifunction Steam Mop is designed for versatile cleaning across various surfaces, utilizing high-temperature steam to clean without chemical detergents. It features a 380 ml water tank, providing approximately 15 minutes of continuous steam.



Image 1: SUPERLEX 15-in-1 Multifunction Steam Mop

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. This includes:

- Read all instructions before use.
- Use the appliance only for its intended household use as described in this manual.
- Do not immerse the appliance in water or other liquids.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Keep steam away from hands, face, and other body parts. Steam is hot and can cause burns.
- Do not fill the water tank with anything other than clean tap water. Distilled water is recommended to

prevent mineral buildup.

- Ensure the water tank cap is securely closed before operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Carefully unpack your steam mop and verify that all items are present and in good condition. The package should contain the following components:

- Main Steam Mop Unit
- Measuring Cup
- Funnel
- Large Round Brush
- Small Round Brush
- Cloth for Garment Steamer
- Carpet Glider
- Cloth for Carpet Glider
- Window and Garment Steamer Tool
- Grout Cleaning Tool
- Angled Nozzle
- Scraper Tool
- Conical Steam Nozzle
- Two Mop Heads (already mentioned as part of the main unit or included with carpet glider)

12-in-1 Zubehör

Dieser vielseitige dampfreiniger wird mit 12 praktischen aufsätzen geliefert und ist perfekt für die tägliche reinigung im haushalt geeignet.



Image 2: Included Accessories for the SUPERLEX Steam Mop

4. ASSEMBLY AND SETUP

4.1 Assembling the Steam Mop

1. **Attach Handle:** Insert the handle into the main body of the steam mop until it clicks securely into place.
2. **Attach Mop Head:** Connect the desired mop head to the bottom of the main unit. Ensure it is firmly attached.
3. **Attach Microfiber Pad:** Secure a clean microfiber cleaning pad to the mop head.

4.2 Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Locate the water tank cap, usually on the front or side of the main unit. Unscrew or open the cap.
3. Using the provided measuring cup and funnel, carefully fill the water tank with clean tap water. Do not overfill. Distilled water is recommended to prolong the life of the appliance and prevent mineral buildup.

4. Securely close the water tank cap.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. After assembly and filling the water tank, plug the steam mop into a grounded electrical outlet.
2. The indicator light will illuminate, signaling that the appliance is heating up.
3. Allow approximately 30 seconds for the steam mop to reach operating temperature. The indicator light may change or turn off when ready.
4. Press the steam release button or trigger to begin steaming. Move the mop slowly over the surface to be cleaned.
5. To stop steaming, release the button/trigger. Unplug the appliance when finished.

5.2 Using Accessories for Specific Tasks

The SUPERLEX 15-in-1 Steam Mop includes various accessories for diverse cleaning needs. Ensure the appliance is unplugged and cooled before changing accessories.

- **Floor Cleaning:** Use the main mop head with a microfiber pad. For carpets, attach the carpet glider over the mop head.
- **Handheld Steamer:** Detach the main unit from the handle and mop head to use as a handheld steamer. Attach the desired nozzle or brush.
- **Grout Cleaning:** Attach the grout cleaning tool or a small round brush to the handheld unit. Direct steam along grout lines.
- **Window/Mirror Cleaning:** Use the window and garment steamer tool with a cloth.
- **Garment Steaming:** Attach the cloth for garment steamer to the window/garment tool or use the conical steam nozzle for delicate fabrics.
- **Kitchen Surfaces:** Use the large or small round brushes with the handheld unit for scrubbing stubborn grease and grime.
- **Hard-to-Reach Areas:** The angled nozzle and conical steam nozzle are suitable for corners and tight spaces.
- **Scraping:** The scraper tool can be used with steam to loosen baked-on residue.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your steam mop.

6.1 After Each Use

1. Unplug the steam mop and allow it to cool completely.
2. Empty any remaining water from the tank.
3. Remove and wash the microfiber cleaning pads. They can typically be machine washed.
4. Wipe down the exterior of the appliance with a damp cloth.

6.2 Descaling (Monthly or as Needed)

Mineral buildup from tap water can affect steam production. Descale your steam mop regularly:

1. Mix a solution of 1/3 white vinegar and 2/3 tap water.
2. Pour the solution into the water tank.
3. Plug in the appliance and allow it to produce steam until the tank is empty.
4. Repeat the process with fresh tap water to rinse out any vinegar residue.

6.3 Storage

Store the steam mop in a cool, dry place. Ensure the water tank is empty and the appliance is clean before storage.

7. TROUBLESHOOTING

If you encounter issues with your steam mop, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty Appliance not heated Mineral buildup	Refill water tank Allow 30 seconds for heating Perform descaling procedure
Water leaking from mop head	Microfiber pad not attached correctly Mop head not securely attached	Ensure pad is properly secured Reattach mop head firmly
Power indicator light not on	Appliance not plugged in Power outlet malfunction	Check power connection Try a different outlet

8. TECHNICAL SPECIFICATIONS

- **Brand:** SUPERLEX
- **Model Number:** Dampfreiniger Blau
- **Power:** 1500 Watts
- **Voltage:** 230V
- **Water Tank Volume:** 380 Milliliters
- **Item Weight:** 2.9 Kilograms
- **Dimensions (Display):** 28 x 26 x 110 centimeters
- **Power Source:** Corded Electric
- **Special Features:** Chemical-free cleaning, 15-in-1 multifunction, eliminates up to 99.99% of viruses and bacteria.
- **Recommended Surfaces:** Floors, furniture, kitchen, car, cushions, various household surfaces.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or if you require assistance with your SUPERLEX 15-in-1 Multifunction Steam Mop, please contact SUPERLEX customer support through the retailer where the product was purchased

or refer to the official SUPERLEX website for contact details.