

Sheawasy GL-FC-4K-WHITE

Sheawasy Mini Camera Keychain Instruction Manual

Model: GL-FC-4K-WHITE



PRODUCT OVERVIEW

The Sheawasy Mini Camera Keychain is a compact and versatile digital camera designed for on-the-go photography and videography. Its miniature size makes it a convenient accessory, while its features allow for capturing nostalgic photos and vintage video effects.

Key features include:

- **Compact Design:** Miniature size makes it a keychain-ready gadget for on-the-go photography and videography.
- **High-Quality Imaging:** Captures 1080p videos and photos with its wide-angle lens for expansive shots.
- **Convenient Display:** 1.4-inch LCD screen lets you preview and review your captures instantly.
- **Ample Storage:** Comes with a 32GB memory card to store thousands of photos and hours of video footage.
- **Versatile Usage:** Ideal for capturing special moments, vlogging, outdoor adventures, and more.



Image: The Sheawasy Mini Camera Keychain in white, displayed with its charging base, 32GB memory card, keychain attachment, and wrist lanyard. The camera features a retro design with a prominent lens and a small LCD screen on the back.

WHAT'S IN THE BOX

Your Sheawasy Mini Camera Keychain package includes the following items:

- Camera Body & Battery Pack
- Lanyard
- Key chain
- 32GB Memory card (installed)
- USB Cable

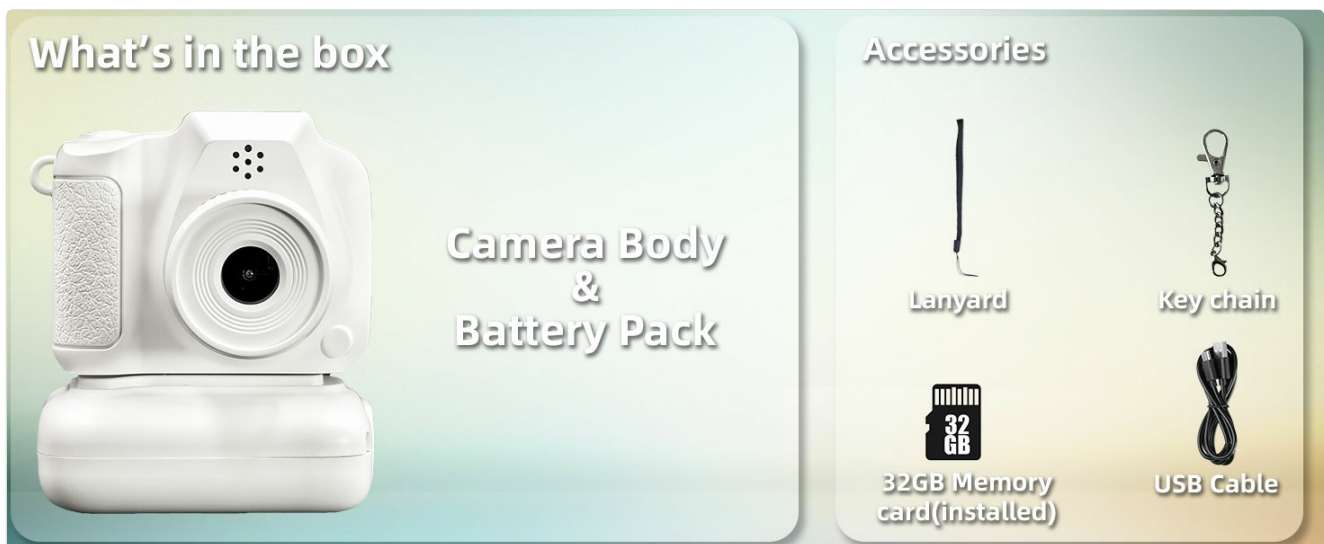


Image: A visual representation of the product packaging contents, showing the camera body with its detachable battery pack, a lanyard, a keychain, a 32GB memory card, and a USB charging cable.

SETUP

1. **Charging the Camera:** Connect the camera to a USB power source using the provided USB-C cable. The camera is rechargeable. The battery pack also charges via USB-C and provides extended power.



Image: The mini camera detached from its battery pack, showing the connection point. The battery pack has a USB-C port for charging and a quarter-inch tripod mount.

2. **Inserting the Memory Card:** The camera comes with a 32GB memory card pre-installed. Ensure it is properly seated in the TF card slot. This card is essential for storing photos and videos.



Image: The mini camera displaying "32GB Inside" on its screen, indicating the included memory card for storage.

3. **Attaching Accessories:** You can attach the included lanyard or keychain to the camera for portability. The detachable battery pack also features a quarter-inch thread mount for tripod or selfie stick compatibility.



Image: The mini camera shown attached to a keychain, highlighting its portability and design as a wearable accessory.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button (usually located on the side or top) to turn the camera on or off. The 1.4-inch LCD screen will activate.
2. **Taking Photos:** In photo mode, press the shutter button (typically a larger button on the top or side) to capture a still image. The camera supports 2 MP photos (1920x1080p).

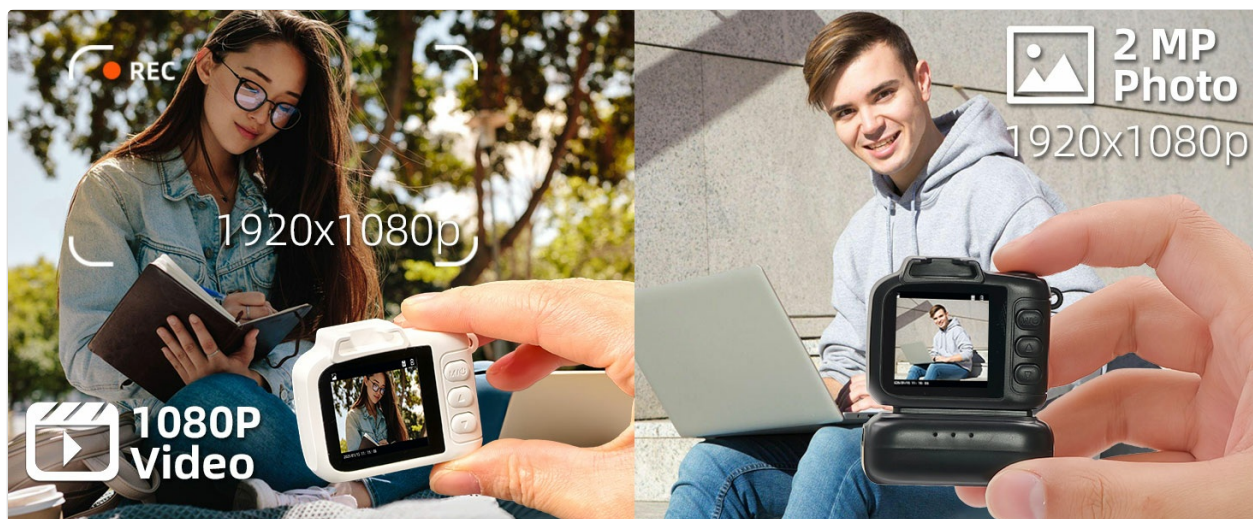


Image: A banner illustrating the camera's photo and video capabilities, indicating 2 MP photo resolution (1920x1080p) and 1080p video recording.

3. **Recording Videos:** Switch to video mode (refer to the camera's on-screen interface or buttons for mode selection). Press the record button to start and stop video recording. The camera captures 1080p videos.
4. **Using Filters:** The camera offers various filters (e.g., Wine Red, Grass Green, Light Blue, Monochrome, Sunshine Yellow) to add a vintage aesthetic to your photos and videos. Navigate through the menu to select your desired filter.



Image: A display of the camera's filter options, showing examples of Wine Red, Grass Green, Light Blue, Monochrome, and Sunshine Yellow effects on an image.

5. **Viewing Content:** Use the 1.4-inch LCD screen to preview live footage, view working modes, and directly review past recordings. Use the navigation buttons to browse through your captured media.
6. **Transferring Files:** To transfer files to a computer, connect the camera using the provided USB cable. A removable disk will appear in your computer's disk drive, allowing you to copy, edit, and play your files.



Image: The mini camera connected to a laptop via a USB cable, illustrating the process of outputting files to a computer.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. For the lens, use a specialized lens cleaning cloth. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low or no battery charge.	Charge the camera using the provided USB cable. Ensure the charging indicator light is on.
Cannot take photos/videos.	Memory card full or not inserted correctly.	Check if the 32GB memory card is properly inserted. Transfer files to a computer to free up space if full.
Poor image/video quality.	Low light conditions, dirty lens, or expectations for modern high-resolution.	Ensure adequate lighting. Clean the lens with a soft cloth. Note that the camera is designed for a nostalgic, retro aesthetic, not modern high-resolution output.
Camera is unresponsive.	Temporary software glitch.	Try turning the camera off and on again. If unresponsive, allow the battery to fully drain and then recharge.

SPECIFICATIONS

- **Brand:** Sheawasy
- **Model Name:** GL-FC-4K-WHITE
- **Maximum Webcam Image Resolution:** 2 MP
- **Effective Still Resolution:** 2 MP
- **Video Resolution:** 1080p (as per feature bullets, though spec says SHXJ-02-PINK which is likely a model ID)
- **Screen Size:** 1.4 Inches
- **Display Type:** LCD

- **Photo Sensor Technology:** CMOS
- **Lens Type:** Wide Angle
- **Real Angle Of View:** 130 Degrees
- **External Memory Size:** 32 GB (included)
- **Supported File Format:** AVI
- **Connectivity Technology:** USB
- **Battery Cell Type:** Lithium Polymer
- **Battery Weight:** 8 Grams
- **Water Resistance Level:** Not Water Resistant

WARRANTY AND SUPPORT

This Sheawasy product comes with a **1-year warranty** from the date of purchase.

For further assistance, product information, or to explore other Sheawasy products, please visit the official Sheawasy Store:

[Visit the Sheawasy Store](#)



© 2025 Sheawasy. All rights reserved.