

[Manuals.plus](#) /

› [SakerPlus](#) /

› SakerPlus Cordless Grass Shears & Hedge Trimmer (Model SK-GS08A) Instruction Manual

SakerPlus SK-GS08A

SakerPlus Cordless Grass Shears & Hedge Trimmer Instruction Manual

MODEL: SK-GS08A

Introduction

Welcome to your new SakerPlus 2-in-1 Cordless Grass Shears and Hedge Trimmer. This versatile tool is designed for efficient trimming of grass, small shrubs, and hedges in your yard and garden. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



This image displays the SakerPlus 2-in-1 Cordless Grass Shears and Hedge Trimmer in action, highlighting its dual functionality for maintaining both lawn edges and shrubbery.

Important Safety Information

Always prioritize safety when operating power tools. Failure to follow these instructions may result in injury or damage to the tool.

- **Triple Safety System:** The trimmer features a blade cover, a safety button on the handle, and a safety lock. To operate, press and hold the safety button, then press the ON/OFF switch. Once the machine is running, you can release the safety lock for continuous operation. This system prevents unintentional starting.
- Keep hands and body parts away from blades during operation.

- Wear appropriate personal protective equipment, including safety glasses and gloves.
- Ensure the work area is clear of debris and other persons, especially children and pets.
- Do not operate the tool in wet conditions or near flammable liquids or gases.
- Disconnect the tool from the power source before cleaning, maintenance, or changing blades.
- Store the tool in a dry, secure place, out of reach of children.

Package Contents

Verify that all items are present in the package:

- SakerPlus Main Unit
- Grass Shear Blade (3.25" cutting width)
- Hedge Trimmer Blade (5.5" cutting length)
- Type-C Charging Cable
- User Manual

Product Overview

Familiarize yourself with the components of your SakerPlus trimmer.


2-IN-1 CUTTING FUNCTIONALITY



This image illustrates the two interchangeable blade types: the grass shear blade (top) and the hedge trimmer blade (bottom). The grass shear blade has a maximum cutting width of 3.25 inches, while the hedge trimmer blade has a maximum cutting length of 5.50 inches.

SAFETY LOCK DESIGN

One-Handed Ease,
Prevent Accidental
Starting

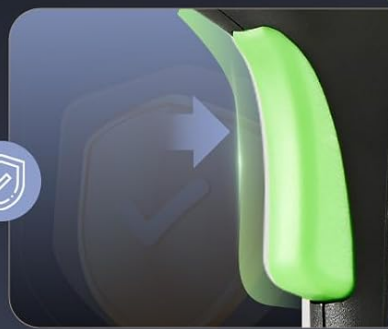

NOTE:

Hold the safety button,
then the ON/OFF switch.
Release the safety
lock to keep it running.



This image highlights the safety lock design. To operate the tool, first press and hold the green safety button, then press the ON/OFF switch. The safety lock can be released for continuous operation once the tool is running.

CUTTING-EDGE SHARP AND TOUGH BLADES



This image shows the non-slip ergonomic grip of the trimmer, designed for comfortable and secure handling during use.

Setup

Charging the Battery

The SakerPlus trimmer is powered by a 7.2V 1500mAh lithium-ion battery.

1. Connect the provided Type-C charging cable to the charging port on the trimmer.
2. Connect the other end of the cable to a compatible USB power source (e.g., Type-C charger, power bank, car charger, PC).
3. The charging indicator light will show red while charging.
4. Charging typically takes 3-5 hours for a full charge.
5. The indicator light will turn green when the battery is fully charged.



This image shows the Type-C charging port and the charging indicator lights. A red light indicates charging, and a green

light indicates a full charge. The battery provides up to 60 minutes of no-load running time on a full charge.

Installing/Changing Blades

Ensure the tool is turned off and disconnected from any power source before changing blades.

1. Locate the blade release button on the trimmer.
2. Press the release button to unlock the current blade.
3. Carefully remove the installed blade.
4. Align the desired blade (grass shear or hedge trimmer) with the slot.
5. Slide the blade into place until it clicks securely.

Step 1 Press the Release Button



Step 2 Slot the Blade into Place



CONVERTIBLE DESIGN >>

Easily converts the lawn mower into a hedge trimmer;



This image demonstrates the two steps for changing blades. Step 1 shows pressing the release button, and Step 2 shows sliding the new blade into place.

Operating Instructions

Starting the Trimmer

1. Ensure the correct blade is securely installed.
2. Hold the trimmer firmly with both hands if possible, or one hand if comfortable, maintaining a secure grip on the ergonomic handle.
3. Press and hold the green safety button located on the handle.
4. While holding the safety button, press the ON/OFF switch to start the motor.
5. Once the motor is running, you may release the safety button for continuous operation.

Using the Grass Shears

The grass shear blade is ideal for precise trimming around edges, flowerbeds, and small patches of grass.

1. Position the grass shear blade parallel to the ground.
2. Move the trimmer slowly and steadily along the desired cutting path.
3. Avoid forcing the blade through thick grass to prevent stalling.



A person is shown using the SakerPlus trimmer with the grass shear attachment to trim grass edges.

Using the Hedge Trimmer

The hedge trimmer blade is suitable for shaping small hedges and shrubs, and trimming small branches up to 0.31 inches (8mm) in diameter.

1. Hold the trimmer at a comfortable angle, ensuring a stable grip.
2. Move the trimmer in a sweeping motion across the hedge or shrub.
3. Do not attempt to cut branches thicker than the maximum cutting capacity.



A person is shown using the SakerPlus trimmer with the hedge trimmer attachment to shape a small hedge.



This image illustrates the maximum cutting thickness for the hedge trimmer blade, which is 0.31 inches (8mm) in diameter. The blades are sharp and designed for efficient cutting.

Maintenance

Cleaning

Regular cleaning ensures the longevity and performance of your trimmer.

1. Always ensure the trimmer is turned off and the battery is removed or disconnected before cleaning.
2. Use a soft brush or cloth to remove grass clippings and debris from the blades and housing.
3. For stubborn residue, a damp cloth can be used, but ensure no water enters the motor housing.
4. After cleaning, dry the blades thoroughly to prevent rust. Applying a light coat of machine oil to the blades can also help prevent rust and maintain sharpness.

Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture.

For long-lasting battery performance, it is recommended to charge the battery every few months, even when not in use.

Always store the trimmer with the blade cover in place to prevent accidental injury and protect the blades.

Troubleshooting

If you encounter issues with your SakerPlus trimmer, refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not start	Battery is not charged	Charge the battery fully (refer to "Charging the Battery").
Trimmer does not start	Safety button not pressed correctly	Ensure the safety button is pressed and held before pressing the ON/OFF switch.
Blades are not cutting effectively	Blades are dull or dirty	Clean the blades and ensure they are free of debris. Sharpen or replace blades if necessary.
Blades are not cutting effectively	Attempting to cut material too thick	Do not exceed the maximum cutting capacity (0.31 inches for hedge trimmer).
Short operating time	Battery not fully charged or aging	Ensure battery is fully charged. Battery capacity may decrease over time; consider replacement if performance significantly degrades.

Specifications

Feature	Detail
Brand	SakerPlus
Model Number	SK-GS08A
Power Source	Battery Powered
Battery Type	7.2V 1500mAh Lithium-Ion
Charging Time	3-5 Hours
Operating Time	Up to 60 minutes (no load)
Motor Speed	1100 RPM
Hedge Trimmer Blade Length	5.5 Inches
Grass Shear Blade Width	3.25 Inches
Max Cutting Thickness	0.31 Inches (8mm)
Item Weight	1.21 Pounds

Feature	Detail
Product Dimensions	10"L x 2.38"W x 5"H
Blade Material	Stainless Steel
Material	Aluminum, Stainless Steel
UPC	757940661517

Warranty and Support

Specific warranty information is not provided in this manual. Please refer to the product packaging or contact SakerPlus customer support for details regarding warranty coverage and technical assistance.

For support, visit the official SakerPlus website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question