

UKLISS wt-626-1

UKLISS Airstyler Pro 7-in-1 Professional Hair Styler

Model: wt-626-1 | Brand: UKLISS

INTRODUCTION

Thank you for choosing the UKLISS Airstyler Pro 7-in-1 Professional Hair Styler. This versatile device is designed to dry, curl, straighten, and style your hair with professional results. Please read this instruction manual carefully before use to ensure safe operation and optimal performance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Always unplug the appliance immediately after use.
- Do not use while bathing or in the shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
 - Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
 - Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
 - Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
 - Never use while sleeping.

- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.
- Wear gloves when using the hair dryer or changing attachments to avoid burns, especially when operating at high temperatures.

PRODUCT OVERVIEW

The UKLISS Airstyler Pro is a 7-in-1 multi-styler designed for various hair styling needs. It features a powerful 1400W motor and ionic technology for smooth, frizz-free results. The main unit comes with several interchangeable attachments:

- Main Unit (Hair Dryer Base)
- 30.5mm Auto Left/Right Hair Curler (2 pieces)
- Round Brush
- Massage Brush
- Smooth Nozzles (Concentrator)
- Diffuser



Image: The UKLISS Airstyler Pro main unit displayed with all its interchangeable attachments, including two curling barrels, a round brush, a massager brush, a concentrator nozzle, and a diffuser. Each attachment is labeled with its function and recommended settings.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the 'Product Overview' are present.
2. **Attaching Accessories:** To attach an accessory, align the desired attachment with the main unit's connection point. Push and twist gently until it clicks securely into place.
3. **Detaching Accessories:** To detach, press the release button (if present) or twist gently in the opposite direction and pull the attachment off. Ensure the appliance is cool before changing attachments.

OPERATING INSTRUCTIONS

Before styling, ensure your hair is towel-dried and detangled. Plug the appliance into a suitable power outlet.

Power On/Off and Settings

- **Power:** Press and hold the power button for 3 seconds to turn the appliance ON or OFF.
- **Temperature Settings:** The appliance offers 3 temperature settings:
 - **Setting 1 (Low Temperature):** Suitable for dry or fine hair, ideal for summer use.
 - **Setting 2 (Medium Temperature 75°C):** For semi-dry or normal hair, suitable for styling.
 - **Setting 3 (High Temperature 130°C):** For thick, wet, and curly hair, suitable for quick drying in winter.
- **Wind Speed Settings:** The appliance offers 3 wind speed settings. Adjust according to your hair type and styling needs.

Using the Attachments

1. Uniform Air Hair Dryer (Main Unit)

Use the main unit without any attachments for fast and efficient hair drying. The high-speed 1400W airflow helps dry hair quickly, reducing heat damage.



Image: The main unit of the UKLISS Airstyler Pro used as a hair dryer, demonstrating its function for fastest drying.

Recommended Setting: High temperature 130°C + High speed for fastest drying.

2. 30.5mm Auto Left/Right Hair Curler

These attachments use the Coanda effect to automatically wrap hair around the barrel, creating natural curls. Use the left and right curlers for curls in different directions.



30.5mm AUTO Left/Right Hair Curler
Coanda effect for natural curls
Recommended Setting: High temperature 130°C+High speed



Round Brush
Create a voluminous hair styler
Recommended Setting: Medium temperature 75°C+Middle speed




Massage Brush
Make your hair smoother and straightener
Recommended Setting: Medium temperature 75°C+High speed



Uniform Air Hair Dryer
Fastest drying, saving your time



Smooth Nozzles
Make your hair smoother
Recommended Setting: High temperature 130°C+High speed

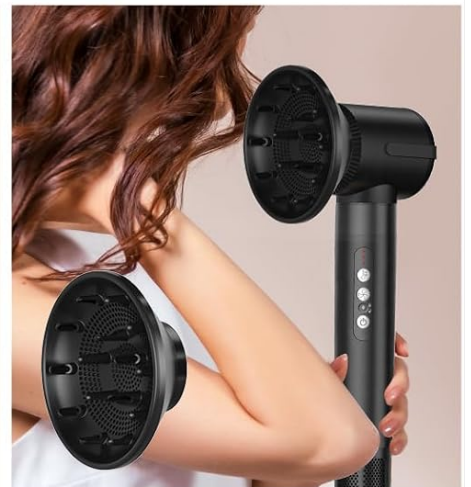

Diffuser
Helping maintain curls and waves without any frizz
Recommended Setting: cool wind+low speed

Image: A user demonstrating the 30.5mm Auto Left/Right Hair Curler attachment, showing hair being wrapped around the barrel for curling.

Recommended Setting: High temperature 130°C + High speed.

3. Round Brush

Ideal for creating voluminous hair styles and adding body. The nylon bristles help prevent tangles and leave hair fluffy and natural.

200 Million Negative Ions

21% ↑
Shiny

16% ↑
Shiny

40% ↓
Shiny



Image: A user styling hair with the Round Brush attachment, demonstrating its use for adding volume and shape.

Recommended Setting: Medium temperature 75°C + Middle speed.

4. Massage Brush

Designed to make your hair smoother and act as a straightener. The brush helps to detangle and smooth hair while drying.

HOW TO REPL THE HAIR DRYER BRUSH

INSTALLATION



Step1: Match the card slot of brush head and handle.



Step2: Press and hold the button, Install the brush head.

DISASSEMBLY



Step1: Press and hold the button.



Step2: Remove the brush head.

Note: Wear anti-scalding gloves when changing the Remova blow head to prevent burns.

Image: A user demonstrating the Massage Brush attachment, using it to smooth and straighten hair.

Recommended Setting: Medium temperature 75°C + High speed.

5. Smooth Nozzles (Concentrator)

These nozzles concentrate the airflow for precise styling and smoothing, helping to make your hair smoother and achieve a sleek finish.



Image: The Smooth Nozzles attachment shown on the UKLISS Airstyler Pro, indicating its use for directing airflow for smoother hair.

Recommended Setting: High temperature 130°C + High speed.

6. Diffuser

The diffuser helps to maintain natural curls and waves without causing frizz. It disperses air gently over a larger area.



Image: A user demonstrating the Diffuser attachment, used to enhance and maintain natural curls and waves.

Recommended Setting: Cool wind + Low speed.

Important Note: The longer the hair dryer is used, the higher its temperature may become. Always handle with care and consider wearing gloves when operating at high temperatures or changing attachments to prevent burns. Achieving the best curling effect with multiple brush attachments may require practice.

MAINTENANCE

- Cleaning:** Ensure the appliance is unplugged and completely cool before cleaning. Wipe the main unit and attachments with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water. Regularly clean the air inlet filter to

prevent dust and hair buildup, which can affect performance.

2. **Storage:** Store the appliance and its attachments in a cool, dry place, away from direct sunlight and moisture. Do not wrap the power cord tightly around the appliance, as this can damage the cord.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; power button not held long enough.	Ensure plug is securely inserted. Test outlet with another device. Press and hold power button for 3 seconds.
Weak airflow or overheating.	Air inlet/outlet blocked; filter dirty.	Unplug and allow to cool. Clean air inlet filter. Ensure air outlets are clear.
Attachments not securing properly.	Incorrect alignment; debris in connection.	Ensure attachment is aligned correctly and twisted until it clicks. Check for any obstructions.
Hair not curling/styling effectively.	Incorrect temperature/speed setting; hair too wet/dry; technique needs practice.	Adjust settings according to hair type. Ensure hair is damp for best curling results. Practice technique as described in operating instructions.

SPECIFICATIONS

Feature	Detail
Model Number	wt-626-1
Brand	UKLISS
Power (Watts)	1400 Watts
Motor Speed	110,000 RPM
Power Source	Corded Electric
Special Feature	Ionic Technology
Number of Speed Settings	3
Number of Temperature Settings	3 (Low, Medium 75°C, High 130°C)
Maximum Temperature	130 Degrees Celsius
Material	Plastic
Dimensions (L x W x H)	1 x 1 x 1 cm (Product); 10P x 10l x 10H millimeters (Item)
Weight	1.64 kilograms
Included Components	Massage Smoothing Brush, Round Brush, Nozzle, Diffuser, 2 Curling Barrels

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact UKLISS customer service through the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question