

[Manuals.plus](#) /

› [Soundcore](#) /

› Soundcore Boom 2 Pro Bluetooth Speaker User Manual

Soundcore A3134

Soundcore Boom 2 Pro Bluetooth Speaker User Manual

Model: A3134

1. INTRODUCTION

Thank you for purchasing the Soundcore Boom 2 Pro Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and safety.



Image 1: Soundcore Boom 2 Pro Bluetooth Speaker with carrying strap.

2. SAFETY INSTRUCTIONS

- Do not expose the device to extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- Ensure all ports are securely closed when using the speaker near water to maintain its IP68 rating.
- Use only certified charging cables and adapters.
- Keep out of reach of children.

3. WHAT'S IN THE BOX

The Soundcore Boom 2 Pro package includes:

- Soundcore Boom 2 Pro Speaker
- USB-C Charging Cable (Note: 30W charger not included)
- Quick Start Guide

4. PRODUCT OVERVIEW

Key Features

- **140W Powerful Bass:** Experience deep, resonant sound with two 50W woofers and two 20W tweeters.
- **BassUp 2.0 Technology:** Delivers ultra-deep 40Hz bass, 1.6 times more powerful than previous generations.
- **2+2 Stereo Clarity:** Intelligent crossover technology ensures crystal-clear highs and rich low frequencies.
- **20-Hour Playtime:** Enjoy extended listening sessions on a single charge.
- **30W Fast Charging:** Fully recharge the speaker in approximately 3 hours.
- **Integrated 10W Power Bank:** Charge your essential devices on the go.
- **IP68 Rating:** Fully waterproof, dustproof, and oil-resistant; the speaker can even float.
- **Customizable EQ:** Adjust audio settings via the Soundcore app.
- **PartyCast 2.0:** Connect over 100 compatible Soundcore speakers for synchronized audio.
- **Dynamic RGB Lights:** Eight customizable light effects to enhance your listening experience.

Visual Features



Image 2: Diagram highlighting the integrated handle, removable shoulder strap, 3D metallic grille, and rhythmic light show.



Image 3: Internal view of the speaker, showing two 50W woofers, two 20W tweeters, and passive radiators with light show.

5. SETUP

5.1 Charging the Speaker

Before first use, fully charge your Soundcore Boom 2 Pro. Connect the provided USB-C cable to the speaker's charging port and a 30W (or higher) USB wall adapter (not included). The charging indicator will show progress, and the speaker will be fully charged in approximately 3 hours.

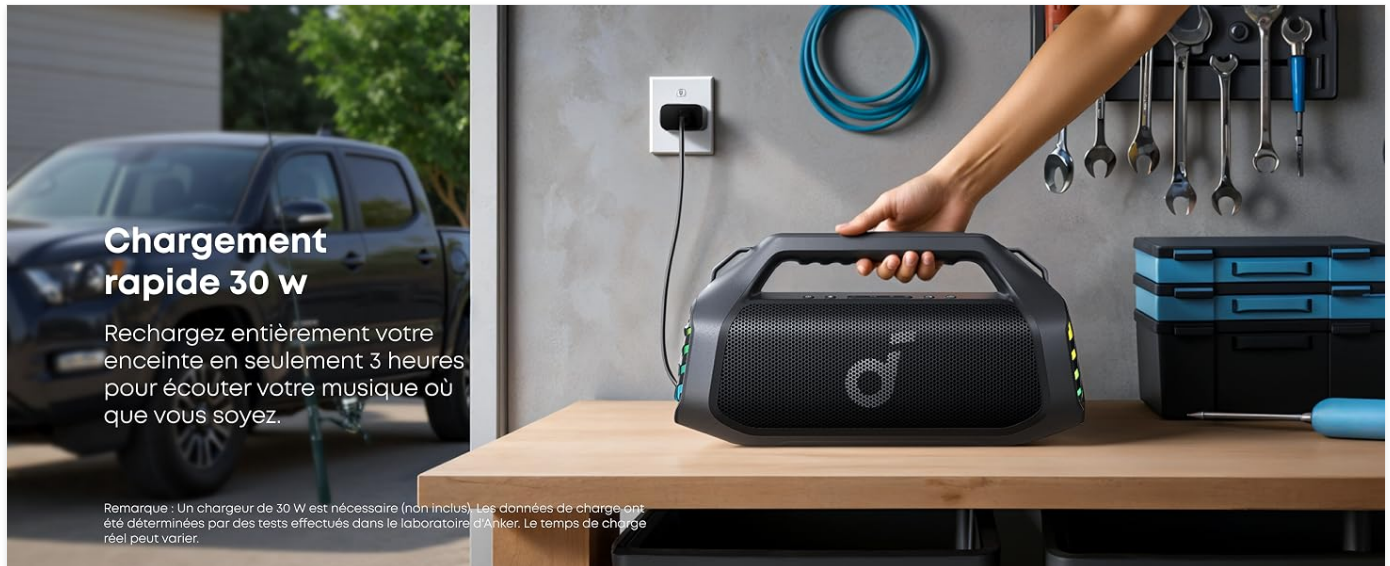


Image 4: The Soundcore Boom 2 Pro connected to a power outlet for charging.

5.2 Bluetooth Pairing

1. Power on the speaker. The Bluetooth indicator will flash.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for 'Soundcore Boom 2 Pro'.
3. Select the speaker from the list to connect. A voice prompt will confirm successful pairing.

5.3 PartyCast 2.0 Pairing (for multiple speakers)

To connect multiple Soundcore Boom 2 Pro speakers for a synchronized audio experience:

1. Connect one speaker to your device via Bluetooth (this will be the primary speaker).
2. On the primary speaker, press the PartyCast button.
3. On all other Soundcore Boom 2 Pro speakers you wish to connect, press their PartyCast buttons.
4. The speakers will automatically connect, and audio will play across all paired devices.

Organisez des fêtes sensationnelles

Connectez plus de 100 enceintes ensemble grâce à la technologie PartyCast 2.0 pour une expérience sonore unique.



Image 5: Multiple Soundcore Boom 2 Pro speakers connected via PartyCast 2.0 for a larger sound experience.

6. OPERATING INSTRUCTIONS

6.1 Basic Controls

- **Power Button:** Press and hold to turn on/off.
- **Volume Up/Down:** Press to adjust volume.
- **Play/Pause Button:** Press to play or pause music.
- **Bluetooth Button:** Press to enter pairing mode.
- **BassUp Button:** Press to activate/deactivate BassUp 2.0.
- **Light Button:** Press to cycle through light effects.

6.2 Soundcore App Control

Download the Soundcore app from your device's app store to unlock advanced features:

- **Customizable Equalizer (EQ):** Fine-tune audio frequencies to your preference.
- **Light Effects:** Choose from 8 dynamic light effects and customize colors.
- **Firmware Updates:** Keep your speaker updated with the latest features and improvements.

Contrôlez le son, maîtrisez l'instant.

Personnalisez l'audio en temps réel grâce à l'égaliseur intégré : augmentez les basses, les médiums et les aigus pour créer le son parfait.

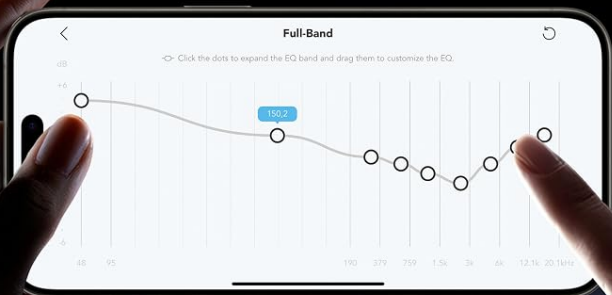


Image 6: A hand interacting with the Soundcore app's equalizer interface on a smartphone.



Image 7: Close-up of the speaker's dynamic RGB lights, illustrating various customizable effects.

6.3 Using as a Power Bank

The Soundcore Boom 2 Pro features an integrated 10W power bank. Connect your device to the speaker's USB-A output port using a compatible charging cable to charge your device.



Image 8: The Soundcore Boom 2 Pro connected to a smartphone, providing power to the phone.

7. MAINTENANCE

7.1 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure all port covers are sealed before cleaning with water.

7.2 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every three months to prolong battery life.

7.3 Water and Dust Resistance

The Soundcore Boom 2 Pro is IP68 rated, meaning it is protected against dust ingress and can withstand immersion in water up to 1.5 meters for 30 minutes. Always ensure the charging port cover is fully sealed before exposing the speaker to water or dust.



Image 9: The Soundcore Boom 2 Pro placed near a campfire, demonstrating its rugged design and suitability for outdoor use.

8. TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (Bluetooth indicator flashing). Disable and re-enable Bluetooth on your device. Move the speaker closer to your device.
No sound or low volume.	Check volume levels on both the speaker and your connected device. Ensure the speaker is not muted.
PartyCast not connecting.	Ensure all speakers are Soundcore Boom 2 Pro models and are within range. Press the PartyCast button on each speaker to initiate connection.

9. SPECIFICATIONS

Feature	Detail
Model Number	A3134
Output Power	140 Watts
Speaker Type	Outdoor
Connectivity Technology	Bluetooth 5.3
Audio Output Mode	Stereo (2.0 Surround Sound Channel Configuration)
Frequency Response	40 KHz

Feature	Detail
Power Source	Battery Powered
Battery Life	Up to 20 hours
Charging Time	Approx. 3 hours (with 30W charger)
Waterproof Rating	IP68
Dimensions (D x W x H)	44.2 x 15.1 x 24.8 cm
Weight	8.38 lbs (approx. 3.8 kg)
Control Method	Application, Buttons
Compatible Devices	Personal computer, Laptop, Smartphone, Tablet, Television

10. WARRANTY AND SUPPORT

Soundcore provides an 18-month limited warranty for this product. This warranty covers manufacturing defects and workmanship under normal use. For warranty claims or technical support, please contact Soundcore customer service through their official website or your retailer.

For more information, visit the official Soundcore website: www.soundcore.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

