

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution AKB76040301 Replacement Remote Control User Manual for LG TVs

Beyution AKB76040301

Beyution AKB76040301 Replacement Remote Control User Manual

For LG TV Models

INTRODUCTION

This manual provides instructions for the Beyution AKB76040301 Replacement Remote Control, designed for use with various LG TV models. This infrared remote control requires no programming and operates by simply inserting new batteries.



Figure 1: The Beyution AKB76040301 Replacement Remote Control. This image displays the full front view of the remote control, highlighting its ergonomic design and button layout.

SETUP: BATTERY INSTALLATION

To begin using your remote control, install two AAA alkaline batteries. Ensure correct polarity (+/-) as indicated inside the battery compartment.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two new AAA alkaline batteries, matching the positive (+) and negative (-) terminals with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

No additional programming or setup is required. The remote control is ready for use once batteries are installed.





Figure 2: Battery compartment. This image shows the back of the remote control with the battery cover removed, revealing the slots for two AAA batteries and polarity indicators.

OPERATING INSTRUCTIONS

The Beyution AKB76040301 remote control provides standard functions for your LG TV. Point the remote directly at your television's infrared receiver for optimal performance.

Key Functions:

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Channel Up/Down (▲ / ▼):** Changes channels sequentially.
- **Mute Button (⏏):** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back Button (↶):** Returns to the previous screen or menu.
- **Home Button (⌂):** Accesses the TV's main smart menu or home screen.
- **Quick Access Buttons (Netflix, Prime Video, Disney+, Rakuten TV):** Direct access to streaming services.



Figure 3: Remote in use. This image depicts a hand holding the remote control, pointing it towards an LG television displaying a smart TV interface, illustrating typical usage.

COMPATIBLE LG TV MODELS

This replacement remote control is compatible with a wide range of LG TV models. A partial list of compatible models includes:

- 32LM627BPUA, 50UP7560AUD, 65UP8000PUA, 43UP7000PUA, 43UP7100ZUF, 65UP8000PUR, 32LQ63006LA, 55UQ75006LF, 24TQ520S, 27TQ615S, 28TQ515S, 27TQ625S, 24TQ510S, 28TQ525S, 28LQ515S, 28LQ525S, 32LM577BPUA, 43LM6370PUB, 50UP7000PUA, 60UP7670PUB, 32LM637BPUB, 55UP7000PUA, 50UP7100ZUF, 55UP7100ZUF, 65UP7000PUA, 43LM5770PUA, 60UP8000PUA, 32LM577BZUA, 55UP7560AUD, 65UP7560AUD, 43UP7560AUD, 75UP7070PUD, 70UP7570AUD, 65UP7100ZUF, 43UP8000PUA, 43UP8000PUR, 70UP7070PUE, 70UP7170ZUC, 75UP7170ZUC, 86UQ91006LA, 75UP7570AUE, 43UP7670PUC, 43UP7700PUB, 50UP7670PUC, 50UP7700PUB, 55UP7670PUC, 55UP7700PUB, 60UP7700PUB, 65UP7670PUC, 65UP7700PUA, 65UP7700PUB, 70UP7670PUB, 70UP7770PUB, 75UP7670PUB, 75UP7770PUB, 50UP8000PUA, 50UP8000PUR, 55UP8000PUA, 55UP8000PUR, 60UP8000PUR, 70UP8070PUA, 70UP8070PUR, 75UP8070PUA, 75UP8070PUR, 82UP8770PUA,

If your specific LG TV model is not listed, please refer to the product packaging or contact customer support for compatibility verification.

TROUBLESHOOTING

If the remote control is not functioning as expected, consider the following common issues and solutions:

- **Remote Not Responding:**
 - Ensure new AAA alkaline batteries are correctly installed with proper polarity.
 - Replace old batteries with fresh ones.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Confirm you are pointing the remote directly at the TV.
- **Limited Range:**
 - The remote control is designed for a stable performance up to 8 meters (approximately 26 feet), with functionality extending to about 10 meters (approximately 33 feet) under ideal conditions. Ensure you are within this range.
 - Bright light sources or other electronic devices can sometimes interfere with infrared signals.

SPECIFICATIONS

Brand	Beyution
Model Number	AKB76040301
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	5 x 1 x 0.6 inches (approximately 12.7 x 2.54 x 1.52 cm)
Item Weight	1 ounce (approximately 28 grams)
Color	Black
Special Feature	Ergonomic design
Max Supported Devices	1 (Television)

PRODUCT SIZE



Figure 4: Remote control dimensions. This image shows the remote control with measurements indicating its length (17 cm / 6.69 in) and width (4.5 cm / 1.77 in).

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Care:** Remove batteries if the remote control will not be used for an extended period to prevent leakage, which can damage the device.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, as this can cause internal damage.

WARRANTY AND SUPPORT

The Beyution AKB76040301 Replacement Remote Control comes with a 1-year return policy, ensuring quality and customer satisfaction.

For any questions, compatibility concerns, or support needs, please contact Beyution customer service. You can typically find contact information on the product packaging or through the retailer where the product was purchased. Customer inquiries are generally addressed within 24 hours.

© 2024 Beyution Inc. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question