



Manuals.plus /

› LHRIVER /

› LHRIVER 3.0 Cu.ft Upright Freezer User Manual

## LHRIVER ID-D5888S-new

# LHRIVER 3.0 Cu.ft Upright Freezer User Manual

Model: ID-D5888S-new

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your new LHRIVER upright freezer. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or property damage.

### 1.1 General Safety

- This appliance is intended for household use only.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Ensure the appliance is unplugged before performing any maintenance or cleaning.
- Do not damage the refrigerant circuit. If the refrigerant circuit is damaged, avoid open flames and sources of ignition, and ventilate the room thoroughly.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

### 1.2 Electrical Safety

- Connect to a properly grounded outlet only.
- Do not use extension cords or ungrounded adapters.
- Do not pull the power cord to disconnect the appliance. Always grasp the plug firmly and pull straight out from the outlet.
- Do not operate the freezer with wet hands.

### 1.3 Child Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Properly dispose of old freezers. Remove the door and leave shelves in place to prevent children from becoming trapped inside.

## 2. PRODUCT OVERVIEW

This section provides an overview of your new LHRIVER 3.0 Cu.ft Upright Freezer, highlighting its key features and components.



Figure 2.1: Front view of the LHRIVER 3.0 Cu.ft Upright Freezer with its door open, revealing various frozen food items stored inside. Ice cubes and a lime are visible in the foreground, illustrating its capacity.

# Flexible Storage Space



Figure 2.2: Illustration demonstrating the flexible storage options within the freezer, including configurations with and without the removable shelf, along with internal dimensions for optimal space utilization.

## Key Components:

- **Adjustable Thermostat:** Located inside, allows precise temperature control for various freezing needs.
- **Removable Shelves:** Two durable shelves provide flexible storage configurations for items of different sizes.
- **Reversible Door Hinge:** The door can be configured to open from either the left or right side to suit your space.
- **Adjustable Feet:** Located at the bottom, these feet allow for leveling the unit on uneven surfaces, ensuring stable operation.
- **Thickened Sealing Strip:** Enhances cold air retention and improves energy efficiency.

## 3. SETUP AND INSTALLATION

### 3.1 Unpacking

Carefully remove all packaging materials, including tape and protective films. Inspect the freezer for any shipping

damage. Report any damage to your retailer immediately. Keep packaging materials until you are satisfied with the product.

### 3.2 Location Requirements

Place the freezer on a flat, stable surface strong enough to support the unit when fully loaded. Avoid placing it in direct sunlight or near heat sources such as stoves, radiators, or heating vents. Ensure adequate ventilation around the unit. Maintain at least 4 inches (10 cm) of space from walls and other appliances for proper air circulation and heat dissipation.



### 3.3 Leveling the Freezer

Your freezer must be level for proper operation. Use the adjustable feet at the bottom of the freezer to level the unit. Rotate the feet clockwise to raise and counter-clockwise to lower. A level freezer ensures proper door sealing, efficient cooling, and minimizes operational noise.



Figure 3.2: Close-up view of the adjustable foot, which can be rotated to precisely level the freezer on uneven floor surfaces.

### 3.4 Reversing the Door Hinge (Optional)

The door hinge can be reversed to open from the left or right side, depending on your installation space and preference. This process requires specific tools and careful handling. Refer to the detailed instructions in the separate door reversal guide (if provided) or contact customer support for assistance. It is recommended to have this procedure performed by a qualified technician if you are unsure.



Figure 3.3: Detail of the reversible door hinge mechanism, highlighting its design for flexible door opening configuration.

### 3.5 Power Connection

Before plugging in the freezer, allow it to stand upright for at least 2-4 hours. This allows the refrigerant fluids to settle, preventing potential damage to the cooling system. Connect the freezer to a dedicated, grounded electrical outlet with the correct voltage and frequency as specified on the rating label. Do not use extension cords or adapter plugs, as they can pose a fire hazard and reduce performance.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Temperature Control

Your freezer is equipped with a 7-grade temperature control dial located inside the unit. Rotate the dial to adjust the temperature setting according to your needs.

- **Settings 1-3:** Provide normal freezing temperatures, suitable for general frozen food storage.
- **Settings 4-7:** Provide deeper freezing temperatures, ideal for rapid freezing or long-term storage of sensitive items.

The approximate temperature range is 6.8°F to -7.6°F (-14°C to -22°C). Allow several hours for the internal temperature to stabilize after making an adjustment.

# 3.0 Cu.Ft Mini Freezer

Ice Bag/Ice Cream/Breast Milk/Seafood



Figure 4.1: Close-up of the 7-grade temperature control dial, indicating the range from the warmest setting (28°F/-2°C) to the coldest setting (-13°F/-25°C).

## 4.2 Loading the Freezer

Do not overload the freezer. For optimal performance, leave sufficient space between items to allow for proper air circulation. This helps maintain consistent temperatures throughout the compartment and ensures efficient freezing of new items. Avoid blocking the air vents inside the freezer.

## 4.3 Energy Saving Tips

- **Minimize Door Openings:** Avoid frequent or prolonged door openings to prevent warm air from entering and cold air from escaping.
- **Check Door Seal:** Regularly inspect and clean the door gasket to ensure a tight seal. A compromised seal can lead to energy loss and frost buildup.
- **Cool Food Before Freezing:** Allow hot food to cool to room temperature before placing it in the freezer. Adding hot food significantly increases the internal temperature and requires more energy to cool down.
- **Defrost Regularly:** Defrost the freezer when the ice buildup reaches approximately 0.2 inches (5 mm) thick. Excessive frost acts as an insulator, reducing cooling efficiency.

- **Proper Placement:** Ensure the freezer is located in a cool, well-ventilated area, away from direct sunlight and heat sources.



## 5. MAINTENANCE AND CLEANING

Regular maintenance and cleaning will help ensure the longevity and efficient operation of your LHRIVER upright freezer.

### 5.1 Cleaning the Interior

Always unplug the freezer before cleaning. Remove all food items and shelves. Use a soft cloth dampened with a mild detergent and warm water solution. Do not use abrasive cleaners, scouring pads, or sharp objects, as they can damage the interior surfaces. Rinse the interior with clean water and dry thoroughly with a soft cloth before plugging the unit back in.

## 5.2 Defrosting

Frost will naturally accumulate inside the freezer over time. Defrost the unit when the frost layer is approximately 0.2 inches (5 mm) thick to maintain optimal performance and energy efficiency. To defrost:

1. Unplug the freezer from the power outlet.
2. Remove all food items and store them in another freezer, cooler, or insulated bags to keep them frozen.
3. Leave the freezer door open to allow the frost to melt naturally. Place towels or a shallow pan at the bottom of the freezer to collect melting water.
4. Once all frost has melted, clean and dry the interior thoroughly as described in Section 5.1.
5. Plug the freezer back in and allow it to reach its set temperature before returning food items.

*Do not use sharp objects or heating devices to speed up the defrosting process, as this can damage the freezer.*

## 5.3 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with a mild detergent solution. For stainless steel surfaces, use a specialized stainless steel cleaner and polish in the direction of the grain. Avoid using abrasive cleaners or solvents that could damage the finish.

## 5.4 Power Outage

In the event of a power outage, keep the freezer door closed as much as possible. This will help maintain the internal temperature and keep food frozen for a longer period. The duration food remains frozen depends on the ambient temperature and how full the freezer is. A full freezer will retain cold longer than a partially filled one.

## 6. TROUBLESHOOTING

---

Before contacting customer support, please refer to the following table for common issues and their solutions.

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Freezer does not operate	Not plugged in; Circuit breaker tripped or fuse blown; Temperature control set to "OFF" or too high; Power outage.	Ensure power cord is securely plugged in; Reset circuit breaker or replace fuse; Adjust temperature control to a colder setting; Check household power supply.
Temperature is not cold enough	Door not closed properly or frequently opened; Large amount of warm food added recently; Poor ventilation around the unit; Temperature control set too high (warm).	Ensure door is fully closed and sealed; Reduce frequency of door openings; Allow time for new food to cool; Ensure adequate clearance around freezer; Adjust temperature control to a colder setting.
Excessive frost buildup	Door gasket not sealing properly; High humidity in the room; Frequent or prolonged door openings.	Inspect and clean door gasket for debris or damage; Ensure room humidity is not excessively high; Reduce frequency and duration of door openings; Defrost the unit as per Section 5.2.
Noisy operation	Freezer not level; Objects vibrating against the unit; Normal compressor or refrigerant sounds.	Level the freezer using adjustable feet; Move any objects that are touching the freezer; Gurgling, humming, or clicking sounds are normal during operation.
Door does not close completely	Freezer not level; Door gasket dirty or damaged; Shelves or food items obstructing the door.	Level the freezer; Clean or replace door gasket; Rearrange contents to ensure no obstructions.

## 7. SPECIFICATIONS

---

Detailed technical specifications for the LHRIVER 3.0 Cu.ft Upright Freezer.

Feature	Detail
Brand	LHRIVER
Model Name	D5888S-SS
Item Model Number	ID-D5888S-new
Capacity	3.0 Cubic Feet
Product Dimensions (D x W x H)	22.2" x 20.3" x 32"
Color	Silver
Door Material Type	Stainless Steel
Door Hinges	Reversible
Shelves	2 (Removable)
Temperature Control	7-Grade Adjustable Thermostat (Approx. 6.8°F to -7.6°F / -14°C to -22°C)
Energy Consumption	Approx. 0.45 kWh/day
Noise Level	As low as 40 dB
Country of Origin	China
Included Components	Freezer unit

## 8. WARRANTY AND SUPPORT

---

### 8.1 Limited Warranty

This LHRIVER freezer comes with a limited warranty covering defects in materials and workmanship under normal use. The warranty period typically begins from the date of purchase. Please refer to the warranty card or documentation included with your product for specific terms and conditions, including the exact warranty period, coverage details, and any exclusions. Keep your proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty claims, please contact LHRIVER customer support. When contacting support, please have your product's model number (ID-D5888S-new) and purchase date readily available to expedite the process.

*Contact information (example, please refer to product packaging or official website for actual details):*

**Website:** Visit the LHRIVER Store on Amazon

**Email:** support@lhriver.com (example)

**Phone:** 1-800-XXX-XXXX (example)