

GreenLife CC009533-001

GreenLife Compact Electric Air Fryer Oven, 5.3 QT - Instruction Manual

Model: CC009533-001

1. PRODUCT OVERVIEW

The GreenLife Compact Electric Air Fryer Oven, 5.3 QT, is designed to transform your cooking experience. It features a generous capacity suitable for family meals and a PFAS-free ceramic nonstick interior for easy cleaning and healthier cooking. The intuitive digital display and one-touch presets simplify operation, while the sneak peek window allows monitoring without heat loss.

Key Features:

- **PFAS-Free Ceramic Nonstick:** Ensures safer, healthier meals and effortless cleanup.
- **Advanced Air Crisp Technology:** Utilizes rapid 360° air circulation for crispy results with up to 95% less oil.
- **5.3 QT Capacity:** Accommodates large family meals while maintaining a compact countertop footprint.
- **8 One-Touch Presets:** Includes Air Fry, Fries, Roast, Bake, Fish, Steak, Veggies, and Wings, with adjustable time and temperature.
- **Sneak Peek Window & Interior Light:** Monitor cooking progress without opening the drawer and losing heat.
- **Easy-Slide Drawer & Stay-Cool Handle:** For safe and effortless food access.
- **Dishwasher Safe Drawer & Tray:** Simplifies post-cooking cleanup.



HEALTHY CERAMIC NONSTICK

- ✓ FREE OF PFAS
- ✓ EFFORTLESS RELEASE
- ✓ EASY TO CLEAN
- ✓ TOXIN-FREE



Image 1.1: Front view of the GreenLife 5.3 QT Air Fryer in Sage color.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the air fryer and all packaging materials from the box.
2. Remove any promotional stickers or labels.
3. Keep packaging for future storage or disposal.

Cleaning Before First Use:

1. Wash the removable drawer and cooking tray with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
3. Ensure all parts are completely dry before assembly.

Placement:

- Place the air fryer on a stable, heat-resistant, and level surface.
- Ensure there is adequate space (at least 6 inches) around the appliance for proper air circulation.
- Do not place the air fryer directly under cabinets or near flammable materials.

8 ONE-TOUCH MODES

AIR FRY

FRIES

ROAST

BAKE

FISH

STEAK

VEGGIES

& WINGS



Image 3.1: Side view of the air fryer, illustrating the need for clear space around the unit for ventilation.

4. OPERATING INSTRUCTIONS

General Operation:

1. **Prepare Food:** Place your ingredients into the air fryer drawer, ensuring not to overfill.
2. **Insert Drawer:** Slide the drawer firmly into the main unit.
3. **Power On:** Plug the power cord into a wall outlet. The digital display will illuminate.
4. **Select Preset or Manual Settings:**
 - **Presets:** Press the "Menu" button repeatedly to cycle through the 8 one-touch presets (Air Fry, Fries, Roast, Bake, Fish, Steak, Veggies, Wings). The display will show the default time and temperature for the selected preset.
 - **Manual:** To set time and temperature manually, use the "Temp" and "Time" buttons, then adjust with the "+" and "-" buttons.

5. **Start Cooking:** Press the "Start/Pause" button to begin the cooking cycle.
6. **Monitor Progress:** Use the sneak peek window and interior light to check on your food without opening the drawer. Press the "Light" button to turn the interior light on/off.
7. **Shake/Flip Food (Optional):** For even cooking, some recipes may require shaking or flipping food halfway through. Carefully pull out the drawer using the stay-cool handle, shake or flip, then reinsert. The air fryer will resume cooking.
8. **Finish Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully remove the drawer and transfer food to a serving dish.
9. **Power Off:** Unplug the appliance from the wall outlet when not in use.

FAMILY-SIZED 5.3QT CAPACITY

PLENTY OF ROOM TO COOK LARGE MEALS



Image 4.1: The digital display showing the 8 one-touch cooking modes.

EASY TO CLEAN & DISHWASHER SAFE DRAWER & TRAY



Image 4.2: Close-up of the sneak peek window and interior light, allowing monitoring of food.

Official Product Video:

Your browser does not support the video tag.

Video 4.1: An official GreenLife video demonstrating the ease of use and features of the Digital Air Fryer, including loading food, setting controls, and checking cooking progress.

5. MAINTENANCE AND CLEANING

Cleaning the Air Fryer:

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Wash Drawer and Tray:** The removable drawer and cooking tray are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge.
3. **Clean Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn residue, use a mild detergent. Avoid abrasive cleaners or scouring pads.

4. **Clean Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the air fryer.

Note: The ceramic nonstick coating is designed for easy release and cleaning. Avoid using metal utensils that could scratch the surface.

GET A FRONT ROW SEAT TO YOUR MEAL

WITH SNEAK PEEK WINDOW & INTERIOR LIGHT



Image 5.1: The removable drawer and cooking tray, highlighting their dishwasher-safe design for easy cleaning.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Overcrowding the basket; not shaking/flipping food.	Do not overcrowd the basket; cook in smaller batches if necessary. Shake or flip food halfway through cooking.
Food is not crispy.	Too much moisture; insufficient oil (if applicable); temperature too low.	Pat food dry before air frying. A light spray of oil can help. Increase temperature slightly if needed.
White smoke coming from the appliance.	Grease residue from previous use; fatty food cooking.	Clean the drawer and tray thoroughly after each use. For very fatty foods, drain excess fat during cooking.
Digital display unresponsive or buttons not working correctly.	Temporary electronic glitch; dirty control panel.	Unplug the unit for a few minutes, then plug it back in. Ensure the control panel is clean and dry.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	GreenLife
Model Name	Air Fryer
Model Number	CC009533-001
Capacity	5.3 Quarts
Color	Sage
Material	PFAS-Free Ceramic Nonstick (Inner), Polypropylene (Outer)
Product Dimensions (D x W x H)	15.16"D x 12"W x 13.98"H
Item Weight	11 pounds
Wattage	1500 Watts
Control Method	Touch
Special Features	8 One-Touch Modes, Crystal Clear Digital Display, Dishwasher Safe Drawer & Tray, Easy-Slide Drawer, PFAS-Free Nonstick Interior, Stay-Cool Handle, Timer, Sneak Peek Window, Interior Light
UPC	885837049794

8. WARRANTY AND SUPPORT

Warranty Information:

GreenLife products are manufactured to high-quality standards. For specific warranty details regarding your GreenLife Compact Electric Air Fryer Oven, please refer to the warranty card included in your product packaging or visit the official GreenLife website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support:

If you have any questions, require assistance, or need to report an issue with your air fryer, please contact GreenLife customer support.

- **Website:** Visit the official GreenLife website for FAQs and support contact information.
- **Phone:** Refer to your product packaging or the GreenLife website for customer service phone numbers.
- **Online Resources:** Explore the [GreenLife Store on Amazon](#) for additional product information and resources.

© 2026 GreenLife. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question