Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Ingenuity /
- > Ingenuity Keep Cozy 3-in-1 Grow with Me Vibrating Baby Bouncer Seat & Infant to Toddler Rocker Instruction Manual

Ingenuity 17499

Ingenuity Keep Cozy 3-in-1 Grow with Me Vibrating Baby Bouncer Seat & Infant to Toddler Rocker

Model: 17499

Brand: Ingenuity

INTRODUCTION

The Ingenuity Keep Cozy 3-in-1 Grow with Me Vibrating Baby Bouncer Seat & Infant to Toddler Rocker is a versatile product designed to adapt to your child's growth from infancy through toddlerhood. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your product.

This product offers three distinct modes: a vibrating bouncer for infants, a soothing rocker, and a stationary seat for toddlers. It is designed for children from birth up to 40 pounds (18 kg).

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and the instructions could result in serious injury or death.

- · Never leave child unattended.
- · Always use the restraint system. Adjust to fit snugly.
- This product is not intended for prolonged periods of sleep.
- Do not use this product once your child can sit up unaided or attempts to climb out.
- Maximum weight recommendation: 40 pounds (18 kg).
- Never use this product on an elevated surface (e.g., a table). Always use on the floor.
- Do not move or lift the product with the child in it.
- Ensure all assembly components are securely fastened before each use.
- · Discontinue use if any part is damaged, broken, or missing.

COMPONENTS OVERVIEW

Familiarize yourself with the main components of your Ingenuity Keep Cozy seat:



Image: Key components of the Ingenuity Keep Cozy seat, including the removable bolster, soothing vibrations unit, toy bar, and kickstand.

- Removable Bolster: Provides extra support and comfort for newborns.
- Toy Bar: Detachable bar with a plush bear toy for entertainment.
- Soothing Vibrations Unit: Battery-operated unit for calming vibrations.
- Kickstand: Used to convert the seat to a stationary position.
- Seat Pad: Main fabric portion of the seat.
- Harness System: 5-point harness for securing the child.

SETUP AND ASSEMBLY

Assembly of the Ingenuity Keep Cozy seat is designed to be straightforward, requiring minimal tools.

- 1. **Unpack Components:** Carefully remove all parts from the packaging and ensure all components listed in the Components Overview section are present.
- 2. Assemble Frame: Connect the frame pieces according to the instructions provided in the product packaging. Most

connections are snap-fit.

- 3. **Install Seat Pad:** Securely attach the seat pad to the frame. Ensure all fabric loops and fasteners are correctly aligned and attached.
- 4. **Insert Batteries for Vibration Unit:** Locate the battery compartment for the soothing vibrations unit. This typically requires **1 C battery** (not included). Use a screwdriver to open the compartment, insert the battery with correct polarity, and close securely.
- 5. Attach Toy Bar: Insert the toy bar into the designated slots on the frame until it clicks securely into place.
- 6. **Install Infant Bolster (for newborns):** If using for a newborn, place the removable infant bolster into the seat for additional support.



Image: The fully assembled Ingenuity Keep Cozy bouncer seat, ready for use in a living space.

OPERATING INSTRUCTIONS

The Ingenuity Keep Cozy offers three modes of use to accommodate your child's developmental stages.

1. Bouncer Mode (Infant)

In bouncer mode, the seat provides gentle bouncing motion, often enhanced by soothing vibrations. This mode is ideal for infants who cannot yet sit up unassisted.



Image: The Ingenuity Keep Cozy seat configured in bouncer mode, providing gentle motion for an infant.

2. Rocker Mode (Infant to Toddler)

To engage rocker mode, ensure the kickstand at the rear of the seat is folded away, allowing the curved base to rock freely. This mode provides a soothing back-and-forth motion.



Mode 2: Rocker

Image: The Ingenuity Keep Cozy seat in rocker mode, with a parent gently rocking a baby.

3. Stationary Seat Mode (Toddler)

To convert to a stationary seat, extend and lock the kickstand at the rear of the seat. This stabilizes the seat, making it suitable for toddlers who can sit independently.



Mode 3: Stationary Seat

Image: The Ingenuity Keep Cozy seat in stationary mode, providing a stable seating option for a toddler.

Vibration Feature

To activate the soothing vibrations, locate the power switch on the vibration unit, typically found underneath the seat. Toggle the switch to the 'ON' position. Ensure a fresh C battery is installed for optimal performance.

Reclining Positions

The seat offers two reclining positions for your child's comfort. Adjust the recline by pressing the release buttons on the side of the frame and moving the seat to the desired angle. Ensure it locks securely into place.



Image: A hand demonstrating how to adjust the recline of the seat by pressing the side button.

Harness System

Always secure your child using the 5-point harness system. Place the child in the seat, bring the shoulder straps over the child's shoulders, and the waist straps around their hips. Connect the buckles and adjust the straps to a snug fit, ensuring the child cannot slip out.



Image: Close-up of a hand fastening the 5-point harness buckle, ensuring the child's security.

MAINTENANCE AND CARE

Regular cleaning and maintenance will help prolong the life of your Ingenuity Keep Cozy seat.

- Frame: Wipe the frame with a soft, clean cloth and mild soap.
- Seat Pad/Bolster/Headrest: Remove these fabric components from the frame. Fasten buckles on seat restraint and seat pad. Fasten all hook-and-loop patches to the corresponding patch. Machine wash with cold water, gentle cycle. Do not use bleach. Tumble dry using low heat.
- Toy Bar and Toys: Wipe clean with a damp cloth and mild soap. Air dry. Do not immerse in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Vibration unit not working.	Battery is dead or incorrectly installed.	Replace the C battery with a fresh one, ensuring correct polarity.
Seat does not rock smoothly.	Kickstand is engaged.	Ensure the kickstand is fully folded away for rocking mode.
Harness straps feel too short or stiff.	Straps may need adjustment or are not routed correctly.	Refer to the assembly instructions for proper strap routing and adjustment. Ensure the buckle is fully engaged.
Seat feels unstable.	Components not fully assembled or locked.	Check all connections and ensure they are securely snapped or locked into place. Always use on a flat, level surface.

SPECIFICATIONS

Detailed specifications for the Ingenuity Keep Cozy 3-in-1 Grow with Me Vibrating Baby Bouncer Seat & Infant to Toddler Rocker:



Image: Visual representation of the product's dimensions and maximum weight/age recommendations.

Feature	Detail
Product Dimensions	28.74 x 19.69 x 23.62 inches (73 x 50 x 60 cm)
Assembled Dimensions (approx)	24.41" (H) x 19.49" (W) x 26.38" (D)
Item Model Number	17499
Batteries Required	1 C battery (for vibrations, not included)
Maximum Weight Recommendation	40 Pounds (18 kg)
Material Composition	54% Plastic, 27% Metal, 19% Fabric
Item Weight	6.03 pounds (2.73 kg)
Color	Linden

Feature	Detail
Care Instructions	Machine washable seat pad/bolster; wipe frame/toys clean.

WARRANTY AND SUPPORT

For specific warranty information regarding your Ingenuity Keep Cozy 3-in-1 Grow with Me Vibrating Baby Bouncer Seat & Infant to Toddler Rocker, please refer to the documentation included with your purchase or visit the official Ingenuity website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase. Should you require further assistance, have questions about product functionality, or need to report an issue, please contact Ingenuity customer support. Contact details are usually available on the product packaging or the brand's official website.

You can visit the Ingenuity Store for more information and products:Ingenuity Store on Amazon

© 2024 Ingenuity. All rights reserved.

Related Documents - 17499



Ingenuity Keep Cozy 3-in-1 Grow with Me Bounce & Rock Seat - Burst™ User Manual

Comprehensive user manual for the Ingenuity Keep Cozy™ 3-in-1 Grow with Me™ Bounce & Rock Seat - Burst™. Includes safety warnings, assembly instructions, care and cleaning guides, battery information, parts list, and usage details.



Ingenuity Keep Cozy 3-in-1 Grow With Me Bounce & Rock Seat - User Manual and Safety Guide Comprehensive guide for the Ingenuity Keep Cozy 3-in-1 Grow With Me Bounce & Rock Seat,

covering assembly, usage, care, cleaning, and safety warnings in multiple languages.



Ingenuity Keep Cozy 3-in-1 Grow With Me Bounce & Rock Seat - Madi™ User Manual

Comprehensive user manual for the Ingenuity Keep Cozy 3-in-1 Grow With Me Bounce & Rock Seat in the Madi[™] fashion. Includes safety warnings, care instructions, battery information, and assembly guide.

ingenuity.

Ingenuity InLighten Bouncer - Kitt: Owner's Manual

Comprehensive owner's manual for the Ingenuity InLighten Bouncer - Kitt, providing essential safety instructions, detailed care and cleaning guidelines, battery information, and assembly instructions.

ingenuity



Ingenuity InLighten Bouncer - Nate: User Manual and Safety Guide

Comprehensive user manual for the Ingenuity InLighten Bouncer in the Nate design. Includes safety warnings, assembly instructions, care guide, battery information, and control unit operation for parents.


ingenuity^{*}



Ingenuity Every Season Rocking Seat - Wesley: User Manual and Safety Guide

Comprehensive user manual for the Ingenuity Every Season Rocking Seat - Wesley. Includes detailed safety warnings, assembly instructions, care and cleaning guidelines, battery information, and music/vibration unit operation. Features multilingual support.

Documents - Ingenuity - 17499

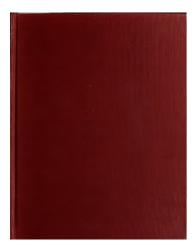

The Record Changer: Vintage Jazz Music & Record Reviews

Explore vintage jazz music, artist profiles, record reviews, and historical insights from 'The Record Changer' magazine, a definitive publication for jazz enthusiasts. lang:en score:13 filesize: 41.34 M page_count: 386 document date: 2014-09-17



[pdf] User Manual

TAKING FLIGHT Good Sam either motorized or manual are the solution when in an RV park while motorhome is storage Carefree of Colorado care MotorHomeMagazineAugust2015 webcontent goodsam motorhomemagazine digital editions

FACTORY-DIRECT: GETTING THE PERSONAL TOUCH BEATTHE HEAT TOP FABRICS TO KEEP YOUR RV S INTERIOR COOL ... it one coupon per customer per day. SCUOPUEPRON AIRLESS PAINT SPRAYER KIT SAVE 125 LOT 60600 17499 REG. PRICE 299.99 LIMIT 5 - Good at our stores or HarborFreight.com or by calling 800-423-25...

lang:en score:10 filesize: 32.54 M page_count: 85 document date: 2015-06-15