

[Manuals.plus](#) /

› [Swarovski](#) /

› Swarovski Optik Objective Lens Cover for 32mm EL Range Binoculars User Manual

Swarovski 44416

Swarovski Optik Objective Lens Cover User Manual

Model: 44416

PRODUCT OVERVIEW

This manual provides instructions for the Swarovski Optik Objective Lens Cover, designed specifically for 32mm EL Range Binoculars. This accessory is engineered to protect the objective lenses of your binoculars from environmental elements and physical damage.



Image: The Swarovski Optik Objective Lens Cover, a black, circular protective cap with an attached tab for securing it to binoculars.

SETUP AND INSTALLATION

The objective lens cover is designed for easy attachment and removal. Follow these steps for proper installation:

1. **Identify the Objective Lenses:** Locate the large front lenses on your 32mm EL Range Binoculars.
2. **Align the Cover:** Position the lens cover directly over one of the objective lenses. The cover is designed for a snug fit.
3. **Secure the Cover:** Gently press the cover onto the lens until it sits securely. Ensure the attached tab, if present, is positioned to allow for easy removal or attachment to the binocular strap/body.
4. **Repeat for Second Lens:** Apply the second lens cover to the other objective lens.

The "EASY INSTALLATION" feature bullet directly supports this section.

OPERATING INSTRUCTIONS

The primary function of this objective lens cover is to protect your binocular lenses when not in use or during transport. Its operation is straightforward:

- **Protection During Storage:** Always place the lens covers on the objective lenses when storing your binoculars to prevent dust accumulation and scratches.
- **Protection During Transport:** Ensure the covers are securely in place when carrying your binoculars in the field or transporting them to prevent accidental damage from impacts or debris.
- **Quick Removal for Use:** When ready to use your binoculars, simply pull the lens covers off. The attached tab allows for quick and easy removal.
- **Re-attachment:** After use, re-attach the covers to protect the lenses.

This cover provides "SUPERIOR PROTECTION" and "ENHANCED DURABILITY" as highlighted in the product features.

MAINTENANCE

To ensure the longevity and effectiveness of your Swarovski Optik Objective Lens Cover, follow these simple maintenance guidelines:

- **Cleaning:** If the lens cover becomes dirty, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the cover's surface.
- **Storage:** Store the lens cover in a clean, dry place when not in use.
- **Inspection:** Periodically inspect the cover for any signs of wear or damage. While crafted from durable materials, extreme conditions can cause degradation over time.

TROUBLESHOOTING

This section addresses common issues you might encounter with the objective lens cover.

Problem	Possible Cause	Solution
Cover does not fit snugly.	Incorrect binocular model or cover is misaligned.	Ensure you are using the cover with 32mm EL Range Binoculars. Re-align the cover carefully before pressing it on.
Cover falls off easily.	Wear and tear, or improper installation.	Check for any visible damage to the cover's rim. Ensure it is fully seated on the lens. If wear is significant, consider replacement.
Dust or debris under the cover.	Cover was applied to a dirty lens or in a dusty environment.	Remove the cover, clean both the lens and the inside of the cover with appropriate cleaning materials, then re-apply.

SPECIFICATIONS

- **Model Name:** Swarovski Optik Objective Lens Cover for 32mm EL Range Binoculars
- **Part Number:** 44416
- **Color:** Black
- **Item Dimensions (LxWxH):** 4.4 x 4.4 x 1 inches
- **Item Weight:** 0.1 Pounds
- **Included Components:** Swarovski Optik Objective Lens Cover
- **Suggested Users:** Unisex-adult
- **Manufacturer:** Swarovski Optik
- **Date First Available:** December 24, 2024

WARRANTY INFORMATION

This product comes with a manufacturer's warranty. Please refer to the details below:

- **Warranty Description:** 24 months

For specific terms, conditions, and to register your product, please visit the official Swarovski Optik website or contact their customer support.

SUPPORT

For further assistance, technical support, or inquiries regarding your Swarovski Optik Objective Lens Cover, please contact Swarovski customer service. You may find contact information on the official Swarovski website.

Online Resources: [Visit the Swarovski Store on Amazon](#)

© 2024 Swarovski Optik. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question