

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sharp](#) /
- › [Sharp 4T-C65FL6EX 65-inch 4K Frameless Smart TV User Manual](#)

Sharp 4T-C65FL6EX

Sharp 4T-C65FL6EX 65-inch 4K Frameless Smart TV User Manual

Model: 4T-C65FL6EX | Brand: Sharp

1. INTRODUCTION

Thank you for purchasing the Sharp 4T-C65FL6EX 65-inch 4K Frameless Smart TV. This manual provides essential information for the safe and efficient use of your new television. Please read these instructions thoroughly before operating the TV and retain them for future reference.

Important Safety Information

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury. Do not expose the TV to rain or moisture. Do not open the cabinet; refer all servicing to qualified personnel. Ensure proper ventilation and avoid placing the TV near heat sources.

2. PRODUCT OVERVIEW

The Sharp 4T-C65FL6EX is a 65-inch 4K UHD Smart LED TV designed to deliver an immersive viewing experience. It features a frameless design, Google TV operating system, and a built-in digital receiver.

Key Features

- **65-inch 4K UHD Display:** Enjoy stunning visuals with a resolution of 3840 x 2160 pixels.
- **Frameless Design:** Maximizes screen space for an expansive view.
- **Google TV Operating System:** Access a wide range of apps, movies, and shows.
- **Built-in Digital Receiver:** Supports DVB-S/S2/T/T2/C broadcast types.
- **Dolby Atmos & DTS Studio Sound:** Delivers rich, immersive audio.
- **Dolby Vision & HDR10:** Enhanced contrast and color for compatible content.
- **Integrated Chromecast:** Easily cast content from your mobile devices.
- **Far-field Voice Control & Google Assistant:** Control your TV with voice commands.
- **Connectivity:** Wi-Fi, Bluetooth v5.1, 3 HDMI 2.0 ports, 2 USB ports, LAN.

Package Contents

- Sharp 4T-C65FL6EX 65-inch 4K Smart TV
- Remote Control
- Power Cable
- TV Stand (2 pieces)
- Screws for Stand Installation
- User Manual (this document)



Figure 2.1: Front view of the Sharp 4T-C65FL6EX Smart TV.



Figure 2.2: The included remote control for the Sharp Smart TV.

3. SETUP

3.1 Unpacking and Placement

1. Carefully remove the TV from its packaging. It is recommended to have two people for this.
2. Place the TV on a stable, flat surface or prepare for wall mounting. Ensure adequate space around the TV for ventilation.

3.2 Stand Installation

If you are not wall-mounting the TV, attach the included stand:

1. Lay the TV screen-down on a soft, clean cloth to prevent scratches.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are tightened firmly.

3.3 Wall Mounting (Optional)

This TV is compatible with VESA standard wall mounts. Consult a professional for wall mounting to ensure proper installation and safety. Remove the stand before wall mounting.

3.4 Connecting Devices

Connect your external devices to the TV using the appropriate ports:

- **HDMI:** For Blu-ray players, game consoles, cable/satellite boxes. The TV has 3 HDMI 2.0 ports.
- **USB:** For USB drives to play media (video, photos, music). The TV has 2 USB ports.
- **Antenna/Satellite (RF Input):** Connect your antenna or satellite dish cable to the RF input for digital broadcasting.
- **LAN:** For a wired internet connection.

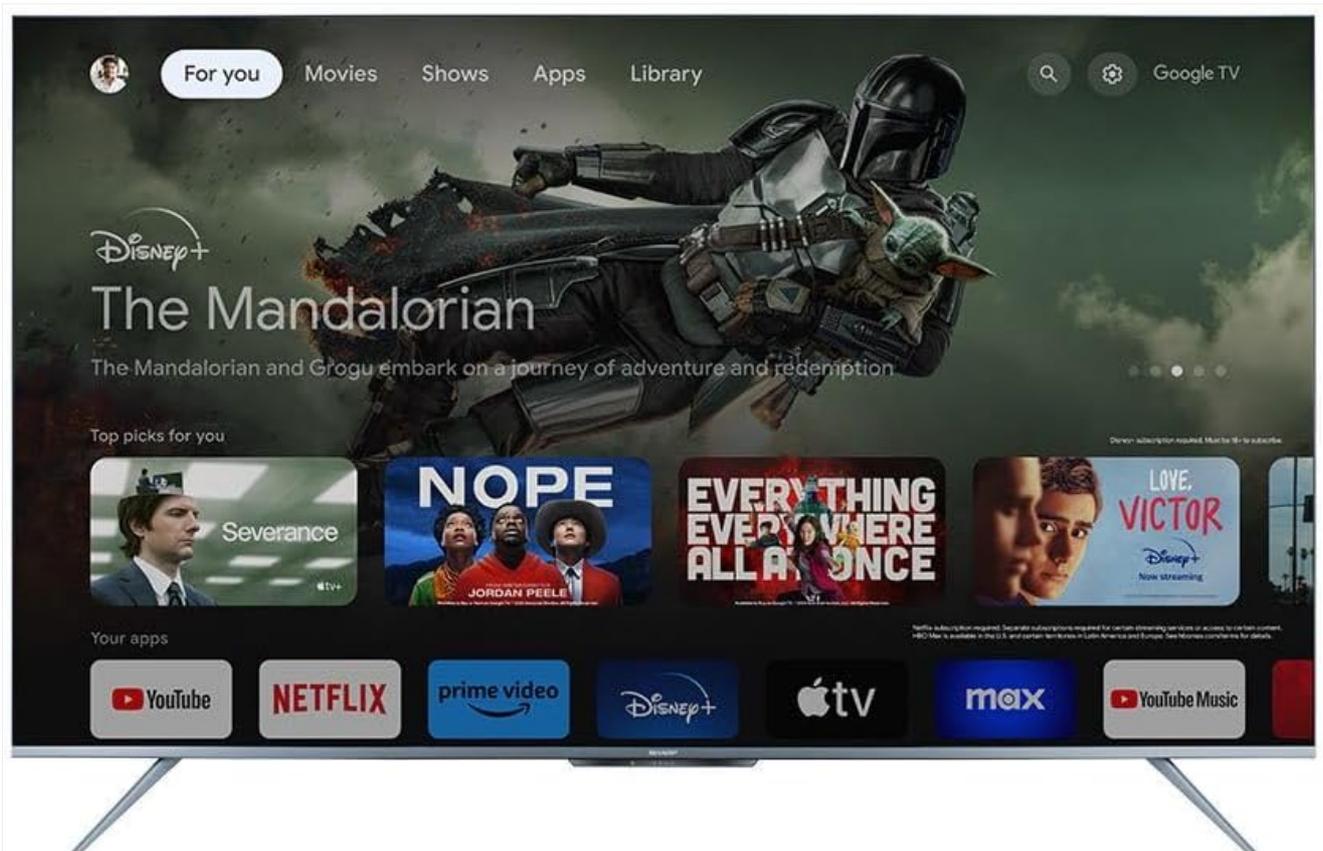


Figure 3.1: Rear view of the TV illustrating various input/output ports.

3.5 Power On and First-Time Setup

1. Connect the power cable to the TV and then to a power outlet.
2. Press the Power button on the remote control or on the TV.
3. Follow the on-screen instructions to complete the initial setup, which includes selecting language, connecting to Wi-Fi, and signing in with your Google account.

4. OPERATING INSTRUCTIONS

4.1 Remote Control Functions

The remote control allows you to navigate the TV's features. Key buttons include:

- **Power Button:** Turns the TV on or off.

- **Google Assistant Button:** Activates voice control.
- **Navigation Pad (Circle):** Moves through menus and selects items.
- **Home Button:** Returns to the Google TV home screen.
- **Back Button:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts the volume.
- **Mute Button:** Mutes or unmutes the sound.
- **Input Button:** Selects input sources (HDMI, AV, etc.).
- **App Shortcut Buttons:** Direct access to Netflix, Prime Video, YouTube.

4.2 Google TV Interface

The Google TV interface organizes your content from various streaming services and apps into one personalized screen. You can browse recommendations, access your library, and discover new content.



Figure 4.1: The Google TV home screen interface.

4.3 Using Smart Features

- **Streaming Apps:** Navigate to the 'Apps' section or use the dedicated remote buttons to launch Netflix, Prime Video, YouTube, and other installed applications.
- **Voice Search:** Press the Google Assistant button on your remote and speak into the microphone to search for content, control playback, or ask questions.
- **Chromecast Built-in:** Use the Chromecast feature to cast videos, photos, and music from your compatible smartphone, tablet, or computer directly to the TV.
- **Web Browser:** Access the internet using the built-in web browser.
- **Google Play Store:** Download and install additional apps and games from the Google Play Store.

4.4 Input Source Selection

To switch between connected devices (e.g., HDMI 1, HDMI 2, TV tuner), press the **Input** button on your remote control and

select the desired source from the on-screen menu.

5. MAINTENANCE

5.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen-cleaning solution specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- Always unplug the TV from the power outlet before cleaning.

5.2 Software Updates

Your Sharp Smart TV may receive software updates periodically to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates. You can usually check for updates in the TV's settings menu.

6. TROUBLESHOOTING

Before contacting customer support, try the following solutions for common issues:

Problem	Possible Solution
No power	Check if the power cable is securely connected to the TV and the power outlet. Ensure the outlet is working. Try pressing the power button on the TV itself.
No picture, but sound is present	Ensure the correct input source is selected. Check HDMI or other video cables for secure connections.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections if using external speakers. Check audio output settings in the TV menu.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password carefully. Try restarting your router and the TV.
Smart features are slow or unresponsive	Restart the TV. Ensure a stable internet connection. Close unused applications running in the background.

7. SPECIFICATIONS

Feature	Detail
Model Number	4T-C65FL6EX
Screen Size	65 inches
Display Technology	LED
Resolution	3840 x 2160 (4K UHD)
Aspect Ratio	16:9

Feature	Detail
Viewing Angle	178 degrees
Refresh Rate	60 Hz
Operating System	Google TV
Internal Memory	32 GB
Broadcast Type	Digital (DVB-S/S2/T/T2/C)
Audio Technology	Dolby Atmos, DTS Studio Sound
Video Technology	HLG, Dolby Vision, HDR10
Connectivity	Wi-Fi, Bluetooth v5.1
HDMI Ports	3 (HDMI 2.0)
USB Ports	2
LAN Port	1
Audio Output Power	12 Watts x 2
Power Consumption (Operating)	200 Watts
Power Consumption (Standby)	<0.5 Watts
Dimensions (W x H x D) without Stand	1447.7 x 837 x 81.3 mm
Dimensions (W x H x D) with Stand	1447.7 x 922.6 x 280.2 mm
Net Weight	17.9 kg
Country of Origin	Egypt

8. WARRANTY AND SUPPORT

8.1 Product Warranty

This Sharp 4T-C65FL6EX Smart TV comes with a **3-year full free warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions. It typically does not cover damage caused by misuse, accidents, unauthorized repairs, or natural disasters.

8.2 Customer Support

For technical assistance, service requests, or further inquiries regarding your Sharp TV, please contact Sharp customer support. Refer to the warranty card or Sharp's official website for contact details specific to your region.