



[Manuals.plus](#) /

› [Henny Penny](#) /

› HENNY PENNY 84656 LATCH-DRAIN PAN LOCK LVX Instruction Manual

## Henny Penny 84656

# Instruction Manual: HENNY PENNY 84656 LATCH-DRAIN PAN LOCK LVX

Brand: Henny Penny | Model: 84656

## PRODUCT OVERVIEW

The HENNY PENNY 84656 LATCH-DRAIN PAN LOCK LVX is a genuine OEM (Original Equipment Manufacturer) replacement part designed for reliability, safety, and performance in commercial kitchen equipment. This component is crucial for securing drain pans, ensuring proper operation and maintenance of your Henny Penny units.

## PRODUCT VISUAL REFERENCE



Image: The Henny Penny 84656 Latch-Drain Pan Lock LVX. This image displays the metallic, L-shaped latch component with a circular mounting hole and a hook-like end designed for securing a drain pan. Its robust construction is evident, indicating its purpose in industrial or commercial settings.

## SETUP AND INSTALLATION

As an OEM replacement part, the Henny Penny 84656 Latch-Drain Pan Lock LVX is designed for direct fitment. Installation should be performed by qualified personnel familiar with the specific Henny Penny equipment. Ensure the equipment is powered off and disconnected from any energy source before beginning installation.

1. **Safety First:** Disconnect power to the equipment and allow it to cool if necessary.
2. **Access:** Locate the existing latch or the designated mounting point for the drain pan lock.
3. **Removal (if replacing):** Carefully remove any fasteners securing the old latch. Retain fasteners if they are to be reused.
4. **Positioning:** Align the new 84656 latch with the mounting holes on the equipment.
5. **Securing:** Use appropriate fasteners (not included, typically reused from original part or specified by equipment manual) to securely attach the latch. Ensure it is firmly in place and does not wobble.
6. **Functionality Check:** Once installed, test the latch mechanism to ensure it engages and disengages smoothly with the drain pan.

## OPERATING INSTRUCTIONS

The 84656 Latch-Drain Pan Lock LVX operates manually to secure the drain pan in place. Its primary function is to prevent accidental dislodgement of the drain pan during equipment operation or movement.

- **To Lock:** Position the drain pan correctly. Engage the latch by pushing or rotating it until it securely hooks onto the designated point on the drain pan, holding it firmly.
- **To Unlock:** To remove or access the drain pan, disengage the latch by reversing the locking action (pulling or rotating) until the hook releases the pan.

Always ensure the latch is fully engaged when the equipment is in use to prevent spills or damage.

## MAINTENANCE

Regular maintenance of the latch ensures its longevity and proper function.

- **Cleaning:** Periodically clean the latch with a damp cloth to remove any grease, food debris, or dust. Avoid abrasive cleaners that could damage the finish.
- **Inspection:** Routinely inspect the latch for any signs of wear, bending, or damage. Check that the mounting fasteners are tight.
- **Lubrication:** If the latch mechanism feels stiff, a small amount of food-grade lubricant can be applied to the pivot points, if applicable, to ensure smooth operation.
- **Replacement:** If the latch shows significant wear, damage, or no longer secures the drain pan effectively, it should be replaced with a genuine Henny Penny 84656 part.

## TROUBLESHOOTING

This section addresses common issues that may arise with the drain pan latch.

Problem	Possible Cause	Solution
Latch does not engage/lock.	Misalignment of drain pan; Latch is bent or damaged; Obstruction.	Ensure drain pan is correctly seated; Inspect latch for damage and replace if necessary; Clear any debris obstructing the latch mechanism.
Latch is stiff or difficult to operate.	Accumulation of dirt/grease; Lack of lubrication; Minor deformation.	Clean the latch thoroughly; Apply food-grade lubricant to pivot points; Inspect for minor bends and gently correct if possible, otherwise replace.
Latch is loose after installation.	Fasteners are not tightened sufficiently.	Tighten all mounting fasteners securely. Do not overtighten.

## SPECIFICATIONS

Attribute	Detail
Manufacturer	HENNY PENNY
Part Number	84656
Item Weight	1.92 ounces
Product Dimensions	3.95 x 2.55 x 1.05 inches
Country of Origin	USA
Item Model Number	84656
Power Source	Manual
Number Of Pieces	1
Batteries Included?	No
ASIN	B0DRMPM52Y

Attribute	Detail
Date First Available	December 26, 2024

## WARRANTY INFORMATION

As a genuine OEM replacement part, the Henny Penny 84656 Latch-Drain Pan Lock LVX is typically covered by the original equipment manufacturer's warranty for parts. Specific warranty terms and conditions may vary. Please refer to the warranty documentation provided with your original Henny Penny equipment or contact Henny Penny directly for detailed warranty information regarding replacement parts.

## CUSTOMER SUPPORT

For technical assistance, replacement part inquiries, or further information regarding the Henny Penny 84656 Latch-Drain Pan Lock LVX, please contact your authorized Henny Penny dealer or the Henny Penny customer support department. When contacting support, please have your equipment model and serial number, along with the part number (84656), readily available. *Note: Always ensure that any repairs or installations are performed by qualified service technicians to maintain equipment safety and warranty validity.*