

[Manuals.plus](#) /

› [Sekey](#) /

› Sekey Wagon Cart with Wheels Instruction Manual (Model B0DRNG2YKQ)

Sekey B0DRNG2YKQ

Sekey Wagon Cart with Wheels Instruction Manual

Model: B0DRNG2YKQ

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Sekey Wagon Cart with Wheels. Designed for versatility and ease of use, this heavy-duty, foldable utility cart is suitable for various tasks, including transporting groceries, gardening supplies, and camping gear. Please read this manual thoroughly before using the product to ensure safe and efficient operation.

2. SAFETY INFORMATION

- **Weight Limit:** Do not exceed the maximum weight capacity of 220 pounds (100 kg). Overloading can cause damage to the wagon and potential injury.
- **Not for Children:** This product is not designed to transport children. Always ensure children are kept away from the wagon during operation and storage.
- **Secure Loads:** Always ensure that items placed in the wagon are stable and securely contained to prevent shifting or falling during transport.
- **Even Surfaces:** Operate the wagon on relatively even and stable surfaces. Exercise caution on uneven terrain, inclines, or slippery surfaces.
- **Brakes:** Utilize the wheel brakes when parking the wagon, especially on inclines, to prevent unintended movement.
- **Folding/Unfolding:** Exercise caution when folding or unfolding the wagon to avoid pinching fingers or hands.

3. PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged:

- 1 x Sekey Foldable Wagon Cart (main body)

- 4 x Wheels (two with brakes)
- 1 x Adjustable Handle
- 1 x Bottom Pad/Support
- Instruction Manual

4. SETUP AND ASSEMBLY

The Sekey Wagon Cart is designed for quick and tool-free assembly. Follow these steps to set up your wagon:

1. **Unfold the Wagon:** Place the folded wagon on a flat surface. Gently pull the sides apart until the wagon fully expands. Push down on the center of the bottom fabric until it lies flat.
2. **Insert Bottom Pad:** Place the provided bottom pad inside the wagon to create a stable base.
3. **Attach Wheels:** Insert each wheel into its designated slot on the wagon frame. Ensure the locking mechanism clicks into place. The two wheels with brakes should typically be installed on the front for easier access, but can be placed on the rear if preferred.
4. **Adjust Handle:** The handle is pre-attached. To extend it, press the button near the top of the handle and pull upwards. Release the button to lock it at your desired height. The handle features an auto-rebounding design to prevent it from touching the ground when released.



Figure 1: The Sekey Wagon Cart fully assembled and ready for use, loaded with various items.

ANTI-DROPPED HANDLE



Height-adjust Button



Figure 2: Illustration of the ergonomic, adjustable, and auto-rebounding handle, designed for comfortable use and to prevent contact with the ground.

5. OPERATING INSTRUCTIONS

Your Sekey Wagon Cart is designed for convenient transport of various items.

- **Loading:** Place items evenly within the wagon, ensuring the total weight does not exceed 220 pounds. Distribute weight to maintain balance.
- **Maneuvering:** The wagon is equipped with 360-degree rotating front wheels, allowing for smooth navigation across various terrains including grass, sand, gravel, and pavement.
- **Handle Use:** Adjust the handle to a comfortable height for pulling. The auto-rebounding feature keeps the handle upright when not in use.
- **Braking:** Engage the brakes on the front wheels when the wagon is stationary to prevent it from rolling.
- **Cup Holders:** Utilize the integrated cup holders for beverages or small items.
- **Folding for Storage:** To fold, remove the bottom pad. Pull the central strap upwards to collapse the wagon. Secure it with the attached strap or clip.



Figure 3: The wagon showcasing its substantial 220-pound carrying capacity, suitable for a variety of goods.



Figure 4: Demonstrates the wagon's lightweight design, allowing for easy one-hand carrying when folded.

6. MAINTENANCE AND CARE

Proper maintenance will extend the life of your Sekey Wagon Cart.

- **Cleaning:** The fabric components can be spot cleaned with mild soap and water. The detachable wheels can be removed for thorough cleaning if necessary. Allow all parts to dry completely before folding and storing.
- **Wheel Maintenance:** Periodically check the wheels for debris or wear. Ensure they rotate freely and the brakes engage properly.
- **Storage:** Store the folded wagon in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

ADVANCED MATERIAL



Figure 5: Details on the advanced materials used, including scratch-resistant, anti-rust thickened steel frame and waterproof 600D Oxford fabric.

7. TROUBLESHOOTING

If you encounter any issues with your Sekey Wagon Cart, please refer to the following common solutions:

- **Wagon not unfolding/folding smoothly:** Ensure the bottom pad is removed before folding. Check for any obstructions in the folding mechanism. Apply gentle, even pressure.
- **Wheels not rolling smoothly:** Inspect wheels for debris (e.g., dirt, hair) that may be obstructing rotation. Clean the wheels and their axles. Ensure wheels are securely attached.
- **Handle not extending/retracting:** Verify that the adjustment button is fully pressed when attempting to change the handle's length. Check for any foreign objects in the handle mechanism.

For issues not resolved by these steps, please contact customer support as detailed in the Warranty and Support section.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions (Unfolded)	26.6"D x 16.15"W x 36.25"H
Weight Limit	220 Pounds (100 kg)
Item Weight	10.83 Pounds (4.92 kg)
Frame Material	Carbon Steel
Handle Material	Aluminum
Caster Type	Swivel (360-degree rotating front wheels)
Special Features	Anti-dropping Handle, Cup Holders, Foldability, Heavy Duty, Large Capacity
Assembly Required	No (minimal setup)



Figure 6: Detailed dimensions of the wagon in both unfolded and folded states, along with cup holder measurements.

9. WARRANTY AND SUPPORT

Your Sekey Wagon Cart comes with a **1-year warranty** from the date of purchase.

For warranty claims, technical support, or any questions regarding your product, please follow these steps:

1. Log in to your purchasing account.
2. Navigate to "My Orders".
3. Locate the order ID for your Sekey Wagon Cart.
4. Click on "Contact Seller" to reach our customer support team.

Our team is dedicated to providing assistance and ensuring your satisfaction.