

[Manuals.plus](#) /

> [GTKZW](#) /

> GTKZW 3000W 2-Burner Induction Cooktop User Manual

## GTKZW Plaque Induction 2 feux

# GTKZW 3000W 2-Burner Induction Cooktop User Manual

Model: Plaque Induction 2 feux

## 1. PRODUCT OVERVIEW

---

The GTKZW 3000W 2-Burner Induction Cooktop is a versatile cooking appliance designed for both built-in and freestanding use. It features two independent cooking zones (1800W and 1200W), touch controls, 9 power levels, temperature control, and a timer function. Its compact design makes it suitable for various settings, including small kitchens, studios, and for portable use.



Image 1.1: GTKZW 2-Burner Induction Cooktop in a kitchen setting.

## 2. SAFETY INSTRUCTIONS

---

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- **Electrical Safety:** Ensure the power supply matches the appliance's requirements (220-240V). Do not use damaged power cords.
- **Overheat Protection:** The cooktop is equipped with an overheat protection system. If the temperature becomes too high, the unit will automatically shut off.
- **Child Lock:** Activate the child lock function to prevent accidental operation by children.
- **Proper Ventilation:** Ensure adequate ventilation around the cooktop, especially if built-in, to allow for proper heat dissipation. Do not block air vents.
- **Suitable Cookware:** Only use induction-compatible cookware. Incompatible cookware will not heat up.
- **Hot Surface Warning:** The cooktop surface may remain hot after use. Avoid touching it until it has cooled down.
- **Cleaning:** Always unplug the appliance before cleaning. Allow it to cool completely.



Image 2.1: Illustration of the child lock feature on the control panel.

## 3. PRODUCT COMPONENTS

---

The GTKZW Induction Cooktop consists of the following main components:

- **Crystal Glass Surface:** Durable and easy-to-clean cooking surface.
- **Two Induction Zones:** One 1800W zone (22 cm diameter) and one 1200W zone (16.5 cm diameter).
- **Touch Control Panel:** Intuitive controls with LED display for power, temperature, and timer settings.
- **Cooling System:** Integrated fan and air channel for efficient heat dissipation.
- **Non-slip Feet:** For stable freestanding placement.

# UTILISATION SUR PLAN DE TRAVAIL OU ENCASTRÉ

Prêt à l'emploi, sans câblage ni installation fastidieuse



Image 3.1: Overview of the cooktop showing dimensions and power ratings for each zone.



## 4. INSTALLATION

---

The GTKZW Induction Cooktop offers flexible installation options: freestanding or built-in.

### 4.1 Freestanding Installation

For freestanding use, simply place the cooktop on a stable, flat, and heat-resistant surface. Ensure there is sufficient clearance around the unit for ventilation. The integrated non-slip feet provide stability.

### 4.2 Built-in Installation

To install the cooktop as a built-in unit, prepare a countertop cutout with the following dimensions:

- **Cutout Dimensions:** Approximately 49 cm (length) x 27 cm (width).

Ensure adequate space below and around the cooktop for proper ventilation and heat dissipation. Consult a qualified electrician for electrical connections if you are unsure.



Image 4.1: Visual representation of the cooktop in both built-in and freestanding configurations.

## 5. OPERATION

---

The cooktop features an intuitive touch control panel for easy operation.

### 5.1 Power On/Off

Press the power button (O) to turn the cooktop on or off.

### 5.2 Selecting a Cooking Zone

After powering on, select the desired cooking zone by touching its corresponding control area.

### 5.3 Adjusting Power/Temperature

Use the '+' and '-' buttons to adjust the power level (P1-P9) or temperature (80°C to 270°C). The LED display will show the current setting.

# 9 NIVEAUX DE CUISSON FLEXIBLES

Une puissance totale de 3000w pour saisir rapidement ou mijoter doucement selon vos besoins



Image 5.1: Chart showing 9 power levels and corresponding temperatures for various cooking tasks.

## COMMANDE TACTILE INTUITIVE

Réglez la température et la puissance instantanément du bout des doigts pour une utilisation fluide



Image 5.2: Close-up of the touch control panel with LED display.

### 5.4 Timer Function

Press the timer button (**Minuterie**) and use '+' and '-' to set the cooking time, up to 120 minutes. The cooktop will automatically turn off once the timer expires.



Image 5.3: Visual of the cooktop in use with the 120-minute timer activated.

## 5.5 Child Lock

To activate the child lock, press and hold the lock button (**Verrouillage enfant**) for a few seconds. The controls will be disabled. Repeat the process to unlock.

## 6. COOKWARE COMPATIBILITY

---

Induction cooktops require specific types of cookware. Use only pots and pans with a magnetic base.

### 6.1 Compatible Cookware

- Cast iron pots and pans
- Stainless steel cookware with a magnetic base
- Enamelled steel cookware

### 6.2 Incompatible Cookware

- Aluminum cookware
- Ceramic cookware
- Copper cookware
- Glass cookware

To test if your cookware is compatible, place a magnet on the bottom of the pot or pan. If the magnet sticks, the cookware is suitable for induction cooking.

# COMPATIBLE AVEC LES USTENSILES DE CUISSON À INDUCTION

## Ustensiles compatibles



Marmite en fonte



Casserole inox



Casserole acier émaillé

## Ustensiles non compatibles



Casserole aluminium



Marmite céramique



Casserole cuivre



Marmite verre



Image 6.1: Visual guide to compatible and incompatible cookware types for induction cooktops.

## 7. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

- **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
- **Surface Cleaning:** The black crystal glass surface is easy to clean. Wipe it with a damp sponge and mild detergent. For stubborn stains, use a non-abrasive cooktop cleaner.
- **Drying:** Dry the surface thoroughly with a soft, clean cloth to prevent water spots.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the glass surface.
- **Ventilation Openings:** Keep the ventilation openings clear of dust and debris to ensure proper cooling.

# NETTOYAGE SANS EFFORT

La surface en verre cristal noir se nettoie facilement d'un simple coup d'éponge humide après refroidissement.



Image 7.1: Demonstration of cleaning the cooktop surface with a sponge after use.

## 8. TROUBLESHOOTING

If you encounter issues with your induction cooktop, refer to the following common troubleshooting steps:

| Problem                   | Possible Cause                                                                         | Solution                                                                                         |
|---------------------------|----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Cooktop does not turn on. | No power supply; power cord not plugged in; circuit breaker tripped.                   | Check power connection; ensure outlet is functional; reset circuit breaker.                      |
| Cookware is not heating.  | Cookware is not induction-compatible; cookware is too small or too large for the zone. | Use induction-compatible cookware; ensure cookware base covers at least 70% of the cooking zone. |
| Error code displayed.     | Specific malfunction or sensor issue.                                                  | Refer to the full manual for specific error code meanings. Try turning off and on again.         |

| Problem                         | Possible Cause                                         | Solution                                                                                 |
|---------------------------------|--------------------------------------------------------|------------------------------------------------------------------------------------------|
| Unusual noise during operation. | Normal fan operation; resonance from certain cookware. | A low humming sound from the fan is normal. Some cookware may produce slight vibrations. |

## 9. SPECIFICATIONS

Key technical specifications for the GTKZW 3000W 2-Burner Induction Cooktop:

- **Model Number:** Plaque Induction 2 feux
- **Brand:** GTKZW
- **Power:** 3000 Watts (1800W + 1200W)
- **Voltage:** 220-240 Volts
- **Number of Heating Elements:** 2
- **Control Type:** Touch Sensitive
- **Material:** Tempered Glass
- **Color:** Black
- **Product Dimensions (L x W x H):** 51 cm x 28.8 cm x 8 cm
- **Cutout Dimensions (Built-in):** Approx. 49 cm x 27 cm
- **Item Weight:** 5.5 Kilograms
- **Special Features:** Temperature Control, Timer, Portable, Child Lock
- **UPC:** 686875801937
- **Country of Origin:** China

## 10. WARRANTY AND SUPPORT

**Warranty:** The manufacturer's warranty information is not applicable as per product details. Please refer to your retailer's return policy for details on returns or exchanges.

**Customer Support:** For any questions, technical assistance, or service inquiries, please contact the retailer or the manufacturer directly through their official channels. Keep your purchase receipt for reference.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0DRNGD8FK>

More documents and user manuals: <https://manuals.plus/>