

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WORX](#) /

› [WORX 20V Bluetooth Speaker WX009L.9 Instruction Manual](#)

## WORX WX009L.9

# WORX 20V Bluetooth Speaker WX009L.9 Instruction Manual

Model: WX009L.9

## INTRODUCTION

---

The WORX 20V Bluetooth Speaker WX009L.9 is a durable and portable audio device designed for various environments, including jobsites, garages, and outdoor activities. This speaker features a powerful acoustic system for balanced stereo sound, 2-in-1 Bluetooth and auxiliary input connectivity, and a convenient USB-A charging port for external devices. Its robust roll cage design ensures protection against impacts, while the integrated handle provides easy portability. This manual provides essential information for the safe and effective use of your speaker.

## SAFETY INFORMATION

---

Please read and understand all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Battery Safety:** This product is a 'tool only' item and requires a WORX 20V PowerShare battery (sold separately). Always use compatible WORX batteries and chargers. Do not expose batteries to water or extreme temperatures.
- **Hearing Protection:** Prolonged exposure to loud sounds can cause hearing damage. Adjust volume to a comfortable level.
- **Environmental Conditions:** Do not expose the speaker to rain or wet conditions. Avoid operating in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Maintenance:** Do not attempt to disassemble or modify the speaker. Refer all servicing to qualified service personnel.

## PACKAGE CONTENTS

---


- 1 x WORX 20V Bluetooth Speaker (WX009L.9)

**Note:** Battery and charger are sold separately.


## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your WORX 20V Bluetooth Speaker.

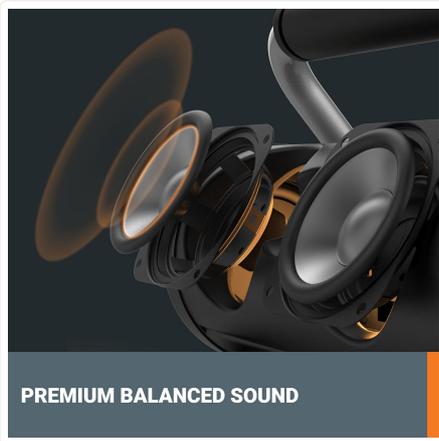

Front view of the WORX WX009L.9 Bluetooth Speaker, showing the speaker grille and control panel.

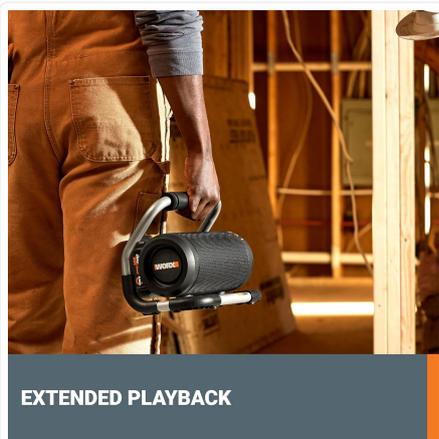

Side view of the WORX WX009L.9 Bluetooth Speaker, highlighting the durable roll cage and handle.



Close-up of the speaker's control panel with power, Bluetooth, USB, and Aux input buttons.


The speaker features a robust roll cage for protection, an ergonomic handle for carrying, and a control panel with intuitive buttons for power, volume, Bluetooth pairing, and input selection. A USB-A port is located on the side for charging external devices, and an auxiliary input allows for wired connections.

## SETUP

---

### 1. Installing the Battery

1. Ensure the speaker is powered off.
2. Locate the battery compartment on the rear of the speaker.
3. Align a charged WORX 20V PowerShare battery with the battery slot.
4. Slide the battery into the compartment until it clicks securely into place.

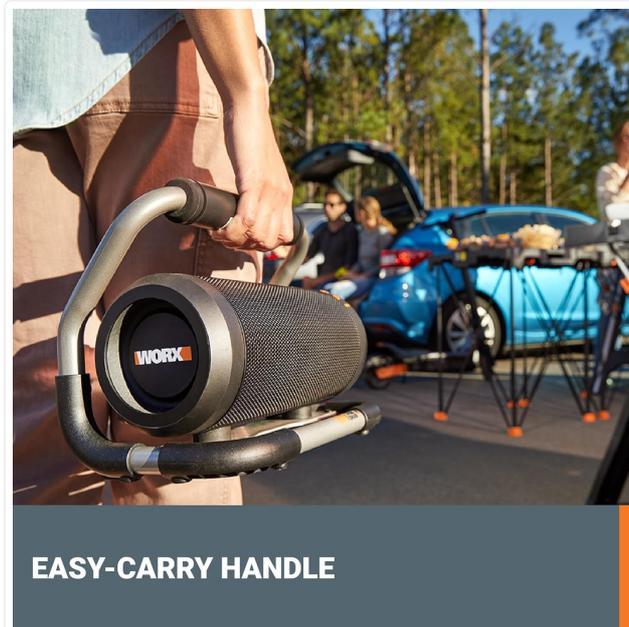

### EASY-CARRY HANDLE

Illustration of a WORX 20V PowerShare battery being inserted into the speaker's battery slot.

## 2. Charging the Battery

To charge your WORX 20V PowerShare battery, use a compatible WORX battery charger (sold separately). Follow the instructions provided with your charger for proper charging procedures.

## OPERATING INSTRUCTIONS


---

### 1. Powering On/Off

- To power on, press and hold the **Power button** (  ) on the control panel until the indicator light illuminates.
- To power off, press and hold the **Power button** again until the indicator light turns off.

### 2. Bluetooth Connection

1. Power on the speaker. The Bluetooth indicator light will flash, indicating it is in pairing mode.
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "WORX WX009L.9" from the list of devices.
4. Once connected, the Bluetooth indicator light will become solid, and you may hear a confirmation sound.

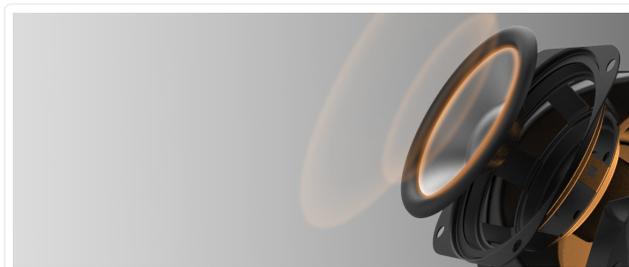

Graphic illustrating the Bluetooth connection process with the speaker.

The speaker has a Bluetooth range of up to 32 feet (10 meters).

### 3. Auxiliary Input

- Connect a 3.5mm audio cable (not included) from your audio device to the AUX input port on the speaker.


- The speaker will automatically switch to Auxiliary mode when a cable is detected.

#### 4. Volume Control

- Adjust the volume using the **Volume Up (+)** and **Volume Down (-)** buttons on the speaker's control panel.
- You can also control the volume directly from your connected Bluetooth or auxiliary device.

#### 5. USB Charging Port

- Connect a USB-A charging cable (not included) from your smartphone or other small electronic device to the USB-A port on the speaker.
- The speaker will provide power to charge your device while it is powered on.

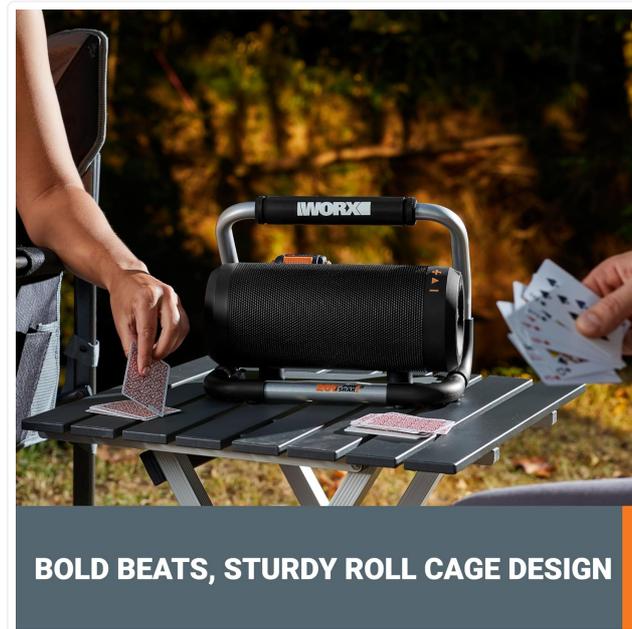

The speaker charging a smartphone via its USB-A port.

### MAINTENANCE

---

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not submerge the speaker in water.
- **Storage:** Store the speaker in a dry, protected area away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Always remove the battery from the speaker when not in use or during cleaning.

### TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is not inserted correctly or is discharged.	Ensure the battery is fully charged and properly inserted into the speaker.
No sound from speaker.	Volume is too low, audio source is paused, or incorrect input selected.	Increase speaker and device volume. Check if the audio source is playing. Verify correct input (Bluetooth/Aux) is active.

Problem	Possible Cause	Solution
Cannot connect via Bluetooth.	Speaker not in pairing mode, device out of range, or previous connection interference.	Ensure speaker is in pairing mode (flashing Bluetooth light). Move device closer to speaker. Forget "WORX WX009L.9" on your device and attempt to re-pair.
Poor sound quality.	Low battery, weak Bluetooth signal, or poor audio source quality.	Charge the battery. Move Bluetooth device closer. Try a different audio source or cable.
USB charging not working.	Speaker is off, or cable is faulty.	Ensure the speaker is powered on. Try a different USB cable.

## SPECIFICATIONS

Feature	Specification
Model Number	WX009L.9
Power Source	Battery Powered (WORX 20V PowerShare)
Connectivity Technology	Bluetooth
Audio Input	Bluetooth, Auxiliary (3.5mm)
Number of Channels	2
Material	Metal, Plastic
Product Dimensions (L x W x H)	6.89 x 11.89 x 9.09 inches
Item Weight	9.58 pounds
Manufacturer	WORX

## WARRANTY INFORMATION

For detailed warranty information regarding your WORX 20V Bluetooth Speaker WX009L.9, please refer to the official WORX website or the warranty card included with your product packaging. Keep your purchase receipt as proof of purchase for warranty claims.

## SUPPORT

For technical support, replacement parts, or further assistance with your WORX 20V Bluetooth Speaker, please visit the official WORX website or contact their customer service department.

Official WORX Store: [WORX Store on Amazon](#)

