

[Manuals.plus](#) /

> [WOLFANG](#) /

> WOLFANG Portable DVD Player WDV02 User Manual

WOLFANG WDV02

WOLFANG Portable DVD Player WDV02 User Manual

Model: WDV02

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of your WOLFANG Portable DVD Player, model WDV02. Please read this manual thoroughly before using the device and retain it for future reference.



Image: The WOLFANG Portable DVD Player WDV02, showcasing its 15.6-inch screen and compact design.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact

customer support.

- 1 x WOLFANG Portable DVD Player (WDV02)
- 1 x Remote Control (batteries not included)
- 1 x 3-in-1 AV Cable (male)
- 1 x AC Power Adapter
- 1 x Car Charger
- 1 x User Manual



Image: All components included in the WOLFANG Portable DVD Player package, including the player, remote, cables, and chargers.

3. PRODUCT OVERVIEW

3.1. Key Features

- **15.6-inch HD Screen:** 1280x800 resolution for clear visuals.
- **Rotatable Screen:** Supports 270° horizontal rotation and 180° vertical flip for optimal viewing angles.
- **Long Battery Life:** Built-in 5000mAh battery provides up to 6 hours of playback.

- **Region-Free Playback:** Compatible with DVDs from all regions (excluding Blu-ray discs).
- **Multi-Format Support:** Plays CD, DVD±R, CD-R(RW), SVCD-R(RW), DVD±RW, VCD discs. Supports VOB, AVI, MPEG, MP3, WMA, JPEG files via USB/SD.
- **Dual Stereo Speakers:** Integrated speakers for an immersive audio experience.
- **Headphone Jack:** 3.5mm headphone output for private listening.
- **Multiple Interfaces:** USB port, SD card slot (up to 32GB), AV input/output.
- **Resume Playback:** Automatically remembers the last playback position.
- **Quiet Disc Reading:** Designed for silent and shock-resistant disc playback.

3.2. Ports and Controls



Prend également en charge USB et Carte SD

Prend en charge les fichiers multimédias via USB et Carte SD (jusqu'à 32 Go)

Image: Labeled diagram of the player's side panel, indicating USB port, SD card slot, DC input, AV input/output, headphone jack, and power switch.

- **USB Port:** For connecting USB drives (up to 32GB) to play media files.
- **SD Card Slot:** For inserting SD cards (up to 32GB) to play media files.
- **DC IN:** Power input for AC adapter or car charger.
- **AV OUT:** Connects to a TV or projector for larger screen viewing.

- **AV IN:** Connects to external video sources.
- **Headphone Jack:** 3.5mm audio output.
- **ON/OFF Switch:** Powers the device on or off.
- **Control Buttons:** Play/Pause, Stop, Skip, Volume, Menu, Setup, etc. (located on the player's base).

4. SETUP AND POWERING ON

4.1. Charging the Battery

The portable DVD player is equipped with a built-in 5000mAh rechargeable battery. For optimal performance, fully charge the device before first use.

1. Connect the AC power adapter to the DC IN port on the player.
2. Plug the AC adapter into a wall outlet.
3. The charging indicator light will illuminate. The battery is fully charged when the indicator light changes color or turns off (refer to device specific indicator behavior).
4. For car use, connect the car charger to the DC IN port and plug it into your vehicle's cigarette lighter socket.

A full charge provides approximately 6 hours of playback time.



Image: Illustration of the 5000mAh battery capacity and the three power modes: car charger, AC adapter, and internal battery.

4.2. Powering On/Off

1. Ensure the battery is charged or the player is connected to a power source.
2. Slide the ON/OFF switch to the "ON" position.
3. To power off, slide the ON/OFF switch to the "OFF" position.

5. OPERATING INSTRUCTIONS

5.1. Disc Playback

1. Open the disc cover gently.
2. Place a compatible DVD or CD onto the disc spindle, ensuring it is seated correctly with the label side facing up.
3. Close the disc cover.
4. The player will automatically detect and begin playing the disc. If not, press the "Play" button on the player or remote control.

Supported Disc Formats: CD, DVD±R, CD-R(RW), SVCD-R(RW), DVD±RW, VCD. **Note: Blu-ray discs are not supported.**



Région Libre & Formats Multiples

Remarque : Ne prend pas en charge les disques Blu-ray.

Format de disque :

- VCD** VCD1.1, VCD2.0, VCD3.0, SVCD, DVCD, CVD
- DVD** MINI DVD, DVD-5, DVD-9, DVD-10, DVD-18, DVD+R, DVD-R, DVD-RW, DVD+RW

Image: Visual representation of the player's region-free and multi-format compatibility, with various disc and file icons.

5.2. USB/SD Card Playback

1. Insert a USB flash drive (up to 32GB) into the USB port or an SD card (up to 32GB) into the SD card slot.
2. Use the "Source" or "Mode" button on the player or remote to select USB or SD mode.
3. Navigate through your files using the directional buttons and press "Play" or "OK" to start playback.

Supported File Formats: VOB, AVI, MPEG, MP3, WMA, JPEG. **Note: Video files with resolution higher than 720*480 and image files higher than 2650*1440 are not supported.**



Image: Close-up of the player's side, showing a USB drive and an SD card inserted into their respective ports.

5.3. Screen Rotation

The screen can be rotated for various viewing preferences:

- **270° Horizontal Rotation:** Allows the screen to swivel left or right.
- **180° Vertical Flip:** Enables the screen to fold flat against the base, converting the player into a tablet-like display.

Fonction Mémoire de Dernière Position

Reprenez votre film là où vous l'avez laissé,
même après éjection ou arrêt.



Rotation de 270° et Flip de 180°

Satisfaites tous vos angles de vision.



Image: Three views of the portable DVD player showing the screen in different rotated and flipped positions.

5.4. Connecting to External Displays (TV/Projector)

You can connect the WDV02 to a larger screen using the provided AV cable.

1. Connect one end of the 3-in-1 AV cable to the AV OUT port on the DVD player.
2. Connect the other end of the AV cable to the corresponding AV IN ports (Yellow for Video, White for Left Audio, Red for Right Audio) on your TV or projector.
3. Select the correct AV input source on your TV or projector.

Note: An HDMI cable is not included and HDMI output is not supported by this model.

Synchroniser l'Écran avec le TV

Obtenez une meilleure expérience cinématographique



Image: A family watching the portable DVD player's content mirrored on a large television screen, illustrating the TV synchronization feature.

5.5. Using Headphones

For private listening, plug any standard 3.5mm headphones into the headphone jack on the side of the player.

Design à Double Haut-Parleur

Une expérience d'écoute plus riche pour votre événement



Image: An exploded view illustrating the internal components of the dual stereo speakers within the portable DVD player.

5.6. Remote Control

The included remote control allows for convenient operation from a distance. Insert 2x AAA batteries (not included) into the remote before use.

- **Power:** Turns the player on/off.
- **Play/Pause:** Starts or pauses playback.
- **Stop:** Stops playback.
- **Skip:** Skips to the next/previous track or chapter.
- **Volume +/-:** Adjusts the volume level.
- **Menu/Setup:** Accesses disc or system settings.
- **Directional Buttons & OK:** Navigates menus and confirms selections.
- **Subtitle:** Toggles subtitles (if available on disc).
- **Mode/Source:** Switches between disc, USB, and SD card modes.



Contrôle à Distance Double

Le lecteur DVD portable WOLFANG dispose de commandes complètes à bord et à distance. Son design convivial permet aux enfants et aux personnes âgées de profiter facilement des films à la maison ou en déplacement.

Image: The portable DVD player alongside its remote control, highlighting the dual control options.

6. MAINTENANCE AND CARE

- Keep the player away from direct sunlight, high temperatures, and humidity.
- Clean the screen and exterior with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid dropping or subjecting the player to strong impacts.
- When not in use for extended periods, store the player in a cool, dry place and charge the battery periodically to maintain its health.
- Handle discs by their edges to avoid fingerprints and scratches. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

7. TROUBLESHOOTING

Problem	Possible Solution
Player does not power on.	<ul style="list-style-type: none"> ◦ Ensure the ON/OFF switch is in the "ON" position. ◦ Check if the battery is charged or if the AC adapter/car charger is properly connected.
No disc playback.	<ul style="list-style-type: none"> ◦ Verify the disc is inserted correctly with the label side up. ◦ Ensure the disc is clean and free of scratches. ◦ Check if the disc format is supported (Blu-ray discs are not supported). ◦ Try another compatible disc.

Problem	Possible Solution
No video from USB/SD card.	<ul style="list-style-type: none"> ◦ Ensure the USB drive/SD card is properly inserted. ◦ Check if the file format is supported (VOB, AVI, MPEG). ◦ Verify the video resolution is not higher than 720*480. ◦ Ensure the USB drive/SD card capacity does not exceed 32GB.
No sound.	<ul style="list-style-type: none"> ◦ Adjust the volume using the player's controls or remote. ◦ If headphones are connected, ensure they are fully plugged in and functional. ◦ If connected to a TV, check the TV's volume and input settings.
Remote control not working.	<ul style="list-style-type: none"> ◦ Ensure batteries are inserted correctly and are not depleted. ◦ Point the remote directly at the player's IR sensor. ◦ Remove any obstacles between the remote and the player.

8. SPECIFICATIONS

Feature	Detail
Model Number	WDV02
Screen Size	15.6 Inches
Display Resolution	1280x800
Display Type	LCD LED
Battery Capacity	5000mAh Lithium-ion
Battery Life	Up to 6 hours
Supported Disc Formats	CD, DVD±R, CD-R(RW), SVCD-R(RW), DVD±RW, VCD (Region-Free)
Supported USB/SD Capacity	Up to 32GB
Supported Video Formats (USB/SD)	VOB, AVI, MPEG (Max 720*480 resolution)
Supported Audio Formats (USB/SD)	MP3, WMA
Supported Image Formats (USB/SD)	JPEG (Max 2650*1440 resolution)
Connectivity	USB, AV Input/Output
Compatible Devices	Television, Headphones
Manufacturer	WOLFANG
Country of Origin	China

9. WARRANTY AND SUPPORT

WOLFANG offers a **24-month warranty** for this product, along with a **1-month free return and exchange** policy. For any questions, technical assistance, or warranty claims, please contact WOLFANG customer support:

Email: support.vc@wolfang.co

Our support team aims to respond to all inquiries within 24 hours.