Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- SoBuy /
- > SoBuy FKW45-KA Kitchen Trolley with Worktop and Storage Instruction Manual

SoBuy FKW45-KA

SoBuy FKW45-KA Kitchen Trolley with Worktop and Storage Instruction Manual

Model: FKW45-KA | Brand: SoBuy

INTRODUCTION

This instruction manual provides essential information for the assembly, operation, and maintenance of your SoBuy FKW45-KA Kitchen Trolley. Please read this manual thoroughly before use to ensure safe and correct handling of the product. Keep this manual for future reference.



This image displays the SoBuy FKW45-KA kitchen trolley, showcasing its light brown finish, natural wood worktop, a top drawer, two upper cabinets, and a three-tier wine rack on the left side. The trolley is equipped with caster wheels.

SAFETY INFORMATION

Adherence to these safety guidelines is crucial for preventing accidents and ensuring the longevity of your product.

- Anti-Tip Device: Secure the furniture to the wall using the included anti-tip device. This prevents accidental overturning, especially in households with children or pets.
- Surface Stability: Use the trolley carefully on uneven surfaces. Operating on unstable ground can cause the trolley to become unbalanced and potentially overturn.
- Weight Capacity: Do not exceed the maximum load capacity of 30 kg. Overloading can compromise the structural integrity and stability of the trolley.
- Assembly: Ensure all parts are correctly assembled and tightened according to the instructions before use. Loose
 components can lead to instability.
- Cleaning: Use only mild cleaning agents and a soft cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish or material.

PRODUCT FEATURES

The SoBuy FKW45-KA Kitchen Trolley is designed for versatile use and efficient storage in various settings.

- Compact Design: Ideal for small spaces, serving as a compact kitchen unit or a multi-functional trolley.
- Ample Storage: Features a large drawer, a double cabinet, and a 3-tier wine rack for organizing glasses, utensils, and bottles.
- Solid Wood Worktop: Equipped with a natural rubberwood worktop, providing a strong, durable, and aesthetically pleasing surface for food preparation or serving.
- **Mobile with Brakes:** Four 360° swivel caster wheels, two of which are lockable, allow for easy movement and stable positioning.
- Versatile Use: Can function as a mobile trolley, serving cart, coffee station, or outdoor kitchen unit.



This image provides an interior view of the SoBuy FKW45-KA kitchen trolley. The top drawer is open, revealing a cutlery organizer. The upper cabinets are open, showing space for kitchen items. The side wine rack holds bottles, and the lower cabinet is also open, displaying additional storage.

ASSEMBLY INSTRUCTIONS

The SoBuy FKW45-KA Kitchen Trolley is designed for straightforward assembly. All necessary parts are numbered, and illustrated instructions are provided to guide you through each step.

- 1. **Unpack Components:** Carefully unpack all parts and hardware from the packaging. Verify that all components listed in the parts list are present and undamaged.
- 2. Identify Parts: Refer to the illustrated assembly guide to identify each numbered part.
- 3. **Follow Step-by-Step Guide:** Assemble the trolley by following the sequential steps outlined in the provided instructions. Ensure all screws and fasteners are securely tightened.
- 4. **Attach Anti-Tip Device:** Once assembled, attach the anti-tip device to the trolley and secure it to a wall as instructed to prevent tipping.

5. Final Check: Before placing items on the trolley, ensure all connections are firm and the structure is stable. For detailed visual guidance, please refer to the assembly diagrams included with your product packaging. **OPERATING INSTRUCTIONS** Using your SoBuy FKW45-KA Kitchen Trolley is simple and convenient. • Moving the Trolley: To move the trolley, ensure the brakes on the caster wheels are disengaged. Gently push or pull the trolley to your desired location. . Locking the Wheels: To secure the trolley in a stationary position, engage the brakes on the two lockable caster wheels. This prevents unintended movement. • Using Storage: Utilize the top drawer for cutlery and small utensils. The upper cabinets are suitable for dishes, pantry items, or small appliances. The side wine rack is designed to hold standard-sized bottles. • Worktop Use: The solid rubberwood worktop provides a stable surface for food preparation, serving, or as a temporary display area. Avoid placing excessively hot items directly on the worktop without protection.



This close-up image highlights one of the 360-degree swivel caster wheels of the SoBuy FKW45-KA kitchen trolley. The wheel features a visible locking mechanism, allowing the trolley to be secured in place.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and functionality of your kitchen trolley.

- Cleaning Surfaces: Wipe all surfaces with a soft, damp cloth. For stubborn marks, use a mild soap solution and immediately dry with a clean cloth.
- Worktop Care: The rubberwood worktop can be periodically treated with food-safe mineral oil to protect the wood and enhance its natural luster. Avoid prolonged exposure to moisture.
- Avoid Harsh Chemicals: Do not use abrasive cleaners, solvents, or ammonia-based products, as these can damage the finish and materials.
- **Check Fasteners:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary to maintain structural integrity.

• Wheel Maintenance: Keep the caster wheels free of debris to ensure smooth movement. If wheels become stiff, clean them and apply a small amount of silicone spray if needed.

TROUBLESHOOTING

Here are solutions to common issues you might encounter with your kitchen trolley.

Trolley is unstable or wobbly:

Ensure all assembly screws are fully tightened. Check that the trolley is placed on a level surface. If on an uneven surface, adjust the position or use shims if necessary.

Caster wheels do not roll smoothly:

Check if the wheel brakes are engaged. Inspect wheels for trapped debris (hair, lint) and remove it. Clean the wheels and their axles.

Drawer or cabinet doors do not align properly:

During assembly, ensure all panels are correctly oriented and secured. For minor adjustments, check the hinge screws on the cabinet doors; slight loosening or tightening can sometimes correct alignment. Ensure the trolley is on a level surface.

Worktop appears dull or dry:

Clean the worktop thoroughly and apply a thin, even coat of food-safe mineral oil. Allow it to soak in, then wipe off any excess.

SPECIFICATIONS

Feature	Detail
Brand	SoBuy
Model Number	FKW45-KA
Color	Light Brown
Product Dimensions (D x W x H)	38 x 67 x 87 cm
Item Weight	16.8 kg
Recommended Maximum Weight	30 kg
Material	MDF (E1), Solid Rubberwood (worktop)
Caster Wheels	4 (360° swivel, 2 with brakes)



This diagram illustrates the precise dimensions of the SoBuy FKW45-KA kitchen trolley. Key measurements include a total height of 87 cm, a width of 67 cm, and a depth of 38 cm. Internal compartment and drawer dimensions are also indicated.

WARRANTY AND SUPPORT

SoBuy products are manufactured to high-quality standards. For information regarding warranty coverage, returns, or technical support, please refer to the documentation included with your purchase or contact SoBuy customer service directly through their official website or the retailer where the product was purchased.

© 2024 SoBuy. All rights reserved.

Related Documents - FKW45-KA

