

[Manuals.plus](#) /

> [yeezoo](#) /

> yeezoo Couch Stand Assist for Elderly - Instruction Manual

yeezoo YEEZOO

yeezoo Couch Stand Assist for Elderly

Model: YEEZOO

1. PRODUCT OVERVIEW

The yeezoo Couch Stand Assist is designed to provide stable support for individuals needing assistance when transitioning from a sitting to a standing position. It features an adjustable height and a non-slip handle for enhanced safety and comfort.



Image 1.1: Overview of the yeezoo Couch Stand Assist highlighting its key features.

Key Features:

- **Stable Design:** Equipped with a non-slip rubber handle and a 5mm thickened base plate, supporting up to 300 lbs for enhanced stability.
- **Adjustable Height:** Offers six height settings, ranging from 23.7 inches to 33.7 inches, to accommodate various users and furniture types.
- **Versatile Placement:** Can be positioned under couch/chair legs, next to a couch, or beside a toilet.
- **Easy Assembly:** Designed for straightforward, independent assembly.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using the yeezoo Couch Stand Assist. Failure to follow these instructions may result in injury.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 300 lbs.
- **Not a Walking Aid:** This device is designed as a stand assist and is NOT intended to be used as a walking cane or for full body support during ambulation. It weighs 17.5 pounds and is not portable for walking.
- **Stability Check:** Always ensure the stand assist is stable and securely positioned before use. The base plate should be fully under the furniture legs or firmly on the floor.
- **Minor Movement:** A slight shaking may occur due to the gap between metal pipes, which is normal and does not affect the safety of use. However, if excessive movement is observed, re-check assembly and placement.
- **Clear Area:** Ensure the area around the stand assist is clear of obstructions to prevent tripping hazards.

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your yeezoo Couch Stand Assist. A hex wrench is included for assembly.

1. **Attach Vertical Support to Base Plate:** Place the base plate on a flat surface. Insert the vertical support into the designated hole on the base plate. Ensure the holes on the vertical support are facing the correct direction for height adjustment.
2. **Secure Base Plate:** Use the three fixed screws and the provided hex wrench to securely fasten the vertical support to the base plate. Tighten all screws firmly.
3. **Insert Grab Bar:** Insert the curved grab bar into the top of the vertical support. Adjust to a suitable height (refer to Section 4 for height adjustment).
4. **Fix Grab Bar Height:** Once the desired height is set, align the two holes on the grab bar with the corresponding holes on the vertical support. Insert the two D-type rings through these aligned holes to fix the height.



Image 3.1: Step-by-step assembly guide for the yeezoo Couch Stand Assist.

Assembly Video:

Your browser does not support the video tag.

Video 3.1: Official assembly instructions for the yeezoo Couch Stand Assist. This video demonstrates how to connect the base plate, vertical support, and grab bar, and how to secure the components.

4. OPERATION AND HEIGHT ADJUSTMENT

The yeezoo Couch Stand Assist is designed for ease of use and adaptability to various furniture and user needs.

Placement:

- Position the base plate of the stand assist under the legs of your couch, sofa, or chair. Ensure the furniture legs rest firmly on the base plate to provide maximum stability.
- Alternatively, the stand assist can be placed next to the furniture or beside a toilet, ensuring the base plate is fully flat on the floor and the unit is stable before use.



Image 4.1: Examples of versatile placement for the stand assist device.

Using the Stand Assist:

1. Sit down on your furniture as usual.
2. When ready to stand, grasp the non-slip handle firmly with one or both hands.
3. Use the support from the handle to push yourself up to a standing position.



Image 4.2: Demonstrating the effectiveness of the stand assist for transitioning from sitting to standing.

Height Adjustment:

The stand assist offers six adjustable height settings to suit individual needs and furniture heights.

1. To adjust the height, remove the two D-type rings from the vertical support.
2. Carefully slide the grab bar up or down to the desired height. Ensure the internal mechanism clicks into place at one of the six preset height holes.
3. Re-insert the two D-type rings through the aligned holes on the grab bar and vertical support to secure the chosen height.
4. Always test the stability of the stand assist after adjusting the height before full use.



Image 4.3: Detailed dimensions and height adjustment options.

5. MAINTENANCE

To ensure the longevity and safe operation of your yeezoo Couch Stand Assist, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down the metal surfaces and non-slip handle with a damp cloth and mild soap. Avoid abrasive cleaners or solvents that could damage the finish.
- **Inspection:** Regularly inspect all screws, connections, and the D-type rings to ensure they are tight and secure. Tighten any loose fasteners immediately.
- **Rubber Handle:** Check the non-slip rubber handle for any signs of wear or damage. Replace if necessary to maintain grip.

- **Storage:** Store the stand assist in a dry place when not in use for extended periods.

6. TROUBLESHOOTING

If you encounter any issues with your yeezoo Couch Stand Assist, refer to the following common solutions:

- **Slight Shaking:** A minor amount of movement or shaking is normal due to the design and adjustable nature of the product. This does not compromise safety. Ensure all screws are tightened and the D-type rings are fully engaged.
- **Difficulty Adjusting Height:** Ensure the D-type rings are fully removed before attempting to slide the grab bar. Check for any debris or obstruction within the vertical support tube.
- **Instability:** Verify that the base plate is fully flat on the floor or securely positioned under furniture legs. Ensure all assembly screws are tightened.

7. SPECIFICATIONS

Feature	Detail
Brand	yeezoo
Model Number	YEEZOO
Material	Metal
Color	Polished Black
Item Weight	17.5 lbs
Maximum Capacity	300 lbs
Adjustable Height Range	23.7 inches to 33.7 inches (6 settings)
Base Plate Dimensions	Approx. 23.6 inches (length) x 19.7 inches (width)
Handle Width	13.2 inches

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact the manufacturer directly. Keep your purchase receipt as proof of purchase.