

whatplus C300

Whatplus C300 Portable CD Player with Bluetooth 5.2 User Manual

Model: C300

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Whatplus C300 Portable CD Player. Please read this manual thoroughly before using the product and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Main CD player unit
- USB charging cable
- Instruction manual
- Magnetic fastener (for lid customization)

Package Contents

Main CD player unit *1

USB charging cable *1

Instruction manual *1

Magnetic fastener



Image: The Whatplus C300 Portable CD Player, its retail box, a USB charging cable, the instruction manual, and small magnetic fasteners, illustrating the complete package contents.

3. PRODUCT OVERVIEW

3.1. Front and Top View



Image: A vintage white Whatplus C300 Portable CD Player with its lid open, revealing the CD placement area and the control panel with buttons and a volume knob. The front features a speaker grille with the "WhatPlus" logo.

- **CD Tray:** Area for placing audio CDs.
- **Play/Pause Button:** Initiates or pauses CD playback.
- **Previous/Next Track Buttons:** Navigates between tracks.
- **Volume Knob:** Adjusts the audio output level.
- **Power Indicator:** LED light indicating power status.
- **Speaker Grille:** Integrated stereo speakers for audio output.

3.2. Rear Panel Connections

Wired Connection

Supports external headphones/speakers
with multi-interface compatibility
(TF card/USB drive)



Image: The back panel of the Whatplus C300 Portable CD Player, highlighting the headphone jack, AUX-IN connection, TF card slot, USB Type-C charging port, and USB-A port.

- **Headphone Jack (3.5mm):** For private listening with headphones.
- **AUX-IN Port (3.5mm):** Connect external audio devices via an auxiliary cable.
- **TF Card Slot:** Insert a TF (MicroSD) card for audio playback.
- **USB Type-C Port:** For charging the device.
- **USB-A Port:** For connecting USB drives for audio playback.

3.3. Design Features



Image: An illustration detailing the internal components and materials of the Whatplus C300 CD Player, including a magnetic metal plate for securing small magnets, a felt-lined interior lid for protection, and the lychee-pattern leather material for an elegant finish.

- **Magnetic Metal Plate:** Located on the interior lid, allows for securing small magnets or decorative items.
- **Felt-lined Interior Lid:** Provides protection for inserted items.
- **Lychee-pattern Leather Material:** Offers a premium and elegant exterior finish.

4. SETUP

4.1. Initial Charge

Before first use, fully charge the CD player using the provided USB Type-C cable. Connect the cable to the USB Type-C port on the rear panel and plug the other end into a compatible USB power adapter (not included) or a computer USB port. The power indicator light will show charging status.

4.2. Power On/Off

To power on the device, rotate the volume knob clockwise until you hear a click and the power indicator illuminates. To power off, rotate the volume knob counter-clockwise until it clicks and the indicator light turns off.

5. OPERATING INSTRUCTIONS

5.1. CD Playback

1. Open the top lid of the CD player.
2. Carefully place an audio CD onto the spindle in the CD tray, ensuring it is seated correctly.
3. Close the top lid.
4. Turn on the device using the volume knob.
5. Press the **Play/Pause** button to begin playback.
6. Use the **Previous/Next Track** buttons to skip tracks.
7. Adjust the volume using the volume knob.

5.2. Bluetooth Connection

The Whatplus C300 supports Bluetooth 5.2 for wireless audio streaming.

Wireless connection

Can receive and play music from devices



Image: A hand holding a smartphone displaying a music app, wirelessly connected to the Whatplus C300 Portable CD Player, demonstrating Bluetooth streaming capability.

1. Ensure the CD player is powered on.
2. Activate Bluetooth on your smartphone or other Bluetooth-enabled device.
3. Search for "WhatPlus C300" in your device's Bluetooth settings.
4. Select "WhatPlus C300" to pair. A confirmation sound will indicate a successful connection.
5. You can now stream audio wirelessly from your device to the CD player.

Your browser does not support the video tag.

Video: An official product video demonstrating the Whatplus C300 Portable CD Player's features, including its Bluetooth connectivity and compact design.

5.3. AUX-IN Playback

Connect external audio sources (e.g., phone, laptop) using a 3.5mm auxiliary cable (not included) to the AUX-IN port on the rear panel. The player will automatically switch to AUX mode.

5.4. TF Card / USB Drive Playback

Insert a TF (MicroSD) card into the TF card slot or a USB drive into the USB-A port on the rear panel. The player will automatically detect the storage device and begin playing compatible audio files.

Your browser does not support the video tag.

Video: An official product video showcasing the Whatplus C300 CD Player, demonstrating its various playback modes including CD, Bluetooth, and external media support.

6. CHARGING THE DEVICE

The Whatplus C300 features a 2000mAh rechargeable battery. When the battery is low, the power indicator light may flash or change color (refer to specific model indicator details if available). Connect the provided USB Type-C cable to the charging port and a power source. A full charge typically provides 8-10 hours of playtime.

7. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.
- Do not expose the device to extreme temperatures, humidity, or direct sunlight.
- Handle CDs carefully by the edges to prevent scratches.
- When not in use, store the CD player in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery or power switch off.	Charge the device. Ensure the volume knob is rotated clockwise to turn on.
CD does not play or skips.	CD is dirty, scratched, or incorrectly placed.	Clean the CD with a soft cloth. Ensure the CD is properly seated. Try another CD.
No sound from speakers.	Volume too low, device muted, or headphones connected.	Increase volume. Disconnect headphones if external sound is desired. Check if device is muted.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth.	Device not in pairing mode, or too far from source.	Ensure Bluetooth is enabled on both devices. Move devices closer. Restart both devices.

9. SPECIFICATIONS

- **Model Name:** C300
- **Product Dimensions:** 10 x 6.5 x 4.53 inches
- **Item Weight:** 3.5 pounds
- **Battery:** 2000mAh Lithium Ion (included)
- **Connectivity:** Bluetooth 5.2, Auxiliary, USB
- **Special Features:** Built-in Speakers, CD-R/RW Compatible, TF Card Support



Image: A diagram illustrating the physical dimensions of the Whatplus C300 Portable CD Player, with measurements for length (7.9 inches), width (6.3 inches), and height (3 inches).

10. WARRANTY AND SUPPORT

The Whatplus C300 Portable CD Player comes with a 1-year hassle-free warranty. For warranty claims, technical support, or any inquiries, please contact Whatplus customer service through the retailer's platform or visit the official Whatplus store online.

Official Whatplus Store: [Whatplus Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question