

RAK-SC301X, ST-X301L, ST-X901L, SU-X101, SU-X301, RAK-SC304W, RAK-SC003WH, SC-CH655, SA-CH655, SL-CH555, SB-CH655D, RAK-

Technics Replacement Remote Control Instruction Manual

For Mini Changer Systems: RAK-SC301X, ST-X301L, ST-X901L, SU-X101, SU-X301, RAK-SC304W, RAK-SC003WH, SC-CH655, SA-CH655, SL-CH555, SB-CH655D, RAK-SC310W

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and basic maintenance of your new Generic replacement infrared remote control. This remote is designed to be compatible with various Technics Mini Changer System models as listed above. Please note that as a replacement unit, it may not offer all functions present on your original remote control.

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Keep the remote control away from water and other liquids.
- Do not attempt to disassemble or modify the remote control. This will void any potential warranty.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

Your package should contain the following item:

- 1 x Generic Replacement Remote Control

Note: Batteries are not included and must be purchased separately. This remote requires 2 AAA batteries.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.

3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back of the remote control with the battery compartment. The compartment cover slides open to reveal the battery slots, where two AAA batteries are inserted according to polarity markings.

4.2 Compatibility Note

This remote control is an infrared (IR) replacement unit. It is designed to function with the Technics Mini Changer System models listed in the title. For optimal performance, ensure your original remote control had a similar button layout and that your audio system is an IR-controlled model. No programming or setup is typically required; simply insert batteries and point the remote at your audio system.

5. OPERATING INSTRUCTIONS

The remote control features a variety of buttons for controlling your Technics Mini Changer System. Refer to the image below for a visual guide to the button layout.



Figure 2: Front view of the replacement remote control. The remote features buttons for power, source selection (CD, Tape, Tuner), numeric input, playback controls, volume, and various system functions.

5.1 Basic Functions

- **OFF/ON:** Powers the audio system on or off.
- **VOLUME + / -:** Increases or decreases the audio volume.
- **MUTING-20dB:** Mutes the audio output by 20 decibels. Press again to restore volume.

5.2 Source Selection

- **CD:** Selects the Compact Disc player as the audio source.
- **TAPE:** Selects the Cassette Tape deck as the audio source.
- **TUNER:** Selects the Radio Tuner as the audio source.

5.3 Playback and Navigation Controls

- **DISC 1-0, ≥10:** Numeric buttons for direct track selection on CD or tuner preset selection.

- **PLAY** (▶): Starts playback for the selected source (CD, Tape).
- **PAUSE** (■ ■): Pauses playback. Press again to resume.
- **STOP** (■): Stops playback.
- **SKIP** (◀◀ / ▶▶): Skips to the previous or next track/station.
- **REWIND** (◀◀ TAPE) / **FAST FORWARD** (▶▶ TAPE): Rewinds or fast forwards the tape.

5.4 Advanced Functions

- **EASY PLAY**: Initiates easy playback mode for CD, Tape, or Tuner.
- **PROGRAM**: Enters program mode for CD track sequencing.
- **CANCEL**: Cancels a program or selection.
- **--EQ.SPACE--**: Adjusts equalizer settings.
- **MODE**: Cycles through various playback or tuner modes.
- **V.BASS**: Activates or deactivates the Virtual Bass enhancement.
- **ON/FLAT**: Toggles between sound enhancement and flat equalizer settings.
- **SLEEP**: Sets a timer for the system to automatically power off.

5.5 Recording Controls

- **REC** (●): Initiates recording on the tape deck.
- **REC PAUSE** (■ ■): Pauses recording.
- **DECK 1/2**: Selects between Tape Deck 1 or Tape Deck 2 for playback or recording.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's surface or internal components.

6.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries or different types of batteries.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the audio system's IR receiver.
 - Confirm that the remote is pointed directly at the audio system.
- **Limited functionality:**
 - As a replacement remote, some advanced or specific functions of your original unit may not be

supported. This is normal for universal or replacement remotes.

- Verify that your audio system model is listed as compatible with this remote control.

8. SPECIFICATIONS

Feature	Detail
Brand	Generic
Manufacturer	Easytry
Compatible Devices	Technics Mini Changer Systems (Specific models listed in title)
Power Source	2 x AAA Batteries (not included)
Color	Black
Special Feature	Infrared Replacement Remote

9. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller or retailer from whom you purchased the item. For technical support or inquiries regarding compatibility, please contact the seller directly.