

## Kiseely YL282

# Kiseely 6L Air Fryer Model YL282

## INSTRUCTION MANUAL

### Important Safety Instructions

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### Product Components

---

Familiarize yourself with the main parts of your Kiseely 6L Air Fryer for optimal use.



**Image:** The Kiseely 6L Air Fryer, showcasing its glass touch screen, clear viewing window, and stainless steel finish. The main unit houses the heating element and fan, while the removable basket is designed for food placement.

1. **Main Unit:** Contains the heating element and fan.
2. **Control Panel:** Glass touch screen with digital display for settings and functions.
3. **Clear Viewing Window:** Allows monitoring of cooking progress without opening the basket.
4. **Air Fryer Basket:** Non-stick, removable basket for holding food.
5. **Basket Handle:** For safe insertion and removal of the basket.
6. **Air Inlet:** Located on the top of the appliance.
7. **Air Outlet Vents:** Located at the back of the appliance.

## Setup and First Use

Follow these steps to prepare your air fryer for its first use.

1. **Unpacking:** Carefully remove all packaging materials, stickers, and labels from the appliance.
2. **Cleaning:** Wash the air fryer basket and any removable accessories in hot, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth. Do not immerse the

main unit in water.

3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 6 inches (15 cm) of clear space around the back and sides of the appliance for proper air circulation. Do not place it directly under cabinets.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 350°F (175°C) to burn off any manufacturing residues. A slight odor may be present, which is normal and will dissipate.

## Operating Instructions

---

Learn how to use the digital touch controls and various cooking functions of your air fryer.

### Basic Operation

1. **Power On:** Plug in the appliance. The display will illuminate briefly. Press the Power button (O/I) to turn on the air fryer.
2. **Preheating:** For best results, preheat the air fryer before adding food. Select a preset function or manually set the temperature and time, then press the Start/Pause button.
3. **Loading Food:** Pull out the air fryer basket using the handle. Place food into the basket. Do not overfill the basket to allow for proper air circulation. Slide the basket back into the appliance until it clicks into place.
4. **Selecting a Function:** Use the preset function icons (e.g., Air Frying, Roast, Steak, Baking, Fries, Grilling, Dehydrating, Keep Warm, Wings, Vegetables) on the glass touch screen. Each icon represents a pre-programmed temperature and time.
5. **Adjusting Temperature and Time:** If not using a preset, or to modify a preset, use the temperature (+/-) and time (+/-) buttons to set your desired cooking parameters.
6. **Start Cooking:** Press the Start/Pause button (▶/||) to begin the cooking cycle.
7. **Monitoring Progress:** The clear viewing window and internal oven light allow you to monitor food without opening the basket. Press the light button to illuminate the interior.
8. **Shaking/Flipping Food:** For even cooking, some recipes may require shaking or flipping food halfway through the cooking process. Carefully pull out the basket, shake or flip, then reinsert. The air fryer will resume cooking automatically.
9. **End of Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food to a serving dish.
10. **Power Off:** Press the Power button (O/I) to turn off the appliance. Unplug from the wall outlet when not in use.

### Preset Functions

The Kiseely 6L Air Fryer features 10+ one-touch cooking functions:

- Air Frying
- Roast
- Steak
- Baking
- Fries
- Grilling
- Dehydrating
- Keep Warm
- Wings

- Vegetables

Each preset has a default temperature and time, which can be adjusted manually after selection.

## Maintenance and Cleaning

Proper cleaning and maintenance ensure the longevity and performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning the Basket:** The non-stick air fryer basket is dishwasher-safe. Alternatively, wash it with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak the basket in warm, soapy water for about 10 minutes before cleaning.
3. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth and a mild detergent. Do not use abrasive cleaners or scouring pads. Ensure the interior is completely dry before storage.
4. **Cleaning the Exterior:** Wipe the exterior surface with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles. Ensure the appliance is unplugged and completely cool.
6. **Storage:** Store the cleaned and dried air fryer in a cool, dry place. Ensure the power cord is neatly wrapped.

## Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power button not pressed.	Ensure the power cord is securely plugged into a grounded outlet. Press the Power button (O/I) to activate the display.
Food is not cooked evenly.	Basket is overcrowded. Food was not shaken/flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use. High fat content food.	Clean the basket and interior thoroughly after each use. For high-fat foods, drain excess oil from the basket during cooking.
Appliance emits a burning smell.	Food particles stuck to the heating element.	Unplug and allow to cool. Clean the heating element with a soft brush.
Food is not crispy.	Too much moisture in food. Not enough oil.	Pat food dry before air frying. Lightly spray or toss food with a small amount of oil.

## Specifications

Technical details for the Kiseely 6L Air Fryer Model YL282.

**Model Number:** YL282

**Capacity:** 6 Quarts (approximately 6 Liters)

**Product Dimensions:** 12.2"D x 9.84"W x 12.6"H

**Item Weight:** 8.71 pounds (3.96 Kilograms)

**Min Temperature Setting:** 80 Degrees Celsius (176°F)

**Max Temperature Setting:** 888 Degrees Fahrenheit (475°C) - *Note: This value may indicate a display range rather than actual operational maximum. Refer to product for typical cooking temperatures.*

**Control Type:** Digital Touch Screen

**Features:** Clear Viewing Window, Non-stick Coating, Dishwasher Safe Parts (Basket)

**UPC:** 795490868673

## Warranty Information

---

This Kiseely appliance is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for warranty claims.

## Customer Support

---

For any questions, assistance, or to report issues with your Kiseely 6L Air Fryer, please contact our customer support team. Contact details can typically be found on the product packaging, our official website, or the warranty card. Please have your model number (YL282) and purchase information ready when contacting support.