Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > POPCHOSE /
- > POPCHOSE Handheld Steam Cleaner SG-SC102 User Manual

POPCHOSE SG-SC102

POPCHOSE Handheld Steam Cleaner

Model: SG-SC102

Introduction

Thank you for choosing the POPCHOSE Handheld Steam Cleaner. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.



Image: The POPCHOSE Handheld Steam Cleaner in gray-purple, accompanied by its various cleaning attachments, showcasing its compact design and comprehensive accessory set.

Important Safety Information

- **READ THIS BEFORE USE:** Always remove the red silicone safety cap before operating the steam cleaner or attaching accessories.
- Use only distilled or demineralized water to prevent mineral buildup and ensure optimal performance.
- Do not open the water tank cap while the unit is pressurized or hot.
- Keep the steam cleaner out of reach of children and pets.
- Ensure the power cord is not damaged and avoid using the appliance if it is.
- Always unplug the appliance when not in use or before cleaning.

For a visual guide on initial setup and safety, please refer to the video below:

Video: A demonstration titled "Watch This Before Using POPCHOSE Steam Cleaner" showing essential pre-use steps and safety precautions.

Package Contents

Your POPCHOSE Handheld Steam Cleaner comes with the following items:

- POPCHOSE Handheld Steam Cleaner Unit
- Red Silicone Safety Cap (pre-installed, remove before use)
- 2 x Nylon Round Brushes
- 2 x Grout Brushes
- 1 x Cone Nozzle
- 1 x Bent Nozzle
- 1 x Scraper
- 1 x Extension Hose and Nozzle
- 1 x Window Squeegee
- 2 x Cloth Pads
- 1 x Measuring Cup
- 1 x User Manual



Image: A visual representation of the steam cleaner unit and its 12 versatile attachments for various cleaning tasks.

For instructions on how to install and detach accessories, please watch this video:

Video: A guide demonstrating the correct procedure for installing and detaching the various accessories of the POPCHOSE Steam Cleaner.

Setup

- 1. Remove Safety Cap: Locate and remove the red silicone safety cap from the nozzle before use.
- 2. **Fill Water Tank:** Unscrew the water tank cap. Use the provided measuring cup to fill the 450ML water tank with distilled or demineralized water. Do not overfill.

- 3. Secure Cap: Screw the water tank cap back on tightly.
- 4. **Attach Accessory:** Select the desired cleaning accessory and attach it firmly to the nozzle, ensuring it clicks into place.
- 5. Plug In: Plug the power cord into a suitable electrical outlet. The unit will begin to heat up.

The steam cleaner heats up in approximately 20 seconds, indicated by a light on the control panel.

Video: A detailed tutorial on how to correctly set up and prepare the POPCHOSE Steam Cleaner for operation.

Operating Instructions

- 1. **Power On & Heat Up:** After plugging in, the unit will automatically begin heating. The heating indicator light on the control panel will illuminate.
- 2. **Steam Ready:** Once the steam cleaner reaches its operating temperature (approx. 230°F), the heating indicator light will turn off, signaling it's ready for use.
- 3. **Adjust Steam Level:** Use the touch controls on the unit to select your desired steam level (Level 1 to Level 3). Level 1 provides gentle steam, while Level 3 offers powerful steam for tough messes.
- 4. **Activate Steam:** Press and hold the steam trigger on the handle to release steam.
- 5. **Continuous Steam Lock:** For continuous steam without constant pressing, engage the safety lock mechanism on the trigger. Push up to start continuous steam, push down to stop.
- 6. **Refilling Water:** The 450ML tank provides up to 16 minutes of continuous steam on the highest setting. You can safely refill the water tank at any time by unplugging the unit, allowing it to cool slightly, and then following the 'Fill Water Tank' step in the Setup section.



ADJUSTABLE



Image: The steam cleaner in action, highlighting its adjustable steam settings for various cleaning needs.

Video: A short demonstration of how to engage the continuous steam lock feature for hands-free operation.

Accessory Usage

The POPCHOSE Steam Cleaner includes 12 versatile accessories designed for various cleaning tasks:

- **Nylon Round Brushes & Grout Brushes:** Ideal for scrubbing tough stains on kitchen counters, stovetops, sinks, bathroom tiles, and grout lines.
- Cone Nozzle & Bent Nozzle: Perfect for reaching tight spots, corners, and crevices in bathrooms, around faucets, and in car interiors.
- Scraper: Effective for removing baked-on grime or stubborn residues from surfaces like ovens or grills.

- Extension Hose and Nozzle: Provides extended reach for cleaning high areas, floors, or deep into car upholstery.
- Window Squeegee: For streak-free cleaning of windows, mirrors, and other glass surfaces.
- **Cloth Pads:** Attach to the squeegee or other flat accessories for cleaning upholstery, mattresses, sofas, and fabrics.



Image: The steam cleaner demonstrating its versatility across multiple surfaces, including kitchen, bathroom, and car interiors, using various attachments.

Maintenance

To ensure the longevity and optimal performance of your steam cleaner:

- Always unplug the unit and allow it to cool completely before cleaning or storing.
- Empty any remaining water from the tank after each use.
- Wipe down the exterior of the unit with a soft, damp cloth.
- Clean accessories after each use to prevent buildup. Replace brushes or cloth pads when they show signs
 of wear
- Store the steam cleaner and its accessories in a cool, dry place.

Troubleshooting Guide

Problem	Solution
No Steam	Ensure the red silicone safety cap is removed before use. Check if the water tank has sufficient water.
Cannot Attach Accessory Nozzle	Make sure the red silicone safety cap is removed before attempting to attach the nozzle.
Missing Connector	The connector is usually pre-installed into the extension hose. Check there.
Auto-Shutoff and Control Panel Flashing	Check that the water tank has sufficient water. Refill if needed.

Specifications

• Model Name: SG-SC102

Brand: POPCHOSEWattage: 1200 wattsHeat Time: 20 Seconds

• Maximum Temperature: 230 Degrees Fahrenheit

• Tank Volume: 450 Milliliters

• Continuous Steam: Up to 16 minutes (on highest setting)

Power Source: Corded ElectricPower Cord Length: 9.8 feet

• Item Weight: 3.98 pounds (approx. 1.8 kg)

• Product Dimensions: 2.9"D x 12.2"W x 10.3"H

• Special Features: Child Lock, Portable, Carry Handle, Compact Design, Heat Light Indicator, Power Light Indicator, Steam Ready Indicator, Powerful, High Pressure, Steam Control (Level 1-3), Multi-surface, Removable Nozzle, Dry Burning Auto Turn-off, Touch Screen.

Warranty and Support

For warranty information, product support, or to purchase replacement parts and additional accessories, please refer to the contact information provided in your product packaging or visit the official POPCHOSE website. Keep your purchase receipt as proof of purchase for warranty claims.

