



Manuals.plus /

- › SEUNKWANG /
- › SEUNKWANG GX710S Wired Backlit Computer Keyboard User Manual

SEUNKWANG GX710S

SEUNKWANG GX710S Wired Backlit Computer Keyboard User Manual

Model: GX710S

1. INTRODUCTION

This manual provides instructions for the SEUNKWANG GX710S Wired Backlit Computer Keyboard. This keyboard features a simple white backlight, upgraded water drop pudding keycaps, an ergonomic design, and a durable metal panel. It is designed for use with various operating systems and devices.



Image 1: The SEUNKWANG GX710S Wired Backlit Computer Keyboard.

2. PACKAGE CONTENTS

- SEUNKWANG GX710S Wired Backlit Computer Keyboard
- User Manual (this document)

3. SETUP INSTRUCTIONS

The SEUNKWANG GX710S keyboard is a plug-and-play device, requiring no additional driver installation for basic functionality.

1. Locate an available USB-A port on your computer (PC, laptop, etc.).
2. Insert the USB connector of the keyboard into the USB-A port.
3. The operating system will automatically detect and install the necessary drivers.
4. The keyboard is ready for use once detected.



Image 2: The keyboard is compatible with various operating systems including Windows, Mac OS, Android, Google, and Linux, and devices such as PCs, laptops, tablets, and gaming consoles.

4. OPERATING INSTRUCTIONS

4.1 Backlight Control

The GX710S keyboard features a simple white backlight with adjustable brightness.

- **Adjust Brightness:** Press **Fn + PU** to increase brightness (5 levels).
- **Adjust Brightness:** Press **Fn + PD** to decrease brightness (5 levels).
- **Turn Backlight On/Off:** Press **Fn + Menu key** (usually the key next to the right Ctrl key) to toggle the backlight.

POWERFUL AFTER-SALES BACKING



Pre-Sales Q&A



Troubleshooting



Accessories Reissue



Returns And Exchanges



Email Support: eweadnkeyboard@outlook.com

Image 3: Illustration of Fn key combinations for backlight adjustment and on/off.

4.2 Ergonomic Design and Stability

The keyboard is designed for comfortable typing.

- **Adjustable Footrests:** Two foldable footrests on the bottom allow for a 7° tilt, enhancing typing comfort.
- **Anti-slip Stickers:** Four anti-slip stickers ensure stability during use.
- **Concave & Convex Keycaps:** The keycap surface is shaped to fit fingertips, promoting smoother typing.

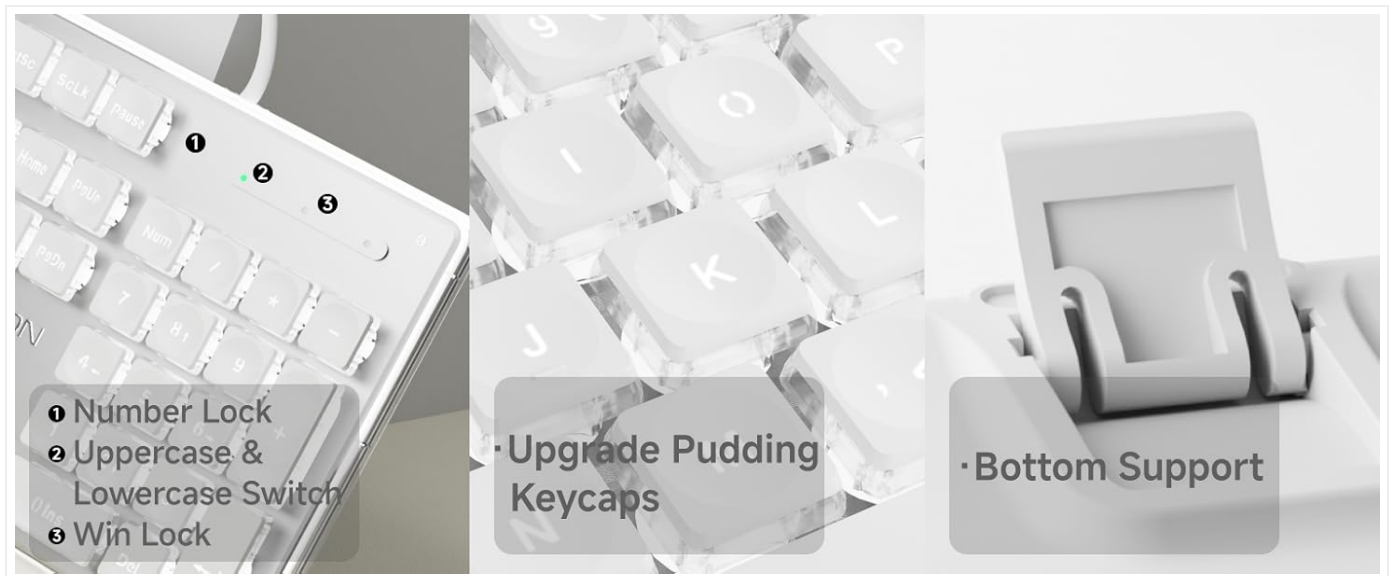


Image 4: Details of the keyboard's ergonomic design, including foldable stands and anti-slip feet.

4.3 Anti-Ghosting

The keyboard supports 26-key anti-ghosting, allowing multiple keys to be pressed simultaneously without conflict. This feature is beneficial for fast typing and gaming.



Image 5: Close-up showing indicator lights for Number Lock, Caps Lock, and Win Lock, along with the pudding keycap design and bottom support.

5. MAINTENANCE

To ensure the longevity and optimal performance of your SEUNKWANG GX710S keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For dust and debris between keys, use compressed air. The suspended keycap design facilitates easier cleaning.
- **Keycaps:** The dual-color injection-molded pudding keycaps are designed to resist fading and remain non-greasy. Avoid using harsh chemicals or abrasive materials on the keycaps.
- **Spills:** In case of liquid spills, immediately disconnect the keyboard from your computer. Gently blot away excess liquid and allow the keyboard to air dry completely before reconnecting.
- **Storage:** Store the keyboard in a clean, dry environment away from extreme temperatures and direct sunlight.

Quiet Membrane Structure

2024 Upgraded Water Drop Pudding Keycaps



ERGONOMIC DESIGN



QUIET CLICK

Image 6: Illustration highlighting the durability and non-fading properties of the dual-color injection-molded keycaps compared to standard keycaps.

6. TROUBLESHOOTING

If you encounter issues with your SEUNKWANG GX710S keyboard, please refer to the following common solutions:

Problem	Possible Cause	Solution
Keyboard not responding	Loose USB connection, faulty USB port, system driver issue.	<ul style="list-style-type: none">◦ Ensure the USB cable is securely plugged into the computer.◦ Try plugging the keyboard into a different USB port.◦ Restart your computer.◦ Check device manager for driver issues (Windows).
Backlight not working or dim	Backlight turned off, brightness set to lowest level.	<ul style="list-style-type: none">◦ Press Fn + Menu key to toggle the backlight.◦ Press Fn + PU repeatedly to increase brightness.
Keys not registering correctly (ghosting)	Software conflict, extreme number of simultaneous key presses.	<ul style="list-style-type: none">◦ Ensure no background applications are interfering.◦ The keyboard supports 26-key anti-ghosting; if more keys are pressed, some may not register.◦ Restart your computer.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	GX710S
Connectivity Technology	USB-A (Wired)
Keyboard Type	Quiet Wired Membrane Keyboard
Backlighting	Simple White Backlight (5 adjustable levels)
Keycaps	Upgraded Water Drop Pudding Keycaps, Dual-color Injection-molded
Anti-Ghosting	26-key Anti-ghosting
Panel Material	Thickened Metal Panel with Frosted Matte Finish
Ergonomics	Concave & Convex keys, 7° adjustable tilt with footrests
Compatible Devices	PC, Laptop, Notebook, Gaming Console, Projector, Smart TV, Smartphone, Tablet
Compatible Operating Systems	Windows, Linux, Chrome, Mac, Android
Product Dimensions	17.32"L x 5.11"W x 0.78"H (44 x 13 x 2 cm)
Item Weight	1.61 pounds (0.73 kg)

8. WARRANTY AND SUPPORT

SEUNKWANG provides comprehensive support for its products.

- **Warranty:** The SEUNKWANG GX710S keyboard comes with 48-month brand support.
- **Customer Service:** For any questions, troubleshooting assistance, or support regarding your product, please contact our expert team.
- **Contact Information:** Email Support: eweadnkeyboard@outlook.com



Image 7: Overview of after-sales support, including pre-sales Q&A, troubleshooting, accessories reissue, and returns/exchanges.

