

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Monster](#) /

› [Monster N-Lite 211 Wireless Earbuds User Manual](#)

Monster W39

Monster N-Lite 211 Wireless Earbuds User Manual

Model: W39

INTRODUCTION

Thank you for choosing the Monster N-Lite 211 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features for convenience and performance. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal use.

WHAT'S IN THE BOX

- Monster N-Lite 211 Wireless Earbuds
- Wireless Charging Case
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW



The Monster N-Lite 211 Wireless Earbuds and their charging case, featuring an LED power display on the front.

The Monster N-Lite 211 earbuds are engineered for an immersive audio experience. Key features include:

- **Pure Monster Sound:** Decreased distortion, immersive sound, and premium diaphragms for enhanced clarity and detail.
- **LED Power Display:** The charging case features an LED display that shows the battery levels of both the case and the earbuds. It flashes 1-100 when charging.
- **Advanced Bluetooth 5.4:** Offers stable, high-quality sound up to 12 meters, low latency, and auto-reconnect functionality.
- **Extended Battery Life:** Up to 32 hours of continuous play with the charging case, ensuring long-lasting endurance.
- **Intuitive Touch Control:** Easily manage music playback (play, pause, skip tracks) and calls (answer, end, reject) with simple taps on the earbuds.
- **Built-in ENC Noise Reduction Chip:** Effectively reduces environmental noise for crisp, clear call quality.
- **Waterproof Design:** Suitable for sports and outdoor activities.

MONSTER®

**Hi-Fi
AUDIO**

**Monster
Pure Sound**

Deep Bass

Better Music Experience

A user demonstrating the comfortable fit and highlighting the Hi-Fi Audio, Pure Sound, and Deep Bass capabilities of the earbuds.

Superior Hi-Fi Stereo

The 13mm dynamic drivers deliver clear, pure sound.



An internal view showcasing the 13mm dynamic drivers that deliver clear, pure sound.

Long Battery Life

36H

With Charging Case

6H

Single Charge



Visual representation of the impressive battery life: 36 hours total with the charging case, and 6 hours on a single charge.

Digital Power Display

Dual displays show the battery levels of the case and earbuds.



Digital Power Display of Case



Digital Power



6-7 Hrs



36 Hrs

The digital power display on the charging case clearly indicates the battery percentage for both the case and individual earbuds.

Built-in ENC Noise Reduction Chip

Effectively reduce environmental issues and ensure clear call quality. Minimize environmental noise for crisp, clear call quality.



The built-in ENC Noise Reduction Chip ensures clear call quality by minimizing environmental interference.

Bluetooth 6.0 for Fast & Stable Connection

The upgraded Bluetooth 6.0 chip offers faster connections, lower power consumption, and quicker data transmission.



An illustration of the advanced Bluetooth 6.0 chip, providing fast, stable connections and efficient power consumption.

SETUP

1. Initial Charging

Before first use, ensure the earbuds and charging case are fully charged. Place both earbuds into the charging case. Connect the USB charging cable to the case and a power source. The LED display on the case will flash from 1-100, indicating the charging progress. A full charge typically takes approximately 1-2 hours.

2. Pairing with Your Device

1. Ensure the earbuds are in the charging case and the case has power.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing light on the earbuds (refer to specific light indicators in a separate quick start guide if available).
3. On your device (smartphone, tablet, laptop), go to the Bluetooth settings.
4. Search for new devices. Select "Monster N-Lite 211" from the list of available devices.
5. Once connected, a voice prompt will confirm successful pairing, and the earbud indicator lights will turn off or show a steady light.

- The earbuds will automatically reconnect to the last paired device when taken out of the case, provided Bluetooth is enabled on the device.

OPERATING INSTRUCTIONS

Touch Controls

The Monster N-Lite 211 earbuds feature intuitive touch controls on each earbud. The specific functions may vary slightly, but common controls include:

Action	Function
Single Tap (L/R)	Play/Pause Music, Answer/End Call
Double Tap (L)	Previous Track
Double Tap (R)	Next Track
Triple Tap (L/R)	Activate Voice Assistant
Long Press (L/R)	Reject Call
Long Press (L)	Volume Down
Long Press (R)	Volume Up

Note: Specific touch control sensitivity and exact functions may vary. Refer to the quick start guide included in your packaging for the most precise instructions.

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Gently clean the charging contacts on both the earbuds and the case to ensure proper charging.
- Remove ear tips and clean them with mild soap and water if necessary, ensuring they are completely dry before reattaching.

Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store the case in a cool, dry place away from extreme temperatures and direct sunlight.

Water Resistance

The Monster N-Lite 211 earbuds feature a waterproof design, making them suitable for sports and protection against sweat and light splashes. However, they are not designed for submersion in water. Avoid using them while swimming or showering. If they get wet, wipe them dry thoroughly before placing them back in the charging case.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	<ul style="list-style-type: none"> ◦ Ensure earbuds are charged. ◦ Turn off and on Bluetooth on your device. ◦ Forget the device in your Bluetooth settings and try pairing again. ◦ Place earbuds back in case, close lid, wait 5 seconds, then open to re-enter pairing mode.
Only one earbud working	<ul style="list-style-type: none"> ◦ Ensure both earbuds are charged. ◦ Place both earbuds in the charging case, close the lid, and then open it again. This often re-syncs them. ◦ Try resetting the earbuds (refer to quick start guide for specific reset procedure, often involves a long press or multiple taps).
Earbuds not charging	<ul style="list-style-type: none"> ◦ Ensure the charging cable is securely connected to both the case and the power source. ◦ Check if the charging contacts on the earbuds and inside the case are clean and free of debris. ◦ Try a different charging cable or power adapter.
Poor sound quality	<ul style="list-style-type: none"> ◦ Ensure earbuds are properly seated in your ears. ◦ Check the audio source for quality issues. ◦ Move closer to your device to avoid Bluetooth interference. ◦ Clean any earwax or debris from the earbud nozzles.

SPECIFICATIONS

Feature	Detail
Model Name	MH22229
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Bluetooth Range	12 Meters
Noise Control	Active Noise Cancellation (ENC for calls)
Battery Life	Up to 36 Hours (with charging case)
Water Resistance Level	Waterproof (IPX5)

Feature	Detail
Control Method	Touch
Frequency Range	20Hz - 20,000Hz
Audio Driver Type	Balanced Armature Driver
Material	Plastic
Item Weight	5.3 ounces

WARRANTY AND SUPPORT

Monster products are designed and manufactured to the highest quality standards. For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Monster website. Keep your proof of purchase for warranty claims.

© 2025 Monster. All rights reserved.