

90223

Bella-Pro SmartCrisp 8-Quart Air Fryer Instruction Manual

Model: 90223

1. INTRODUCTION

Welcome to the Bella-Pro SmartCrisp 8-Quart Air Fryer instruction manual. This appliance is designed to transform your kitchen experience by providing a healthier and more efficient way to cook your favorite meals. With its large capacity and versatile functions, you can enjoy crispy, delicious results with significantly less oil.



Figure 1.1: Bella-Pro SmartCrisp 8-Quart Air Fryer (Oatmilk)

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Bella-Pro SmartCrisp Air Fryer. Failure to follow these instructions may result in property damage, personal injury, or death.

- Always place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation.
- Do not immerse the cord, plug, or the appliance housing in water or other liquids.
- Supervise children closely when the appliance is in use.
- Do not operate the air fryer if the cord or plug is damaged, or if the appliance malfunctions.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not block any air vents.
- Use only accessories recommended by the manufacturer.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

3. PRODUCT FEATURES

The Bella-Pro SmartCrisp Air Fryer is equipped with advanced features designed for convenience and optimal cooking performance:

- **Family-Size Capacity:** An 8-quart basket capable of holding up to 6.6 lbs of food, ideal for large meals and gatherings.
- **Powerful Performance:** 1700 watts of power for fast preheating and efficient cooking.
- **Wide Temperature Range:** Adjustable temperature from 90°F to 450°F for versatile cooking options.
- **Eco-Friendly Nonstick Coating:** Features EverGood ceramic nonstick coating, free from PFAS, PFOA, PTFE, lead, and cadmium for healthier cooking and easy release.
- **6-in-1 Cooking Functions:** Pre-programmed settings for Air Fry, Roast, Bake, Broil, Reheat, and Dehydrate.
- **Advanced Touchscreen Technology:** Intuitive digital controls for precise time and temperature adjustments.
- **Built-in Shake Reminder:** Ensures even cooking and perfect crispiness.
- **Easy Cleanup:** Dishwasher-safe nonstick basket and crisping tray.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials, stickers, and labels from the air fryer. Retain the packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the removable basket and crisping tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the air fryer with a damp cloth.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches of space around the back and sides of the unit for proper air circulation. Do not place it directly under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.
5. **First Use (Burn-in):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 400°F (200°C) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.



Figure 4.1: Air Fryer with basket removed for cleaning or loading.

5. OPERATING INSTRUCTIONS

1. **Prepare Food:** Place your ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket firmly back into the air fryer until it clicks into place.
3. **Power On:** Press the **Power** button on the digital touchscreen to turn on the appliance.
4. **Select Cooking Function:** Choose one of the 6 preset cooking functions (Air Fry, Roast, Bake, Broil, Reheat, Dehydrate) by tapping the corresponding icon.
5. **Adjust Time and Temperature:** Use the **+** and **-** buttons next to "TEMP" and "TIME" to manually adjust the temperature (90°F - 450°F) and cooking time as needed for your recipe.
6. **Start Cooking:** Press the **Start/Stop** button to begin the cooking cycle. The air fryer will automatically preheat if necessary.
7. **Shake Reminder:** For certain recipes, the air fryer will beep and display "SHAKE" as a reminder to shake or flip the food for even cooking. Pull out the basket, shake the contents, and reinsert the basket to

resume cooking.

8. **Monitor Progress:** You can pull out the basket at any time during cooking to check on your food. The air fryer will pause and resume once the basket is reinserted.
9. **End of Cooking:** Once the cooking time is complete, the air fryer will beep and automatically shut off. Carefully remove the basket using the handle.
10. **Serve:** Transfer the cooked food to a serving dish. Always use heat-resistant utensils.



Figure 5.1: Using the intuitive digital touchscreen.



Figure 5.2: Loading food into the spacious 8-quart basket.



Figure 5.3: Easily serving food after cooking.

6. COOKING PRESETS

The Bella-Pro SmartCrisp Air Fryer offers 6 convenient one-touch cooking presets:

- **Air Fry:** Ideal for achieving crispy textures on foods like fries, chicken wings, and vegetables.

- **Roast:** Perfect for roasting meats, poultry, and larger vegetables.
- **Bake:** Suitable for baking cakes, muffins, and other baked goods.
- **Broil:** For quick browning and melting cheese.
- **Reheat:** Efficiently warms up leftovers while maintaining texture.
- **Dehydrate:** For making dried fruits, jerky, and other dehydrated snacks.

Each preset is optimized with a default time and temperature, which can be adjusted to suit your specific recipe and preferences.

7. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

7.1. Cleaning the Basket and Crisping Tray

- The nonstick basket and crisping tray are **dishwasher-safe** for convenient cleaning.
- Alternatively, wash them with warm, soapy water and a non-abrasive sponge.
- For stubborn food residue, soak the basket and tray in warm, soapy water for about 10 minutes before cleaning.
- Ensure all components are thoroughly dry before reassembling or storing.

7.2. Cleaning the Exterior and Interior

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the interior cavity with a damp cloth and mild detergent if necessary. Avoid getting water into the electrical components.
- Regularly check the heating element for food debris and clean gently with a soft brush if needed.

8. TROUBLESHOOTING

If you encounter any issues with your Bella-Pro SmartCrisp Air Fryer, please refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; basket not fully inserted.	Ensure the power cord is securely plugged into a grounded outlet. Push the basket firmly until it clicks into place.
Food is not crispy.	Basket overloaded; insufficient oil (if applicable); incorrect temperature/time.	Cook in smaller batches. Lightly coat food with oil. Adjust temperature and time as per recipe. Use the Shake Reminder.
White smoke coming from the unit.	Grease from previous use; high-fat food.	Clean the basket and crisping tray thoroughly. For high-fat foods, drain excess fat during cooking.
Appliance smells during first use.	Manufacturing residue.	This is normal. Run the air fryer empty for 10-15 minutes at 400°F (200°C) before first use.

If the problem persists, please contact customer support.

9. SPECIFICATIONS

Feature	Detail
Model Name	Pro SmartCrisp 8-Quart Touchscreen Air Fryer
Model Number	90223
Capacity	8 Quarts
Output Wattage	1700 Watts
Voltage	120 Volts
Temperature Range	90°F to 450°F
Control Method	Touchscreen
Material	Stainless Steel with Ceramic Nonstick Coating
Inner Material	Ceramic
Product Dimensions	16"D x 13"W x 14"H
Item Weight	9.76 Pounds
Dishwasher Safe Parts	Basket and Crisping Tray

10. WARRANTY AND SUPPORT

This Bella-Pro SmartCrisp 8-Quart Air Fryer comes with a standard return policy of **30 days** from the date of purchase. For specific warranty details, please refer to the documentation included with your product or contact the manufacturer directly.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please visit the official Bella-Pro website or contact their customer service line. Keep your purchase receipt and model number handy for faster service.

Note: Warranty terms may vary based on region and retailer.