Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- BoxWave /
- > BoxWave AllReader SD Card Reader User Manual

BoxWave AllReader SD Card Reader

BoxWave AllReader SD Card Reader User Manual

Model: AllReader SD Card Reader Brand: BoxWave

1. Introduction

The BoxWave AllReader SD Card Reader is a versatile and compact device designed to facilitate easy and quick file transfers between various digital devices and your SD or microSD cards. With its multiple interface options, it offers broad compatibility, making it an essential tool for managing your digital content on the go.

Key Features:

- Four Interfaces: Includes USB-C, USB-A, and Micro-USB for maximum compatibility with a wide range of devices.
- Easy File Transfer: Enables quick and straightforward copying of photos, videos, music, and other files between your memory cards and smartphones, tablets, laptops, or desktop PCs.
- Plug and Play: No drivers or complex software installation required. Simply plug in and access your files.
- Compact Design: Its small and lightweight form factor makes it highly portable, fitting easily into a bag, purse, or pocket.
- Unlimited Storage: Expand the storage capability of your device by easily accessing content on various SD and microSD cards.

2. PRODUCT OVERVIEW

The BoxWave AllReader SD Card Reader is a sleek, black device with transparent caps protecting its various connectors. It features slots for both standard SD cards and smaller microSD cards, along with multiple USB interfaces for universal connectivity.



Figure 2.1: Close-up of the AllReader SD Card Reader, highlighting its compact form and card slots.

The device is designed for durability and ease of use, with clearly marked card slots and robust connectors.

3. SETUP

Setting up your AllReader SD Card Reader is a simple plug-and-play process. No software installation or drivers are required for most operating systems.

3.1 Inserting a Memory Card

- 1. Identify the correct slot for your memory card. The larger slot is for SD cards, and the smaller slot is for microSD cards.
- 2. Gently insert your SD or microSD card into the corresponding slot until it clicks into place. Ensure the card is inserted in the correct orientation, usually with the contacts facing down.

3.2 Connecting to Your Device

The AllReader features four distinct interfaces to connect to a variety of devices:

- USB-A: Standard USB port for laptops, desktop PCs, and some smart TVs.
- USB-C: Reversible connector for newer smartphones, tablets, and laptops.
- Apple (Lightning): For compatible Apple iPhones and iPads.

• Flip-out Micro USB: For older Android smartphones and tablets.



Figure 3.1: The four versatile interfaces of the AllReader SD Card Reader.

Choose the appropriate connector for your device and plug the AllReader into the corresponding port. Your device should automatically detect the card reader and the inserted memory card.

4. OPERATING INSTRUCTIONS

Once connected, the memory card will appear as a removable storage device on your computer or mobile device.

4.1 Accessing Files

- On Computers (Windows/macOS): Open 'This PC' or 'Finder' and locate the new removable drive. Double-click to open and browse the files.
- On Mobile Devices (Android/iOS): Access files through your device's file manager app or photo gallery. For iOS, you may need to use the 'Files' app or a compatible third-party app.

4.2 Transferring Files

To transfer files, simply drag and drop them between the memory card's folder and your device's storage, or use the copy/paste functions.



Figure 4.1: Seamless file transfer across various devices.

Always ensure that file transfers are complete before disconnecting the card reader to prevent data corruption.

5. MAINTENANCE

To ensure the longevity and optimal performance of your BoxWave AllReader SD Card Reader, follow these simple maintenance guidelines:

- Cleaning: Use a soft, dry, lint-free cloth to wipe the exterior of the card reader. Avoid using liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the card reader in a cool, dry place, away from direct sunlight and extreme temperatures. Keep the protective caps on the connectors to prevent dust and debris accumulation.

- **Handling:** Handle the device gently. Avoid dropping it or subjecting it to strong impacts, which can damage internal components or connectors.
- **Moisture:** Keep the card reader away from water and other liquids. If it comes into contact with moisture, disconnect it immediately and allow it to dry completely before reuse.

6. TROUBLESHOOTING

If you encounter issues with your AllReader SD Card Reader, try the following troubleshooting steps:

Problem	Possible Solution
Card reader not detected.	Ensure the card reader is fully inserted into the device's port. Try a different USB port on your device. Restart your computer or mobile device. Ensure your device's operating system is up to date.
Memory card not recognized.	Ensure the memory card is fully and correctly inserted into the card reader. Try a different memory card to rule out a card issue. Check if the memory card is damaged or corrupted. Ensure the memory card is not write-protected (if applicable).
Slow file transfer speeds.	Ensure you are using a high-speed memory card (e.g., Class 10, UHS-I). Close other applications that might be using system resources. Ensure your device's USB port supports the highest possible transfer speed (e.g., USB 3.0 for USB-A/C).

7. SPECIFICATIONS

Feature	Detail		
Product Name	BoxWave AllReader SD Card Reader		
Model Number	Not explicitly provided, refers to 'AllReader SD Card Reader'		
Interfaces	USB-C, USB-A, Apple (Lightning), Flip-out Micro USB		
Card Compatibility	SD, microSD		
Color	Jet Black		
Item Weight	6 ounces		
Manufacturer	BoxWave		
Country of Origin	China		

8. WARRANTY AND SUPPORT

BoxWave products are designed for quality and reliability. For specific warranty information and customer support, please

refer to the documentation included with your purchase or visit the official BoxWave website. Typically, BoxWave offers support for product inquiries and assistance with any operational issues you may encounter.

 
For further assistance, please contact BoxWave customer service through their official channels.

Related Documents - AllReader SD Card Reader



THINKCAR 2025 Catalog: Automotive Diagnostic Tools and Equipment

Explore the comprehensive 2025 catalog from THINKCAR, featuring advanced automotive diagnostic tools, TPMS solutions, ADAS calibration systems, heavy-duty scanners, and maintenance equipment for professional mechanics and DIY enthusiasts.



AXAGON CRE-SM2 USB Smart Card Reader - Quick Guide

Quick guide for the AXAGON CRE-SM2 USB Smart Card, ID Card, SD, microSD, and SIM Card Reader. Features include Plug and Play, USB 2.0, and broad OS support. Learn about supported card types and specifications.



Axagon CRE-SM3SD USB Smart Card / MicroSD / SIM Card FlatReader Instructions

This document provides instructions for using the Axagon CRE-SM3SD USB Smart Card, MicroSD, and SIM Card FlatReader. It covers setup, features, and important safety information.



Velleman PCUSBGO1 USB 2.0 SD/microSD Card Reader User Manual

User manual for the Velleman PCUSBGO1, a USB 2.0 SD and microSD card reader. Includes introduction, safety instructions, general guidelines, and cleaning/maintenance information.



Hama USB 2.0 Card Reader (SD/microSD) - Operating Instructions

Official operating instructions and user manual for the Hama USB 2.0 Card Reader supporting SD and microSD cards. Learn about setup, features, safety, and troubleshooting.



Savio AK-63 Card Reader User Manual - USB 2.0 SD/microSD

Comprehensive user manual for the Savio AK-63 card reader. Learn about installation, technical specifications, safety precautions, warranty, and product usage for this USB 2.0 SD and microSD card reader.