

Ninja 10-in-1 Flip Air Fryer Oven

Ninja Foodi 10-in-1 Flip Air Fryer Oven Instruction Manual

Model: 10-in-1 Flip Air Fryer Oven (ASIN: B0DRPTY7R)

1. SETUP

1.1 Unpacking

Carefully remove the Ninja Foodi 10-in-1 Flip Air Fryer Oven and all accessories from the packaging. Ensure all packing materials, including any protective films or inserts, are removed before use. Verify that all included components are present:

- Main Oven Unit
- Air Fry Basket
- Sheet Pan
- Wire Rack
- Crumb Tray (pre-installed)
- User Manual

1.2 Placement

Place the oven on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clearance on all sides of the oven for proper ventilation. Do not place the oven near the edge of a countertop or on a surface that could be damaged by heat.

1.3 First Use

Before initial use, wash all accessories (air fry basket, sheet pan, wire rack) in warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. It is recommended to run a test cycle to eliminate any manufacturing odors. To do this, select the 'Air Fry' function, set the temperature to 400°F (200°C), and the time to 10 minutes. Allow the oven to run empty in a well-ventilated area.



The Ninja Foodi 10-in-1 Flip Air Fryer Oven and its included accessories: air fry basket, sheet pan, and wire rack.

2. OPERATING INSTRUCTIONS

2.1 Control Panel Overview

The digital control panel features a rotary dial and several buttons for selecting functions and adjusting settings.

- **Rotary Dial:** Used to select cooking functions, adjust time, and temperature.
- **START/PAUSE Button:** Initiates or pauses the cooking cycle.
- **TIME/SLICE Button:** Press to adjust cooking time or the number of toast slices.
- **TEMP/SHADE Button:** Press to adjust cooking temperature or toast shade level.
- **POWER Button:** Turns the oven on or off.



A hand adjusting the control dial on the Ninja Foodi 10-in-1 Flip Air Fryer Oven, demonstrating the intuitive digital interface for selecting cooking functions and settings.

2.2 Cooking Functions

The Ninja Foodi 10-in-1 Flip Air Fryer Oven offers ten versatile cooking functions:

1. **Air Fry:** For crispy results with little to no oil. Ideal for fries, chicken wings, and vegetables.
2. **Air Roast:** Evenly cooks and crisps larger items like whole chickens or root vegetables.
3. **Air Broil:** High heat from above for caramelizing and browning.
4. **Dehydrate:** Removes moisture from foods for making jerky, dried fruits, and vegetable chips.
5. **Keep Warm:** Maintains food at a serving temperature without overcooking.
6. **Reheat:** Gently warms leftovers to restore texture and flavor.
7. **Bagel:** Toasts the cut side of bagels while gently warming the crust.
8. **Bake:** For traditional baking of cakes, cookies, and casseroles.
9. **Toast:** Evenly toasts bread slices to your desired shade.
10. **Pizza:** Specifically designed for cooking fresh or frozen pizzas.

2.3 General Cooking Steps

1. Place food on the appropriate accessory (air fry basket, sheet pan, or wire rack).
2. Insert the accessory into the oven. Refer to the cooking chart in the full manual for recommended rack positions.
3. Turn the oven on using the POWER button.

4. Rotate the dial to select your desired cooking function.
5. Press the TIME/SLICE button and use the dial to adjust the cooking time.
6. Press the TEMP/SHADE button and use the dial to adjust the temperature (or toast shade).
7. Press the START/PAUSE button to begin cooking.
8. The oven will beep when cooking is complete. Carefully remove food using oven mitts.



The Ninja Foodi 10-in-1 Flip Air Fryer Oven preparing various meals, including air-fried chicken wings, roasted chicken and vegetables, and grilled steaks.



A variety of dishes prepared using the Ninja Foodi 10-in-1 Flip Air Fryer Oven, including air-fried french fries, roasted vegetables, and baked cookies, demonstrating its versatility.

3. MAINTENANCE AND CLEANING

3.1 Cleaning the Oven

Always unplug the oven and allow it to cool completely before cleaning. Do not immerse the main oven unit in water or any other liquid.

- **Exterior:** Wipe the exterior with a damp cloth. Avoid abrasive cleaners or scouring pads, as they may damage the finish.
- **Interior:** Wipe the interior walls with a damp cloth or sponge. For stubborn food residue, use a non-abrasive liquid cleanser and a soft cloth.
- **Accessories:** The air fry basket, sheet pan, and wire rack are dishwasher safe, or can be hand-washed in warm, soapy water.

3.2 Crumb Tray

The removable crumb tray is located at the bottom of the oven. It should be emptied and cleaned

regularly to prevent grease buildup and potential fire hazards. Slide out the tray, discard crumbs, and wash it in warm, soapy water. Ensure it is completely dry before reinserting.

3.3 Storage

The Ninja Foodi 10-in-1 Flip Air Fryer Oven features a unique flip-up design for compact storage. Once the oven has cooled completely, you can lift the back of the unit and flip it upright to save counter space. Ensure the oven is securely locked in the upright position before storing.



A user carefully removing a baking tray filled with cooked food from the Ninja Foodi 10-in-1 Flip Air Fryer Oven, highlighting safe handling with oven mitts.



The Ninja Foodi 10-in-1 Flip Air Fryer Oven in its upright, flipped-up position for compact storage on a kitchen counter, demonstrating its space-saving design.

4. TROUBLESHOOTING

If you encounter issues with your Ninja Foodi 10-in-1 Flip Air Fryer Oven, please refer to the common problems and solutions below. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Food not cooking evenly.	Overcrowding; incorrect temperature/time; no preheating.	Avoid overcrowding the basket/pan. Ensure food is in a single layer. Adjust temperature and time as needed. Allow oven to preheat fully.

Problem	Possible Cause	Solution
Smoke coming from the oven.	Grease buildup; food residue; high-fat foods.	Unplug and allow to cool. Clean the interior and crumb tray thoroughly. Use parchment paper or foil under high-fat foods (ensure it does not block airflow).
Digital display shows an error code.	Internal malfunction.	Unplug the oven for 5 minutes, then plug it back in. If the error persists, contact customer support.

5. SPECIFICATIONS

Feature	Detail
Brand	Ninja (Product by Generic)
Model Name	10-in-1 Flip Air Fryer Oven
Control Type	Touch
Included Components	Oven Racks, Crumb tray, Sheet Pan, Wire Rack, Spatula, User Manual
Power Source	Electric
Number of Shelves	2
Size	Medium to Large
ASIN	B0DRPTYP7R

6. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the manufacturer's official website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require further assistance or have questions not covered in this manual, please contact customer service.