

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio Enticer MTD-135D-3AVDF Analog Watch User Manual](#)

Casio MTD-135D-3AVDF

Casio Enticer MTD-135D-3AVDF Analog Watch User Manual

Model: MTD-135D-3AVDF



INTRODUCTION

This manual provides detailed instructions for the Casio Enticer MTD-135D-3AVDF analog watch. Please read this manual carefully to ensure proper use and maintenance of your timepiece. This watch features a durable design, 50-meter water resistance, and a date display.



Figure 1: Front view of the Casio Enticer MTD-135D-3AVDF watch.

SETUP

1. Setting the Time

1. Pull the crown (B) out to the second click. The second hand will stop.
2. Rotate the crown to set the hour and minute hands. Ensure the AM/PM setting is correct if your watch has a 24-hour indicator or if setting the date.
3. Push the crown back in to the normal position. The second hand will resume movement.

2. Setting the Date

1. Pull the crown (B) out to the first click.
2. Rotate the crown to set the date. Avoid setting the date between 9:00 PM and 1:00 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back in to the normal position.



Figure 2: Side view of the watch, highlighting the crown (B) for time and date adjustments.

3. Band Adjustment

The stainless steel band can be adjusted for wrist size. It is recommended to have this adjustment performed by a qualified watch technician or jeweler to prevent damage to the band or clasp.

OPERATING THE WATCH

Reading the Time

The watch displays time using hour, minute, and second hands on an analog dial. The green dial features clear markers for easy readability.

Date Display

The current date is displayed in a window at the 4 o'clock position on the dial.

Water Resistance (50 Meters)

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for showering, swimming, diving, or snorkeling. Ensure the crown is fully pushed in before any contact with water.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch case and band with a soft, dry cloth to remove dirt and moisture.
- For stainless steel bands, a soft brush and mild soapy water can be used, followed by thorough rinsing and drying. Avoid getting soap or water on the watch head if not fully water-resistant.
- Do not use chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

Battery Replacement

The watch is powered by a 12V battery. When the watch stops or the second hand moves erratically (e.g., skipping seconds), the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Water Resistance Checks

To maintain the 50-meter water resistance, it is recommended to have the watch's seals checked periodically, especially after battery replacement or if the watch has been subjected to impact. This service should be performed by an authorized service center.



Figure 3: Rear view of the watch, displaying the stainless steel case back.

Environmental Considerations

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Protect the watch from strong impacts or vibrations.
- Keep the watch away from strong magnetic fields, which can affect timekeeping accuracy.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch is not running or stops intermittently.	Battery is low or depleted. Crown is pulled out.	Replace battery (professional service recommended). Push crown fully in.

Problem	Possible Cause	Solution
Time is incorrect.	Time not set correctly. Watch subjected to strong impact or magnetic field.	Reset the time as per "Setting the Time" instructions. If problem persists, consult service center.
Date is incorrect.	Date not set correctly. Date set during prohibited hours.	Reset the date as per "Setting the Date" instructions. Avoid setting date between 9 PM and 1 AM.
Condensation appears inside the watch.	Temperature change or water resistance compromised.	Immediately take the watch to an authorized service center for inspection and repair.

SPECIFICATIONS

Feature	Detail
Model Number	MTD-135D-3AVDF
Display Type	Analog
Movement Type	Quartz
Power Source	Battery Powered (1 x 12V battery included)
Case Material	Stainless Steel
Band Material	Stainless Steel
Dial Colour	Green
Band Colour	Silver
Crystal Material	Mineral Glass
Case Diameter	43.6 Millimetres
Case Thickness	9.3 Millimetres
Item Weight	126 Grams
Water Resistance Depth	50 Metres (5 ATM)
Clasp Type	Foldover Clasp
Date First Available	20 February 2025
Country of Origin	China



Figure 4: Diagram illustrating the dimensions of the watch, including case diameter.

WARRANTY AND SUPPORT

Warranty Information

This Casio watch comes with a **Limited Warranty**. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects under normal use.

Customer Support

For technical assistance, service, or warranty claims, please contact Casio customer support or an authorized Casio service center. You can find contact details on the official Casio website or in the documentation provided with your watch.

Manufacturer/Importer Contact:

Imported By - Casio India Co Pvt Ltd
A-41, 1st Floor, MCIE, Mathura Road,

New Delhi-110044, India

For more information, visit the official [Casio India website](#).

