

[Manuals.plus](#) /

> [OHAYO](#) /

> OHAYO X10 MAX Bluetooth Speaker User Manual

OHAYO X10 MAX

OHAYO X10 MAX Bluetooth Speaker User Manual

Model: X10 MAX

1. INTRODUCTION

Thank you for choosing the OHAYO X10 MAX Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.



Image: OHAYO X10 MAX Bluetooth Speaker banner highlighting key features.

2. PACKAGE CONTENTS

Ensure all items are present in the box:

- 1 x OHAYO X10 MAX Bluetooth Speaker
- 1 x USB-C Charging Cable (charging plug not included)
- 1 x 3.5mm AUX Cable
- 1 x User Manual
- 1 x Lanyard

3. PRODUCT OVERVIEW

The OHAYO X10 MAX is a portable, waterproof Bluetooth speaker designed for robust audio performance in various environments. It features a durable construction and intuitive controls.

3.1. Speaker Components



Image: Front view of the OHAYO X10 MAX Bluetooth Speaker, showcasing its cylindrical design and light strip.

3.2. Control Panel



Image: Close-up of the control panel on the side of the speaker, showing power, volume, bass, call/play, and battery indicator buttons.

1. **Power Button:** Press and hold to power on/off. Short press to switch RGB light effect mode.
2. **Volume Up / Next Track:** Short press for volume up. Long press for next track.
3. **Volume Down / Previous Track:** Short press for volume down. Long press for previous track.
4. **BASS Button:** Short press to switch music BASS mode. Double-click to wake up voice assistant. Long press (5s) to restore factory settings.
5. **Call / Play/Pause Button:** Short press to answer/hang up call. Long press to reject call. In music playing state, short press for play/pause. Long press to disconnect Bluetooth connection.
6. **Battery Indicator:** Four LED lights indicate battery level.
7. **Port Cover:** Protects charging, AUX, and TF card slots.

4. SETUP

4.1. Charging the Speaker

Before first use, fully charge the speaker. Use the provided USB-C charging cable with a compatible USB power adapter (not included).

- Open the rubber port cover on the side of the speaker.
- Connect the USB-C cable to the speaker's charging port.
- Connect the other end of the USB-C cable to a USB power source.
- The battery indicator lights will blink while charging and remain steady when fully charged.
- Close the rubber port cover tightly after charging to maintain IPX7 waterproof rating.

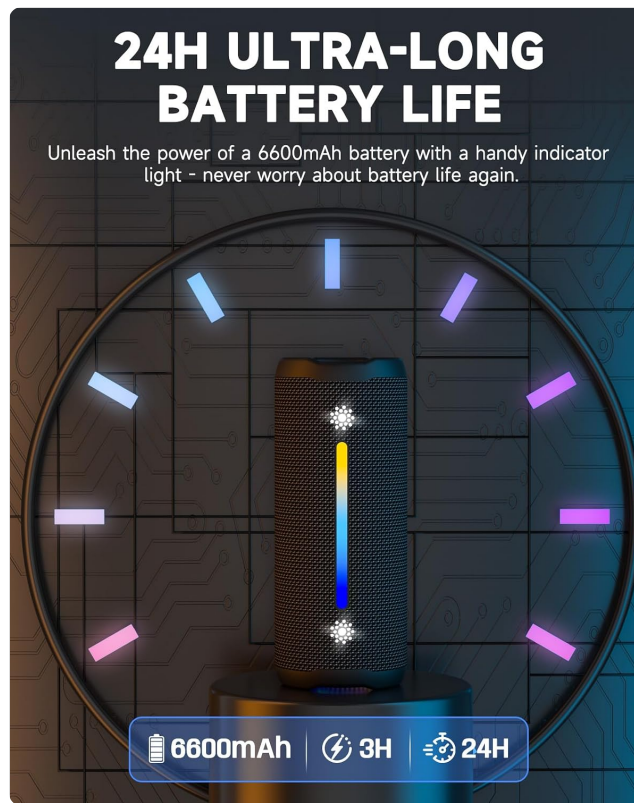


Image: The speaker displaying its battery indicator lights.

4.2. Power On/Off

- To power on, press and hold the Power Button for 2 seconds. You will hear an audible prompt.
- To power off, press and hold the Power Button for 2 seconds.

4.3. Bluetooth Pairing

- Turn on the speaker. The Bluetooth indicator light will blink, indicating it's in pairing mode.
- On your device (smartphone, tablet, etc.), enable Bluetooth and search for "X10 MAX".
- Select "X10 MAX" from the list of available devices to connect.
- Once connected, the Bluetooth indicator light will remain steady blue, and you will hear a confirmation tone.

4.4. True Wireless Stereo (TWS) Pairing

To achieve a more immersive stereo sound experience, you can pair two OHAYO X10 MAX speakers together.

- Ensure both X10 MAX speakers are powered on and not connected to any other Bluetooth device.
- Quickly double-click the Call/Play/Pause button on one of the speakers (this will be the host speaker) to initiate TWS pairing.
- After hearing a connection prompt tone, the two speakers will enter TWS mode. The orange lights on the keys of the main speaker and the subwoofer will light up.
- Now, connect your device to the host speaker via Bluetooth as described in section 4.3.
- To disconnect TWS, double-click the Call/Play/Pause button on either speaker.

TRUE WIRELESS STEREO

Bluetooth 5.3 guarantees a stable link between the two speakers, allowing you to enjoy 360-degree surround music.

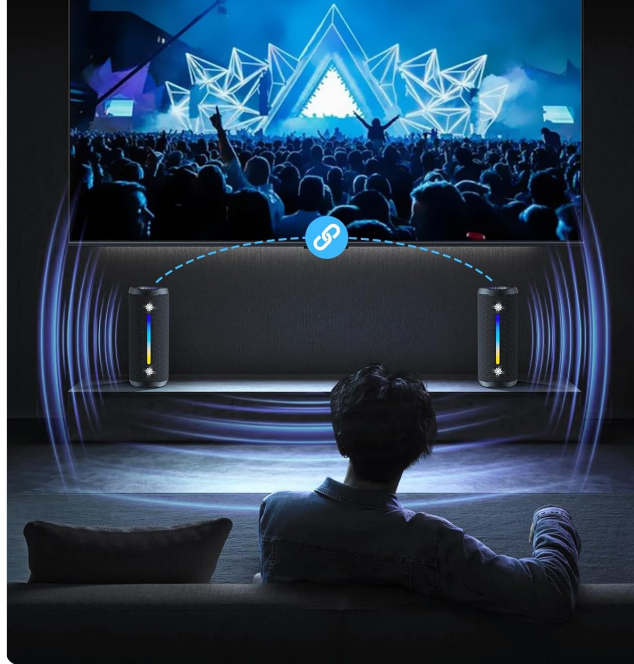


Image: Two OHAYO X10 MAX speakers wirelessly paired for True Wireless Stereo sound.

5. OPERATING THE SPEAKER

5.1. Playback Modes

The X10 MAX supports multiple audio input modes:

- **Bluetooth:** Wireless audio streaming from your paired device.
- **AUX-IN:** Connect external audio devices using the 3.5mm AUX cable.
- **TF Card:** Insert a TF (MicroSD) card with audio files into the designated slot.
- **USB Audio:** Connect to a computer via USB for digital audio playback and simultaneous charging.



Image: The speaker connected to a laptop, illustrating USB audio input.

5.2. Volume and Track Control

- **Adjust Volume:** Short press the Volume Up (^) or Volume Down (v) buttons.
- **Skip Tracks:** Long press the Volume Up (^) button for the next track. Long press the Volume Down (v) button for the previous track.
- **Play/Pause:** Short press the Call/Play/Pause button to play or pause music.

5.3. Call Handling

- **Answer/Hang Up Call:** Short press the Call/Play/Pause button.
- **Reject Call:** Long press the Call/Play/Pause button.

5.4. Light Effects

The speaker features 6 different RGB light effects that sync with the music. The 7th mode turns off the lights.

- Short press the Power Button to cycle through the light effects.
- Continue pressing until the desired light mode is selected or the lights are turned off.



Image: Multiple OHAYO X10 MAX speakers displaying different colorful light patterns.

5.5. Bass Boost

- Short press the BASS button to activate or deactivate the enhanced bass mode.



Image: An exploded view of the speaker, illustrating the 15W bass driver and 10W silk diaphragm tweeter.

6. MAINTENANCE

6.1. Waterproof Care

The OHAYO X10 MAX is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. To maintain its waterproof integrity:

- Always ensure the rubber port cover is securely closed before exposing the speaker to water.
- Do not open the port cover when the speaker is wet or submerged.
- After exposure to saltwater or chlorinated water, rinse the speaker with fresh water and dry thoroughly.



Image: The OHAYO X10 MAX speaker demonstrating its IPX7 waterproof capability by being partially submerged in water.

6.2. Cleaning and Storage

- Clean the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% to prolong its lifespan.

7. SPECIFICATIONS

Feature	Specification
Model Name	X10 MAX
Brand	OHAYO
Connectivity Technology	Bluetooth 5.3, Auxiliary, TF Card, USB Audio
Speaker Maximum Output Power	25W (50W with TWS pairing)
Battery Capacity	6600 mAh
Playtime	Up to 24 hours (varies with volume and light use)
Water Resistance Level	IPX7
Product Dimensions	2.95"D x 2.95"W x 7.28"H

Item Weight	450 Grams (15.9 ounces)
Wireless Communication Range	Up to 100 feet (stable connection over 66 feet)
Special Features	Bass Boost, RGB Lights, Hands-free Calling, TWS Pairing

8. TROUBLESHOOTING

- **Speaker won't turn on:** Ensure the battery is charged. Connect to a power source and try again.
- **Cannot pair via Bluetooth:**
 - Ensure the speaker is in pairing mode (blinking blue light).
 - Make sure Bluetooth is enabled on your device and it's within range (within 66 feet).
 - Forget "X10 MAX" from your device's Bluetooth list and try pairing again.
 - Restart both the speaker and your device.
- **No sound or low volume:**
 - Adjust the volume on both the speaker and your connected device.
 - Ensure the speaker is not muted.
 - Check if the correct input mode is selected (Bluetooth, AUX, TF Card, USB Audio).
- **TWS pairing failed:**
 - Ensure both speakers are not connected to any other Bluetooth device before initiating TWS pairing.
 - Place speakers close to each other during TWS pairing.
 - Double-click the Call/Play/Pause button on one speaker to re-enter TWS pairing mode.
- **Lights not working:** Short press the Power Button to cycle through light modes. The 7th press turns off the lights.

9. WARRANTY AND SUPPORT

OHAYO provides an extended warranty for its products. To activate your warranty or for any product-related issues, please contact customer support:

- **Email:** support@ohayo.com.cn
- Please provide your Amazon ORDER ID when contacting support.

We are always here to RESEND/REFUND you if you encounter any problems.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question