

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Outsunny](#) /

› [Outsunny 7' x 5' BBQ Grill Gazebo Tent Instruction Manual](#)

Outsunny 84C-429V00WR

Outsunny 7' x 5' BBQ Grill Gazebo Tent Instruction Manual

Model: 84C-429V00WR

INTRODUCTION

Thank you for choosing the Outsunny 7' x 5' BBQ Grill Gazebo Tent. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor grill canopy. Please read these instructions carefully before assembly and retain them for future reference.



Image: The Outsunny BBQ Grill Gazebo Tent, showcasing its design and utility in an outdoor environment.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Always assemble this product on a stable, level surface.
- Secure the shelter to the ground using the included ground pegs to prevent it from tipping over, especially in windy conditions.
- Be cautious when assembling or disassembling the product, as the steel frame can have sharp edges.
- Keep the shelter away from open flames or heat sources to prevent fire hazards. This gazebo is designed to provide shade and light protection, not to contain heat or flames.
- Remove the canopy fabric during strong winds, heavy rain, or snow to prevent damage to the structure and fabric.
- Ensure all connections are tight and secure before use. Periodically check for loose parts.
- This product is intended for outdoor use only.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed in the packaging diagram are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer service.

- Steel Frame Components (various poles and connectors)
- Canopy Fabric (Wine Red polyester)
- Ground Pegs/Anchors
- Assembly Hardware (screws, bolts, wrenches if included)
- Instruction Manual



Image: Example of frame components, illustrating the various parts included in the package.

SETUP AND ASSEMBLY

Assembly typically requires two or more people. Follow the numbered steps provided in the included assembly diagram for best results.

1. **Prepare the Area:** Choose a flat, level surface for assembly. Clear any obstacles and ensure sufficient space.
2. **Assemble the Base Frame:** Connect the horizontal and vertical base poles according to the diagram. Ensure all connections are finger-tight initially.
3. **Install Upright Poles:** Attach the main upright support poles to the base frame.
4. **Construct the Roof Frame:** Assemble the curved roof frame sections. This may involve connecting several smaller curved poles.
5. **Attach Roof Frame to Uprights:** Carefully lift and secure the assembled roof frame onto the upright poles. This step often requires multiple people.
6. **Tighten All Connections:** Once the main structure is standing, go back and securely tighten all bolts and screws. Do not overtighten.
7. **Install Canopy Fabric:** Drape the canopy fabric over the roof frame. Secure it using the corner covers and Velcro straps as indicated in the instructions. Ensure the fabric is taut to prevent water pooling.
8. **Attach Storage Hooks:** Secure the 10 storage hooks (5 on each side) to the designated bars on the frame.
9. **Anchor the Gazebo:** Use the provided ground pegs to firmly anchor each foot of the gazebo to the ground. For additional stability, especially in windy areas, consider using heavier-duty anchors or securing to a permanent structure if safe to do so.

STURDY STRUCTURE

Powder coated metal frame
with reinforcement poles



Image: Detail of the powder-coated metal frame with reinforcement poles, highlighting the sturdy construction.

STORAGE HOOKS

Provide extra storage space
for barbecue utensils

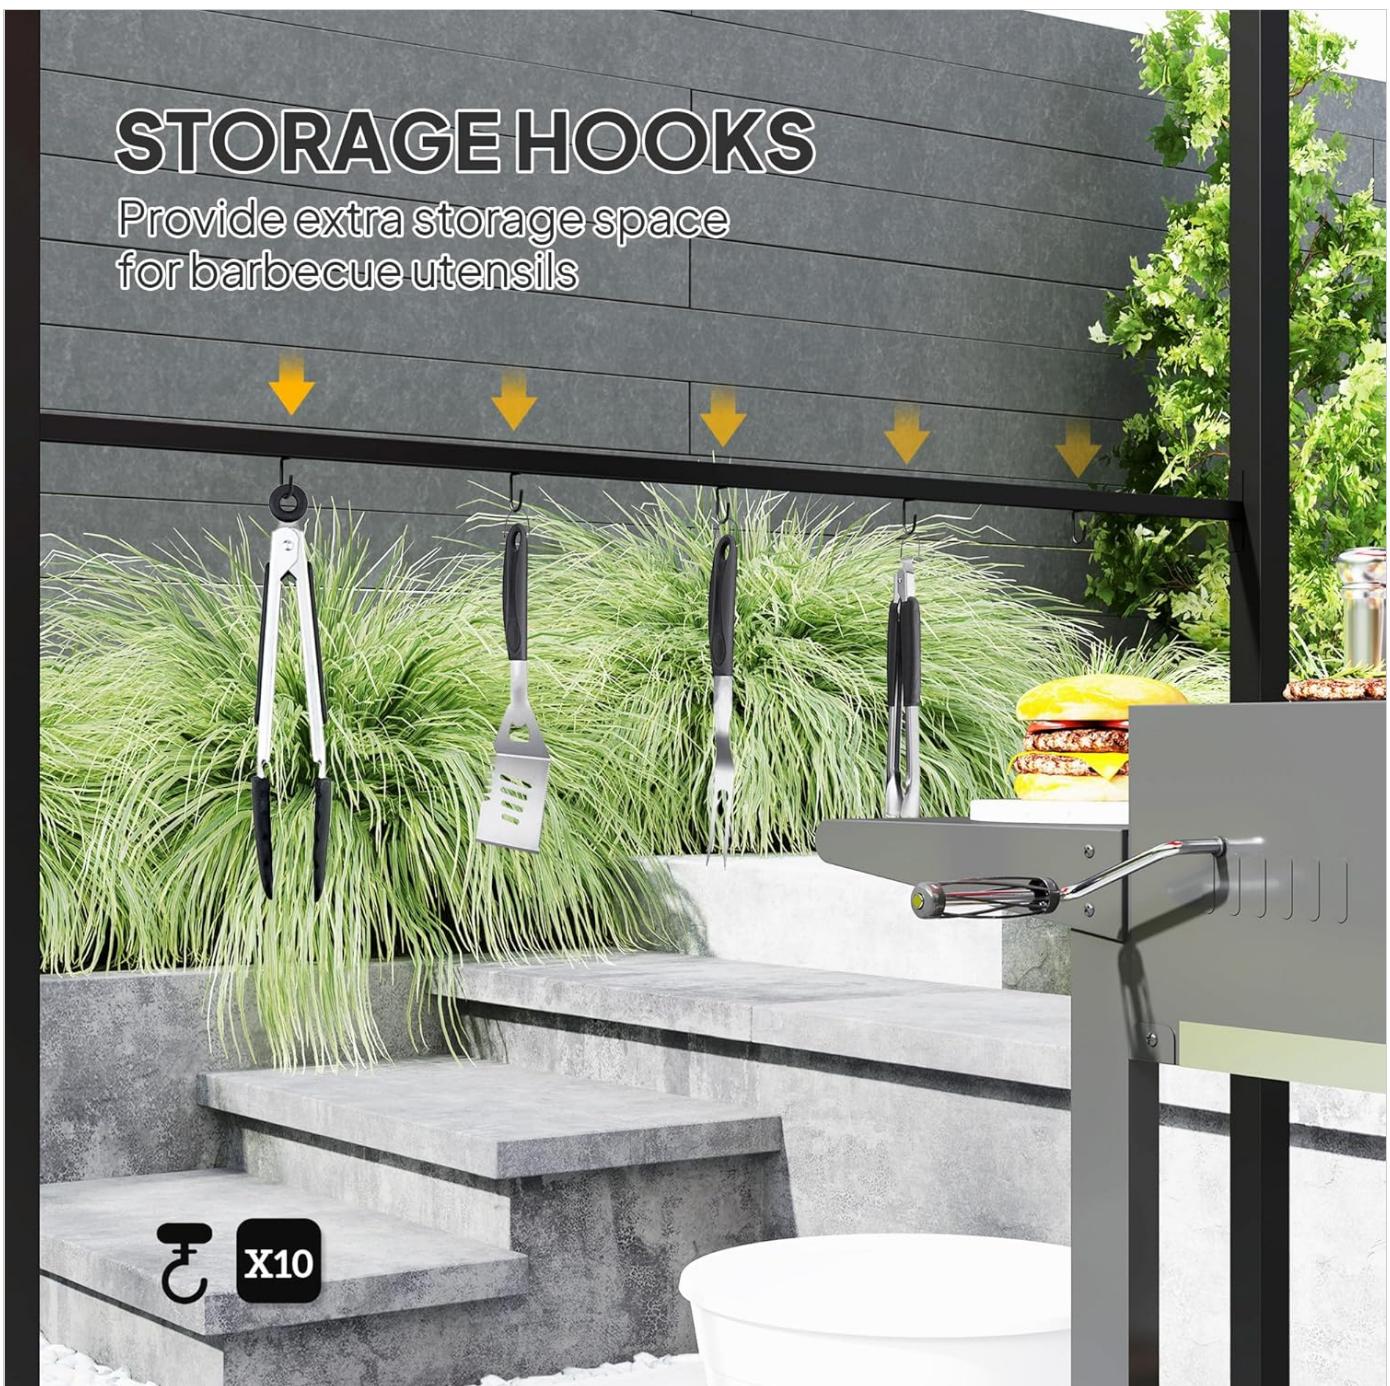


Image: Ten storage hooks (five on each side) providing convenient space for hanging grill or kitchen utensils.

OPERATING INSTRUCTIONS

This gazebo is designed to provide shade and a designated area for your outdoor grilling activities.

- **Shade Provision:** The curved canopy offers protection from direct sunlight, creating a cooler environment for grilling.
- **Ventilation:** The design allows for better airflow, which is beneficial when grilling. However, always ensure adequate ventilation and never use grills that produce carbon monoxide in enclosed spaces.
- **Utensil Storage:** Utilize the integrated hooks to keep your grilling tools organized and within easy reach.

KEEP SHADED

The gazebo provides a cool spot for outdoor BBQ



Image: The gazebo providing shade over a grill, demonstrating its primary function. Note on image: "In order to prolong the service life, please remove the canopy when not in use and don't leave it in bad weather."

MAINTENANCE

Regular maintenance will extend the life of your gazebo.

- Canopy Care:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow it to air dry completely before storage.
- Frame Care:** Wipe down the steel frame with a damp cloth to remove dirt and debris. Inspect for any signs of rust or damage. Touch up any scratches on the powder coating to prevent rust.
- Seasonal Storage:** For prolonged service life, especially during off-season or severe weather, it is recommended to remove the canopy fabric and store it in a dry, protected area.
- Check Connections:** Periodically check all bolts and screws to ensure they remain tight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo feels unstable or wobbly.	Loose connections; inadequate anchoring; uneven ground.	Ensure all bolts are tightened. Verify ground pegs are securely in place. Move to a level surface or use shims if necessary.
Water pools on the canopy.	Canopy not taut enough; frame not fully extended or assembled correctly.	Re-adjust canopy straps to ensure tightness. Check frame assembly for correct positioning and full extension. Remove canopy during heavy rain.
Difficulty fitting canopy fabric.	Fabric may be new and stiff; incorrect orientation.	Ensure fabric is oriented correctly. It may require significant effort to stretch over the frame initially. Warm weather can make fabric more pliable.
Rust appearing on frame.	Damage to powder coating; prolonged exposure to moisture.	Clean affected area, sand lightly, and apply rust-inhibiting paint. Store in a dry place when not in use for extended periods.

SPECIFICATIONS

Model: 84C-429V00WR

Overall Dimensions (L x W x H): 84.6" x 59.1" x 86.6" (215 x 150 x 220 cm)

Back Height: 71.7" (182 cm)

Material: Alloy Steel Frame, Polyester Fabric Canopy

Weight Capacity (single hook): 11 lbs (5 kg)

Item Weight: Approximately 36 lbs (16.33 kg)

Color: Wine Red

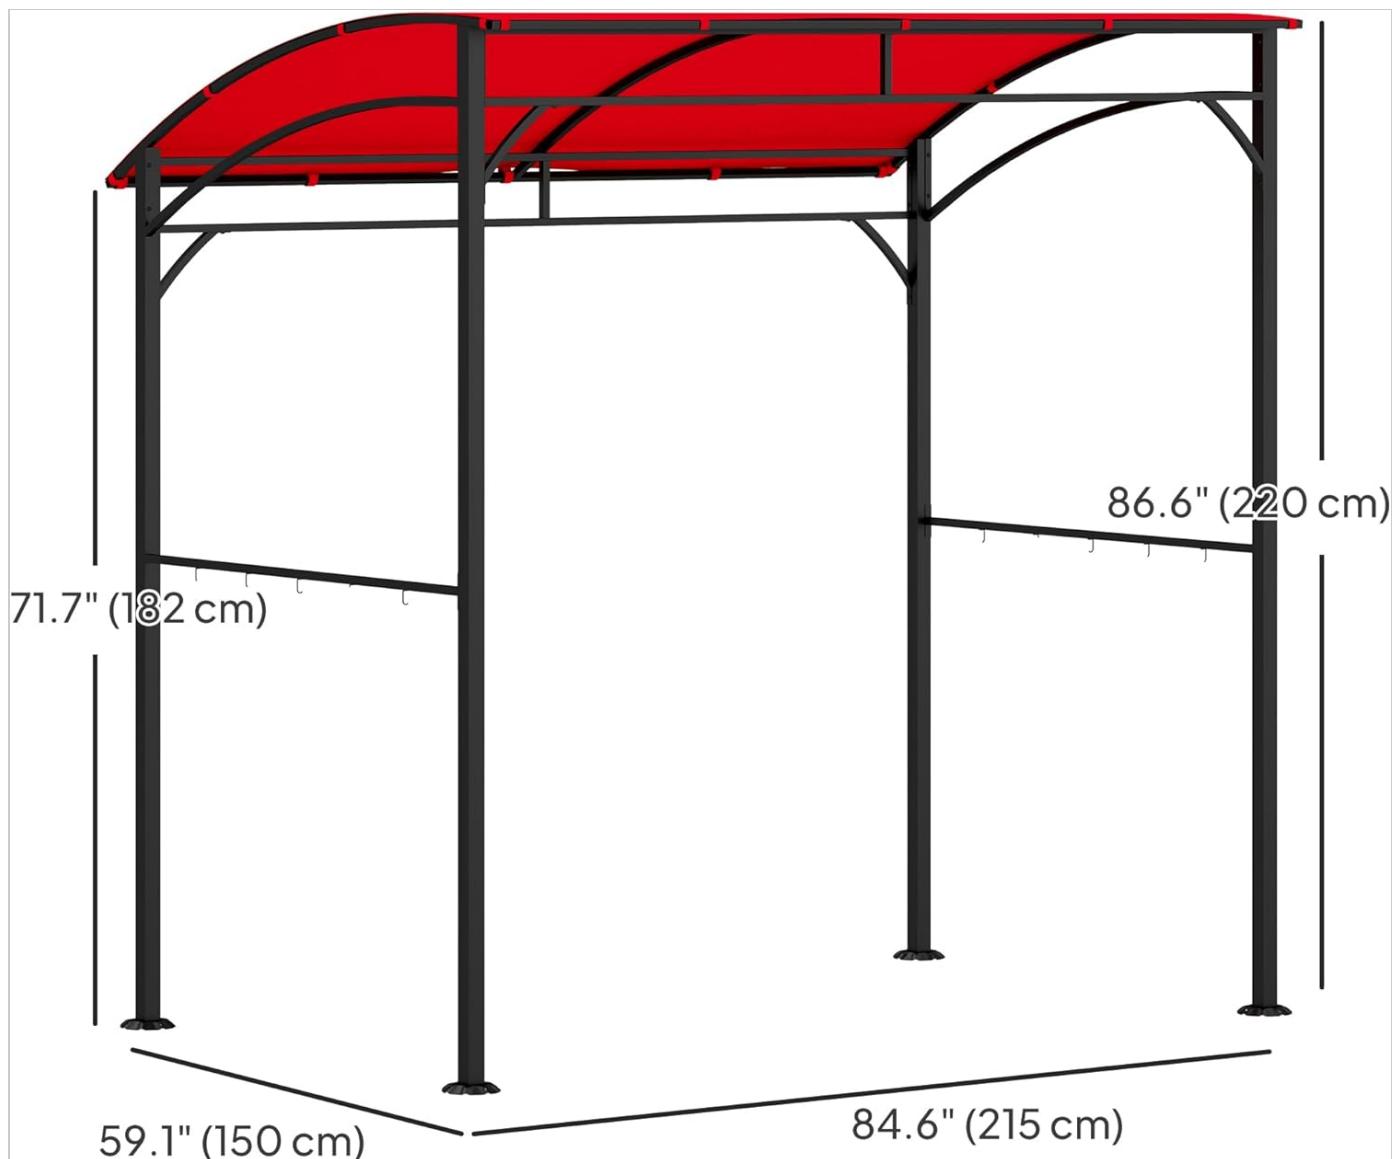


Image: Dimensional drawing of the gazebo, indicating length, width, and height measurements.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the purchase documentation or contact Outsunny customer service directly. Keep your proof of purchase for any warranty claims.

Manufacturer: Aosom Canada

Place of Business: Markham, Ontario, CA Tel. 1-416-792-6088

Website: www.aosom.ca (or refer to your regional Outsunny distributor)

