

[Manuals.plus](#) /

› [SUPCOOKI](#) /

› SUPCOOKI Cordless Electric Lunch Box BX88 User Manual

SUPCOOKI BX88

SUPCOOKI Cordless Electric Lunch Box BX88 User Manual

Model: BX88

1. INTRODUCTION

Thank you for choosing the SUPCOOKI Cordless Electric Lunch Box BX88. This manual provides essential information for the safe and efficient operation of your new self-heating food warmer. Please read it thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following:

- Always ensure the lunchbox is fully charged before heating food for optimal performance.
- The heating base is NOT dishwasher safe. Do not immerse the heating base in water or any other liquid.
- The removable stainless steel container and its lid are dishwasher safe.
- Do not use the product near flammable materials or open flames.
- Do not place the lunchbox in a microwave oven.
- Ensure the power cable is undamaged. If damaged, discontinue use and replace the cable.
- Always lift the steam vent on the container lid when heating to release pressure.
- Keep out of reach of children when in operation due to hot surfaces.

3. PRODUCT OVERVIEW

The SUPCOOKI Cordless Electric Lunch Box BX88 is designed for convenience, allowing you to enjoy hot meals anywhere. It features a 16000mAh rechargeable battery, a 1L (4.2 cups) food-grade 304 stainless steel container, and an intuitive digital display.

3.1 Included Components

- Heating Lunch Box (Main Unit)
- Removable 304 Stainless Steel Meal Container (1L/4.2 cups)
- Container Lid with Silicone Seal and Steam Vent
- USB-C Charging Cable and Wall Adapter
- Portable Insulated Carrying Bag with Shoulder Strap
- Stainless Steel Fork and Spoon

3.2 Component Diagram

Refer to the diagram below for an overview of the lunch box components.



Figure 1: Exploded view of the SUPCOOKI Cordless Electric Lunch Box components, detailing each part from the buckle handle to the digital display.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the lunch box. Connect the USB-C charging cable to the charging port on the side of the heating base and plug the wall adapter into a power outlet. The large screen display will show the battery level. A full charge typically takes approximately 3.5 hours.



Figure 2: The SUPCOOKI Cordless Electric Lunch Box connected to its charger, indicating the battery-powered feature.

4.2 Preparing the Meal Container

Place your cooked meal into the 304 stainless steel container. Ensure the container lid is securely fastened. If heating,

remember to lift the steam vent on the container lid to allow pressure to escape.

5. OPERATING INSTRUCTIONS

The lunch box offers multiple heating options via its intuitive digital display.

5.1 Powering On/Off

Press and hold the 'ON/OFF/Reset' button for 3 seconds to turn the device on or off. The digital display will illuminate.

5.2 Immediate Heating

For immediate heating, press the 'Heat' button. The default heating time is 20 minutes. You can adjust the heating duration (20-60 minutes) using the up/down arrow buttons. The display will show the current temperature as it heats.

FAST HEATING

Heat Up Food Quickly 20-60 Minutes



ADJUSTABLE HEATING TIME



Figure 3: Fast heating capability with adjustable time settings (20-60 minutes) and temperature display.

5.3 Scheduled Heating (Timer Function)

To schedule heating, press the 'Timer' button. Use the up/down arrow buttons to set the desired reservation start-up time (e.g., 30, 60, 90 minutes). The lunch box will automatically begin heating at the scheduled time, ensuring your meal is warm when you're ready to eat.

Your browser does not support the video tag.

Video 1: This video demonstrates the unboxing, components, and basic operation of the SUPCOOKI Cordless Electric Lunch Box, including setting the timer and temperature.

5.4 Temperature Level Adjustment

The lunch box features multiple temperature levels. Use the 'Temp' button and up/down arrows to adjust the target heating temperature according to your food's requirements. The display will show the set temperature.

5.5 Keep Warm Function

After heating, the lunch box can maintain a warm temperature. Press the 'Warm' button to activate this function, keeping your food at an optimal eating temperature.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your lunch box.

- The removable 304 stainless steel meal container and its lid are dishwasher safe.
- The heating base (main unit) is NOT dishwasher safe. Clean it with a damp cloth and mild detergent. Do not immerse in water.
- Ensure all components are dry before reassembling or storing.



Figure 4: Cleaning instructions for the removable stainless steel container, highlighting its dishwasher-safe design.

7. TROUBLESHOOTING

If you encounter issues with your SUPCOOKI Cordless Electric Lunch Box, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lunch box not heating	Low battery; Heating function not activated; Defective unit.	Fully charge the device; Ensure 'Heat' button is pressed and settings are confirmed; Contact customer support if unit is defective.
Food not heating evenly	Steam vent closed; Insufficient heating time/temperature.	Ensure steam vent is open during heating; Increase heating time or temperature.
Device not charging	Damaged charging cable/adaptor; Loose connection.	Check cable and adapter for damage, replace if necessary; Ensure secure connection to device and outlet.
Leakage during transport	Container lid not properly sealed.	Ensure the silicone seal on the container lid is correctly positioned and the lid is firmly closed.

8. SPECIFICATIONS

Feature	Detail
Brand	SUPCOOKI
Model Number	BX88
Color	Black
Material	Polypropylene, 304 Stainless Steel
Battery Capacity	16000mAh Lithium Ion (included)
Container Capacity	1L / 4.2 Cups
Heating Time	20-60 minutes (for room temperature/refrigerated food)
Product Dimensions	8.7"L x 6"W x 4.7"H
Item Weight	2.4 Pounds
Special Features	BPA Free, Battery Powered, Dishwasher Safe (container/lid), Electric Heated, Leak Resistant, Large Screen Display, Timer Function, Multi-Temperature Adjustment, Can charge electronic devices

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase documentation or visit the official SUPCOOKI website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DRSB7HLN>

More documents and user manuals: <https://manuals.plus/>