

[Manuals.plus](#) /

> [wotdmu](#) /

> wotdmu 5V 1A USB Replacement Charger Cord and Cleaning Brush for OLOV Electric Trimmer

wotdmu USB Charger Cord B0DRSCNF71

wotdmu 5V 1A USB Replacement Charger Cord and Cleaning Brush for OLOV Electric Trimmer

Instruction Manual

1. PRODUCT OVERVIEW

This manual provides essential information for the proper use and maintenance of your wotdmu 5V 1A USB Replacement Charger Cord and Trimmer Cleaning Brush. This product is specifically designed for compatibility with OLOV electric body hair trimmers (excluding YH-7280 model).

The package includes:

- 1x 5V USB Charging Cable
- 1x Trimmer Cleaning Brush



Image 1: The wotdmu 5V 1A USB Replacement Charger Cord and included cleaning brush.

2. COMPATIBILITY

This charger cord is engineered for perfect compatibility with OLOV electric body hair trimmers for women. It precisely matches the device's charging port for a secure and reliable connection. Please note, it is **not compatible** with the OLOV YH-7280 model.

perfect fit



Black



Bikini



Gray



Purple



Green



Red

Image 2: Illustration of various OLOV trimmer models compatible with this charger cord.

3. SETUP AND CONNECTION

To begin charging your OLOV electric trimmer, follow these steps:

1. **Identify Power Source:** The charger cord features a standard 5V USB Type-A connector. You can connect it to various USB power sources such as a USB wall adapter (not included), a power bank, a car charger, a laptop, or a PC. Ensure your power source provides a 5V output.
2. **Connect to Power Source:** Insert the USB Type-A end of the charging cable into your chosen 5V USB power source.
3. **Connect to Trimmer:** Insert the 2-prong plug end of the charging cable into the charging port of your

OLOV electric trimmer. Ensure a snug fit.



charging is easy



Image 3: Examples of compatible USB power sources like a power bank and a wall adapter.

4. OPERATING (CHARGING PROCESS)

Once connected, your OLOV electric trimmer should begin charging. The charging process is straightforward:

- Ensure both ends of the cable are securely connected.
- The trimmer's indicator light (if present) should illuminate to show it is charging. Refer to your OLOV trimmer's specific manual for details on its charging indicator.
- Charging time will vary depending on the trimmer's battery level and capacity.

- Disconnect the charger once the trimmer is fully charged to prolong battery life.



Image 4: Charging an OLOV trimmer using a laptop's USB port.

5. MAINTENANCE

5.1. Trimmer Cleaning Brush Usage

The included cleaning brush is designed to help maintain your electric trimmer. After each use of your trimmer:

1. Ensure the trimmer is turned off and disconnected from any power source.
2. Carefully use the brush to remove hair clippings and debris from the trimmer blades and cutting head.

3. Regular cleaning helps ensure optimal performance and extends the life of your trimmer.

5.2. Charger Cord Care

- Avoid bending or twisting the cable excessively, especially near the connectors, to prevent internal damage.
- Store the cable in a cool, dry place when not in use.
- Do not expose the cable to extreme temperatures or direct sunlight.
- Keep the connectors clean and free of dust or debris.

6. TROUBLESHOOTING

If your OLOV electric trimmer is not charging, consider the following:

- **Check Connections:** Ensure both the USB end and the 2-prong plug end are fully and securely inserted into their respective ports.
- **Verify Power Source:** Confirm that the USB power source (wall adapter, power bank, laptop) is functional and providing power. Try a different USB port or power source if available.
- **Confirm Compatibility:** Double-check that your OLOV trimmer model is compatible with this charger cord (not YH-7280).
- **Inspect Cable:** Visually inspect the cable for any signs of damage, such as cuts, fraying, or bent pins in the connectors. If damaged, discontinue use and replace the cable.
- **Trimmer Issue:** If the cable and power source are confirmed to be working, the issue might be with the trimmer's charging port or battery. Refer to your trimmer's manual or contact its manufacturer for further assistance.

7. SPECIFICATIONS

Key technical details for the wotdmu 5V 1A USB Replacement Charger Cord:

Input	5V USB Type-A
Output	5V 2-prong plug
Cable Length	Approximately 3.3 feet (1 meter)
Connector Type	USB Type A (Input), 2-prong (Output)
Special Feature	Lightweight, Durable Construction

parameters



input: 5V
USB type-A

output: 5V
2 prong plug



Image 5: Visual representation of the charger cord's input and output specifications.

8. SAFETY INFORMATION

Please observe the following safety guidelines:

- Use this charging cable only with compatible OLOV electric trimmers as specified.
- Do not attempt to modify or disassemble the charging cable.
- Keep the cable away from water, moisture, and extreme heat.
- Do not use the cable if it appears damaged.
- Keep out of reach of children.
- Integrated safety mechanisms protect against over-voltage, over-current, and short circuits.

9. WARRANTY AND SUPPORT

For any questions or support regarding your wotdmu 5V 1A USB Replacement Charger Cord or Trimmer Cleaning Brush, please refer to the seller's contact information on the platform where the product was purchased. While specific warranty details are not provided in this manual, general consumer rights and return policies apply.

For information regarding your OLOV electric trimmer, please consult the trimmer's original instruction manual or contact the OLOV manufacturer directly.