

[Manuals.plus](#) /

› [SKMEI](#) /

› SKMEI Model 2328 Sports Watch User Manual

SKMEI 2328

SKMEI Model 2328 Sports Watch User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the SKMEI Model 2328 Sports Watch. This timepiece is designed for active individuals, offering features such as World Time, 5 Alarms, a Countdown Timer, EL Light, and 50-meter water resistance. This manual provides detailed instructions to help you understand and utilize all functions of your watch.



Figure 1.1: Front view of the SKMEI Model 2328 Sports Watch. The watch features a black case and strap, with a combination analog and digital display. The digital display shows time and other functions, while the analog hands indicate the current time. Buttons are visible on both sides of the watch case.

2. WATCH COMPONENTS

Familiarize yourself with the main components and buttons of your SKMEI 2328 watch:

- **LIGHT Button (Top Left):** Activates the Electro-Luminescent (EL) backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Stopwatch, Alarm, World Time, Countdown Timer).
- **ST/STP/+ Button (Top Right):** Starts/stops stopwatch, increases values during setting, or advances through options.
- **SPL/RST/- Button (Bottom Right):** Resets stopwatch, records split times, decreases values during setting, or selects options.

Key Features

Display

Analog-Digital

Dial Shape

Square

Features

**Date, Week, 5 Alarm,
EL Light**

Strap Material

TPU

Water Resistance

50 m



Figure 2.1: Overview of key features. This image highlights the watch's analog-digital display, square dial shape, functions including date, week, 5 alarms, and EL light, its TPU strap material, and 50-meter water resistance.

3. SETUP AND INITIAL CONFIGURATION

3.1. Setting Time and Date

1. In Timekeeping Mode, press and hold the **MODE** button until the seconds begin to flash. This indicates setting mode.
2. Press the **SPL/RST/-** button to cycle through the setting options: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **ST/STP/+** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button again to exit setting mode.

3.2. Setting World Time

1. From Timekeeping Mode, press the **MODE** button repeatedly until you reach World Time Mode (indicated by 'WT' or a similar icon).
2. Press the **ST/STP/+** button to cycle through different city codes/time zones.
3. To set Daylight Saving Time (DST) for a selected city, press the **SPL/RST/-** button. An indicator (e.g., 'DST') will appear. Press again to deactivate.

4. The watch will automatically display the time for the selected city.

3.3. Setting Alarms (Up to 5)

1. From Timekeeping Mode, press the **MODE** button repeatedly until you reach Alarm Mode (indicated by 'AL' or an alarm icon).
2. Press the **SPL/RST/-** button to select one of the 5 alarms (AL1, AL2, etc.).
3. Press and hold the **ST/STP/+** button until the hour digits flash.
4. Use the **ST/STP/+** button to adjust the hour and the **SPL/RST/-** button to move to minutes.
5. Adjust the minutes using the **ST/STP/+** button.
6. Press the **MODE** button to confirm and exit alarm setting.
7. To activate/deactivate an alarm, in Alarm Mode, press the **ST/STP/+** button. An alarm icon will appear/disappear.

3.4. Setting Countdown Timer

1. From Timekeeping Mode, press the **MODE** button repeatedly until you reach Countdown Timer Mode (indicated by 'TR' or 'CD').
2. Press and hold the **ST/STP/+** button until the hour digits flash.
3. Use the **ST/STP/+** button to adjust the hour and the **SPL/RST/-** button to move to minutes.
4. Adjust the minutes using the **ST/STP/+** button.
5. Press the **MODE** button to confirm and exit setting.
6. To start/stop the countdown, press the **ST/STP/+** button. To reset, press the **SPL/RST/-** button while stopped.

4. OPERATING INSTRUCTIONS

4.1. Mode Navigation

Press the **MODE** button to cycle through the watch's functions in the following order:
Timekeeping → Stopwatch → Alarm → World Time → Countdown Timer → Timekeeping

4.2. Using the EL Light

Press the **LIGHT** button (top left) at any time to illuminate the digital display for a few seconds. This feature is useful in low-light conditions.

4.3. Using the Stopwatch

1. Navigate to Stopwatch Mode (indicated by 'ST' or 'CHR').
2. Press the **ST/STP/+** button to start the stopwatch.
3. Press the **ST/STP/+** button again to stop the stopwatch.
4. To record a split time while the stopwatch is running, press the **SPL/RST/-** button. The display will show the split time, but the stopwatch continues to run in the background. Press **SPL/RST/-** again to return to the running time.
5. While the stopwatch is stopped, press the **SPL/RST/-** button to reset it to zero.

4.4. Water Resistance Guidelines

The SKMEI 2328 watch is rated for 50 meters (5 ATM) of water resistance. This means it is suitable for daily use, splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering with hot water, as steam and temperature changes can compromise the seals. Do not operate buttons while the watch is wet or submerged.

5. MAINTENANCE

5.1. Cleaning

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

5.2. Battery Replacement

The watch uses a C battery (CR2016, as indicated on the back). When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.



Figure 5.1: Rear view of the SKMEI Model 2328 watch. The stainless steel case back is visible, engraved with the model number '2328', water resistance '5ATM', and battery type 'CR2016'.

5.3. Storage

When not in use for extended periods, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. This helps preserve battery life and the integrity of the watch materials.

6. TROUBLESHOOTING

6.1. Time is Inaccurate

- Check if the time and date settings are correct (refer to Section 3.1).
- A weak battery can affect accuracy. Consider battery replacement.
- Ensure the watch has not been exposed to strong magnetic fields.

6.2. Digital Display is Blank or Dim

- The battery may be depleted. Replace the battery (refer to Section 5.2).
- Ensure the watch is not in a power-saving mode (if applicable, though not a primary feature of this model).

6.3. Buttons Not Responding

- Ensure the watch is not wet or submerged when operating buttons.
- A low battery can sometimes cause unresponsive buttons.
- If the issue persists, a factory reset might be necessary (consult customer support for specific steps, as this model may not have a user-accessible reset).

7. SPECIFICATIONS

Feature	Detail
Model Number	2328
Display Type	Analog-Digital
Movement Type	Quartz
Case Diameter	4.25 Centimeters
Case Thickness	1.39 Centimeters
Strap Material	Silica Gel (TPU)
Water Resistance	50 Meters (5 ATM)
Battery Type	1 C battery (CR2016)
Item Weight	56.8 Grams
Functions	World Time, 5 Alarms, Countdown Timer, Stopwatch, EL Light, Date, Day, Week



Case Width
44.8MM



Strap Material
TPU



Case Thickness
14.3MM

Figure 7.1: Dimensional overview of the SKMEI Model 2328 watch, illustrating its height, width, strap width, and thickness for reference.

8. WARRANTY INFORMATION

This SKMEI watch comes with a **Limited Warranty**. The terms and conditions of this warranty cover manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims. For specific details regarding the duration and coverage of your warranty, refer to the warranty card included with your product or contact SKMEI customer support.

9. CUSTOMER SUPPORT

Should you encounter any issues not covered in this manual, or require further assistance, please contact SKMEI customer service. You can typically find contact information on the official SKMEI website or through the retailer where you purchased the product. When contacting support, please have your watch model number (2328) and proof of purchase readily available.