

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [AECOJOY](#) /

> [AECOJOY 2-Seat Outdoor Patio Swing Chair with Adjustable Canopy, Porch Swings Chairs for Adult, Outside Swing Bench with Removable Cushion, Suitable for Backyard, Garden, Yard, Poolside, Balcon, Red 2 Seats Swing Red User Manual](#)

### AECOJOY 19031rd

# AECOJOY 2-Seat Outdoor Patio Swing Chair User Manual

Model: 19031rd

Brand: AECOJOY

## INTRODUCTION

Thank you for choosing the AECOJOY 2-Seat Outdoor Patio Swing Chair. This manual provides important information for the safe assembly, operation, and maintenance of your new patio swing. Please read it thoroughly before use and retain it for future reference.

This patio swing features a sturdy and durable triangular frame, an adjustable canopy for UV protection, and thick, comfortable cushions. It is designed for outdoor use in various seasons.

### Safety Warnings

- Ensure all parts are securely fastened before use.
- Do not exceed the maximum weight capacity of 600 lbs.
- Keep children and pets away from the swing during assembly.
- Regularly inspect the swing for any signs of wear or damage.
- Do not use the swing in extreme weather conditions (e.g., strong winds, heavy snow).

## PARTS LIST

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer service.

Part	Description	Quantity
A	Main Frame Components (Alloy Steel)	Various
B	Swing Seat Frame	1
C	Canopy Fabric (Red)	1
D	Seat Cushions (Red, 2.7-inch thick)	2

Part	Description	Quantity
E	Hardware Pack (Bolts, Nuts, Washers, Wrench)	1 set
F	Springs	2
G	Foot Pads (Antislip)	4

## ADJUSTABLE CONVERTIBLE CANOPY



*Anti-UV*



*Waterproof*



*Anti-fading*



### **Adjustable Knob**

*To loosen knob before adjusting canopy*



### **Stable Frame Structure**

*Multiple triangular structures add more stability*



Image: Detailed view of the adjustable canopy mechanism and stable frame structure.

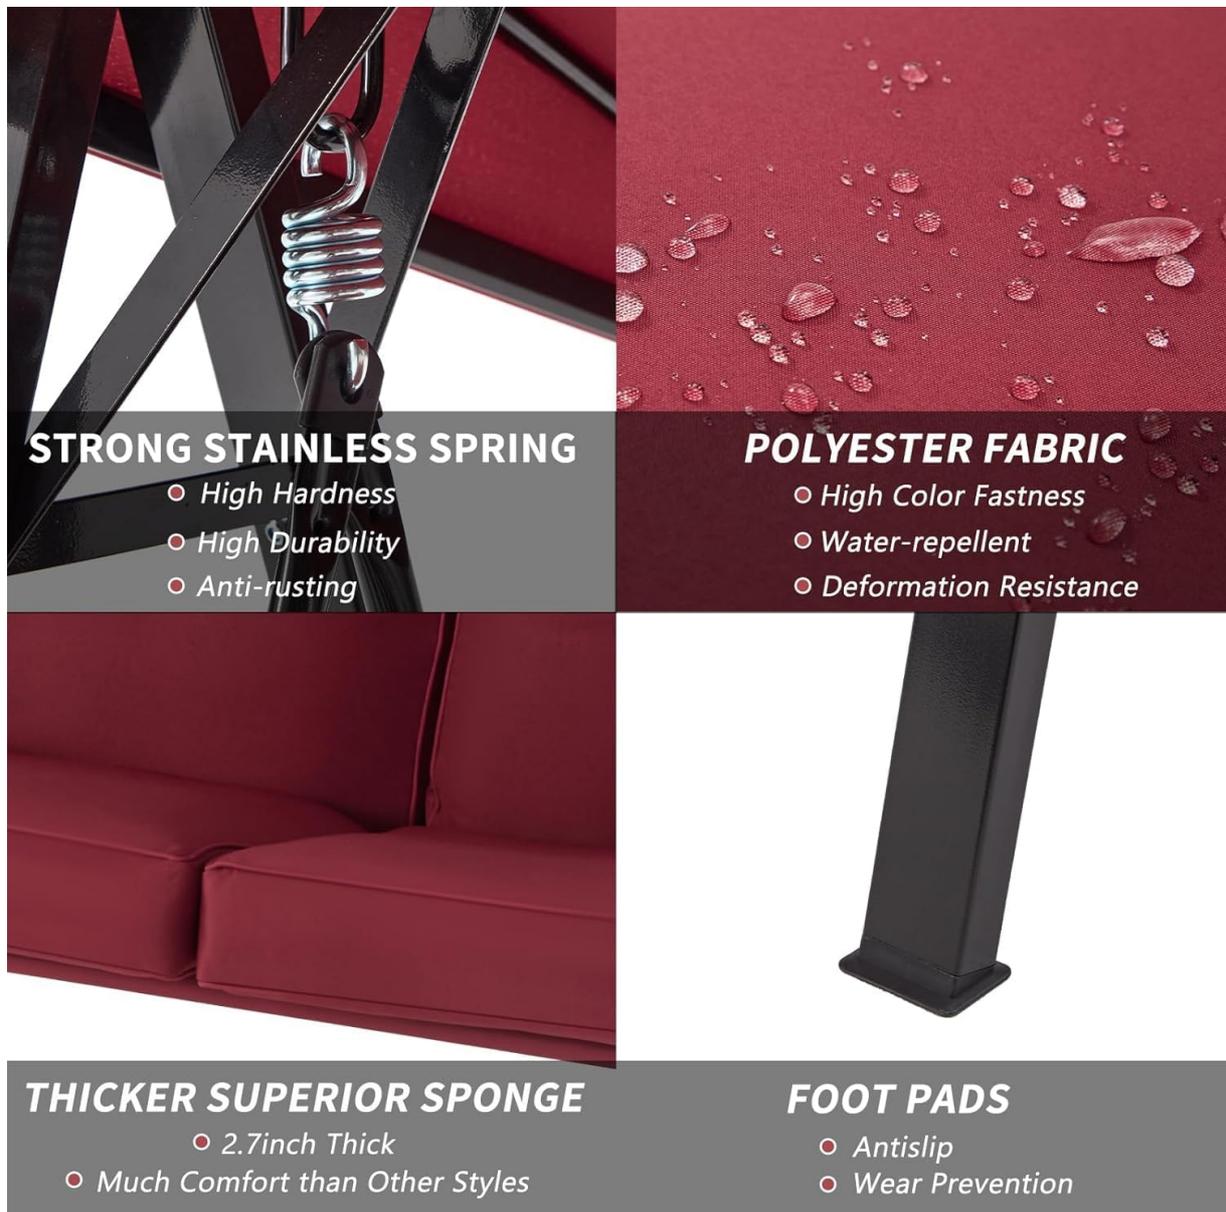


Image: Close-up of key components including the strong stainless steel spring, water-repellent polyester fabric, thick sponge cushion, and anti-slip foot pads.

## SETUP AND ASSEMBLY

Assembly is straightforward with the provided tools and instructions. It is recommended to have two people for easier assembly.

### Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface to ensure all pieces are accounted for.
2. **Assemble the Main Frame:** Connect the vertical and horizontal bars of the main frame using the provided bolts and nuts. Ensure all connections are secure but do not fully tighten until all frame pieces are in place.
3. **Attach the Swing Seat Frame:** Secure the swing seat frame to the main frame using the designated bolts. Pay attention to the orientation of the seat.
4. **Install Springs:** Attach the heavy-duty springs to the top bar of the main frame and the swing seat frame. These springs ensure smooth swinging motion and reduce noise.
5. **Place Cushions:** Position the 2.7-inch thick cushions onto the swing seat. The cushions are

removable for seasonal use.

6. **Install Canopy:** Attach the adjustable canopy fabric to the top of the main frame. The canopy can be adjusted to different angles to provide optimal shade and UV protection.
7. **Final Tightening:** Once all components are in place, go back and fully tighten all bolts and nuts. Ensure the swing is stable and level.

Your browser does not support the video tag.

Video: AECOJOY Two-Person Patio Swing With Plush Seat! - This video demonstrates the assembly process and highlights key features of the patio swing.



Image: The fully assembled AECOJOY 2-Seat Outdoor Patio Swing Chair in red, ready for use.

## OPERATING INSTRUCTIONS

### Using the Swing:

- Gently sit on the swing seat. Avoid sudden movements or jumping onto the swing.
- To initiate swinging, gently push off the ground with your feet. The premium springs will provide a smooth and quiet motion.
- Ensure the swing is on a level surface to prevent tipping.

## Adjusting the Canopy:

- Locate the adjustable knobs on either side of the canopy frame.
- Loosen the knobs to allow the canopy to move freely.
- Adjust the canopy to your desired angle for optimal sun protection.
- Tighten the knobs securely to lock the canopy in place.



Image: This image illustrates the adjustable canopy, highlighting its anti-UV, waterproof, and anti-fading properties, along with the adjustment knob.

## MAINTENANCE

### Cleaning:

- **Frame:** Wipe the alloy steel frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust.
- **Fabric (Canopy & Cushions):** The polyester fabric is water-repellent. For general cleaning, wipe with a damp cloth. For deeper cleaning, the cushions are removable and can be spot cleaned with mild detergent. Allow to air dry completely before reattaching or storing.

### Storage:

- During prolonged periods of non-use or in harsh weather conditions (e.g., heavy rain, snow, extreme cold), it is recommended to remove the cushions and canopy and store them indoors.
- The frame can be covered with a weather-resistant cover if left outdoors.

### Regular Inspection:

- Periodically check all bolts and nuts to ensure they remain tight. Re-tighten as necessary.
- Inspect the springs for any signs of corrosion or damage.
- Check the fabric for tears or excessive wear.



## REMOVABLE CUSHION FOR ALL SEASONS

 180g polyester seat without cushion adds extra pleasantly cool for hot weather.

 2.7" thick soft cushions is warm and comfort enough for cool weather.



Image: This image shows the removable cushions, highlighting their suitability for all seasons with 180g polyester for warm weather and 2.7-inch thick cushions for cool weather.

### TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing is wobbly or unstable.	Loose bolts or uneven ground.	Ensure all bolts are tightened. Move the swing to a level surface.

Problem	Possible Cause	Solution
Squeaking noise during swinging.	Friction in joints or springs.	Apply a silicone-based lubricant to the spring connections and moving joints.
Canopy does not stay in position.	Adjustment knobs are loose.	Tighten the adjustment knobs firmly after positioning the canopy.
Cushions feel too warm in summer.	Thick cushions retain heat.	Remove the thick cushions and use the 180g polyester seat for extra breathability.

## SPECIFICATIONS

---

**Brand:** AECOJOY

**Model:** 19031rd

**Color:** Red

**Product Dimensions:** 37.2"D x 56.3"W x 60.2"H

**Frame Material:** Alloy Steel

**Finish Type:** Fabric

**Seat Depth:** 37.2 inches

**Weight Capacity:** Up to 600 lbs

**Cushion Thickness:** 2.7 inches

**Canopy Features:** Anti-UV, Waterproof, Anti-fading, Adjustable

# PRODUCT DIMENSION



Image: Diagram illustrating the product dimensions (56.3"W x 60.2"H x 37.2"D) and highlighting the 600 lbs weight capacity.

## WARRANTY AND SUPPORT

For warranty information, customer service inquiries, or to order replacement parts, please refer to the documentation included with your product packaging or visit the official AECOJOY website. The customer service team aims to respond within 24 hours for any questions regarding the outdoor swing. You can also visit the AECOJOY Store on Amazon for more information: [AECOJOY Store](#)