

## VECELO TV Stand

# VECELO TV Stand with Mount and Power Outlet Instruction Manual

Model: TV Stand (63 Inch, Matte Black)

## 1. INTRODUCTION

Thank you for choosing the VECELO TV Stand with Mount and Power Outlet. This entertainment center is designed to provide a stable and versatile platform for your television and media devices. It features an adjustable TV mount, integrated power outlets, and ample storage space to help organize your living area. Please read this manual thoroughly before assembly and use to ensure safe and correct installation and operation.

## 2. SAFETY INFORMATION

- Ensure all parts and screws are firmly attached before use.
- Be cautious of sharp edges during assembly and handling.
- Use the TV stand on stable, even surfaces to prevent tip-overs.
- Do not exceed the maximum weight capacities: Tabletop: 160 lbs, Open Shelves: 60 lbs.
- Confirm the TV mounting hole distance is within the available range of the bracket (Horizontal: 6.7"-24.6", Vertical: 5.5"-15.3") to ensure compatibility.
- Keep children and pets away from the assembly area.

## 3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x VECELO TV Stand with Mount
- 1 x Tool Kit (including screwdriver and wrench)
- 1 x Instruction Manual
- All necessary fasteners (labeled A, B, C, E, F, G, H, I, J, K, L, M)
- Wood panels (various sizes, labeled 1, 2, 3, 4)

- Metal frames and mesh shelves (labeled 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18)
- S-shhape hooks (6 pieces)
- Built-in power strip with 4 AC outlets and 2 USB outlets

## 4. SETUP AND ASSEMBLY

Follow these step-by-step instructions for assembling your VECELO TV Stand. It is recommended to have a clear, spacious area for assembly.


### 4.1 Assembly Video Guide

Your browser does not support the video tag.

**Video Description:** Official VECELO assembly tutorial demonstrating how to assemble the TV stand step-by-step. This video covers the entire assembly process from unboxing to final setup.


### 4.2 Step-by-Step Instructions

- 1. Attach Adjustable Feet:** Screw the adjustable feet (F) into the bottom of the four main frame pieces (5 and 6). Tighten them hand-tight for now; they can be adjusted later for leveling.

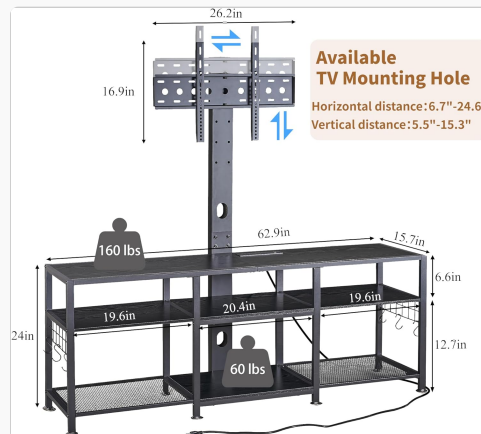

**Image Description:** Close-up of the adjustable feet (F) being screwed into the threaded holes at the bottom of the metal frame pieces. These feet help level the stand on uneven surfaces.

- 2. Assemble Side Sections:** Connect the metal mesh shelf (7) and the wooden shelf (3) to two of the main frame pieces (5 and 6) using fasteners A and E. Ensure the mesh shelf is at the bottom and the wooden shelf is above it. Repeat this for the other side section, ensuring the orientation matches the diagram.

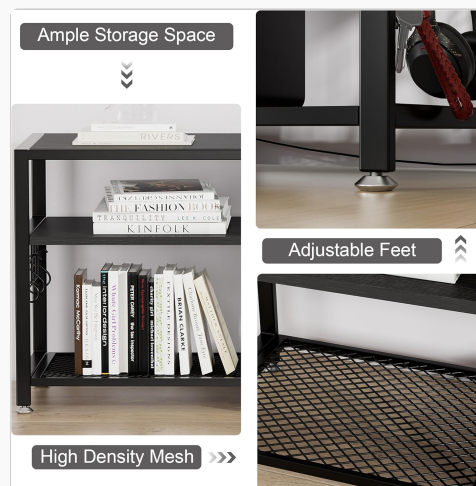

**Image Description:** A partially assembled side section of the TV stand, showing the metal frame, a mesh bottom shelf, and a wooden middle shelf. This illustrates the ample storage space.

- 3. Prepare Middle Wood Panels:** Attach the metal support bars (8) to the underside of the two middle wood

panels (4) using fasteners B. Ensure the holes for the fasteners are facing down.



**Image Description:** The underside of a wooden tabletop panel, showing the pre-drilled holes and the attached metal support bars. This highlights the premium MDF board construction.

- 4. Connect Side Sections with Middle Panels:** Place the prepared middle wood panels (4) between the two assembled side sections. Secure them using fasteners A, screwing through the side frames into the metal support bars (8) on the underside of the wood panels. Ensure a snug fit.
- 5. Assemble Top Support Bars:** Connect the long metal support bars (9, 10, 12, 13) using the small connector pieces (11) and fasteners C. You will create two long top support bars.
- 6. Attach Top Support Bars:** Place the assembled long top support bars across the top of the entire TV stand frame. Secure them to the side frames using fasteners A on the ends and fasteners C from underneath into the metal tabs.
- 7. Install Top Wood Panels:** Carefully place the main top wood panels (1 and 2) onto the top frame, aligning the white grommets on the underside of the panels with the holes in the metal frame. Press down firmly to secure. Fasten them from underneath using fasteners C.
- 8. Install Power Outlet:** Insert the built-in power strip (H) into the designated cutout on the top wood panel. Secure it with fasteners G.



**Image Description:** A detailed view of the built-in power strip, showing 4 AC outlets and 2 USB outlets, along with its 9.84 ft power cord. This feature provides convenient charging for devices.

- 9. Assemble TV Mount Post:** Connect the two parts of the TV mount post (15 and 16) using fasteners J, L, and M. Ensure they are securely tightened with the provided wrench.
- 10. Attach TV Mount Brackets:** Attach the TV mount brackets (17 and 18) to the assembled TV mount post using fasteners K. These brackets are adjustable for height.



**Image Description:** An illustration detailing the adjustable TV mount, its safety lock design, and integrated cable management features for a tidy setup.

11. **Install TV Mount to Stand:** Secure the assembled TV mount post to the back of the TV stand using fasteners I, L, and M. Ensure it is centered and firmly attached.
12. **Attach S-Shape Hooks:** Hang the S-shape hooks (D) onto the side mesh panels for additional storage, such as headphones or keys.
13. **Final Adjustments:** Place your TV onto the mount, ensuring it is securely attached. Adjust the height of the TV mount and the leveling feet (F) as needed to achieve your desired viewing angle and stability.



**Image Description:** The VECELO TV stand with a television mounted, illustrating its compatibility with various TV sizes from 55 to 75 inches. The stand also features multiple shelves for media devices.

## 5. OPERATING INSTRUCTIONS

- **Adjusting TV Height:** The TV mount features a height-adjustable bracket. Loosen the securing screws on the mount, adjust the TV to your preferred height, and then firmly re-tighten the screws to ensure stability.
- **Using the Charging Station:** Plug the TV stand's power cord into a wall outlet. You can then use the 4 AC outlets and 2 USB outlets on the built-in power strip to power your television, gaming consoles, streaming devices, and charge mobile devices.
- **Cable Management:** Utilize the cable management features on the TV mount and the open design of the stand to route and organize your cables, preventing tangles and maintaining a neat appearance.

- **Storage:** The spacious tabletop and open shelves are designed to store media devices, DVDs, books, and other accessories. The S-shape hooks provide convenient hanging storage for headphones or keys.

## 6. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish. The waterproof surface allows for easy cleaning.
- **Regular Checks:** Periodically check all fasteners to ensure they remain tight. Re-tighten if necessary to maintain stability and safety.
- **Leveling:** If the stand becomes wobbly, adjust the leveling feet (F) at the bottom until the stand is stable on your floor.

## 7. TROUBLESHOOTING

- **Stand is Wobbly:** Ensure all screws are tightened. Adjust the leveling feet (F) at the bottom of the stand to compensate for uneven flooring.
- **TV Mount Not Holding Position:** Verify that the screws securing the TV mount to the post and the TV to the brackets are fully tightened. Ensure your TV's weight does not exceed the mount's capacity.
- **Power Outlets Not Working:** Check if the main power cord of the TV stand is securely plugged into a functioning wall outlet. Ensure no circuit breakers have tripped.
- **Missing Parts:** If any parts are missing upon unboxing, refer to the package contents list and contact VECELO customer support for assistance.

## 8. SPECIFICATIONS

| Feature                                 | Detail                  |
|---|-------------------------|
| Brand                                   | VECELO                  |
| Model Number                            | TV Stand                |
| Color                                   | Matte Black             |
| Material                                | Engineered Wood, Metal  |
| Item Dimensions (L x W x H)             | 63 x 15.7 x 61.4 inches |
| Item Weight                             | 58 Pounds               |
| Number of Shelves                       | 3                       |
| Tabletop Weight Capacity                | 160 lbs                 |
| Open Shelves Weight Capacity            | 60 lbs                  |
| Available TV Mounting Hole (Horizontal) | 6.7" - 24.6"            |
| Available TV Mounting Hole (Vertical)   | 5.5" - 15.3"            |

|                     |  |
|---------------------|--|
| Power Outlet        | 4 AC Outlets (125V/12A), 2 USB Outlets (5V/2A)   |
| Power Cord Length   | 9.84 FT  |
| Additional Features | Integrated TV Mount, Height Adjustable Bracket, Cable Management, Adjustable Feet, S-shape Hooks |

## 9. WARRANTY AND SUPPORT

---

For any questions about your VECELO TV Stand, including missing parts, assembly issues, or product inquiries, please contact VECELO customer support. Refer to the contact information provided in your package or visit the official VECELO store on Amazon for assistance.

While specific warranty details are not provided in this manual, VECELO products typically come with a manufacturer's warranty covering defects in materials and workmanship. Please retain your purchase receipt for warranty claims.

You can visit the VECELO Store for more information: [VECELO Official Store](#)