

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [yobola](#) /

› [yobola LY27203168 Wireless Earbuds User Manual](#)

yobola LY27203168

yobola LY27203168 Wireless Earbuds

USER MANUAL

1. Introduction

Thank you for choosing yobola LY27203168 Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your new earbuds. Please read it carefully to ensure optimal performance and longevity of your device.



Image 1.1: yobola LY27203168 Wireless Earbuds in their charging case.

2. What's in the Box

- Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Cable
- User Manual

3. Product Overview

The yobola LY27203168 earbuds are designed for comfort and high-quality audio. They feature a semi-in-ear design for extended wear without discomfort and are equipped with 14.22mm dynamic drivers for rich sound.

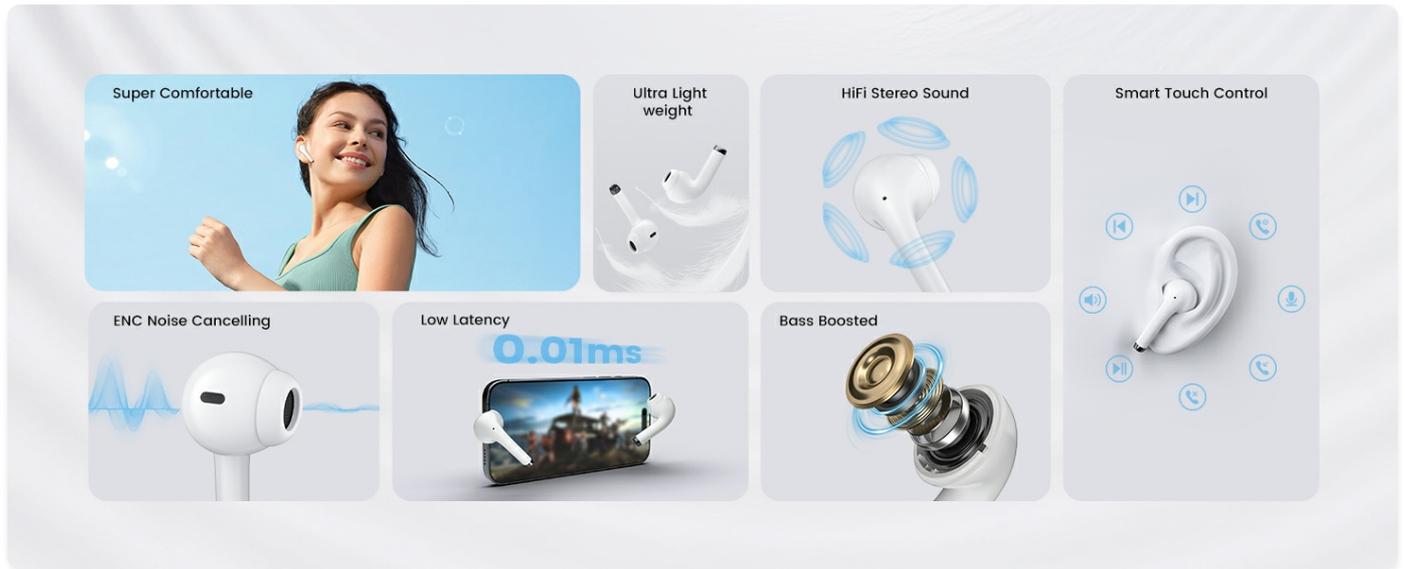


Image 3.1: Comparison of earbud fit types, highlighting the comfort of semi-in-ear design.

LONG BATTERY LIFE

The ultra-fast charging mode boosts the battery level in a flash.



Image 4.1: Battery life and charging illustration. Earbuds provide 5 hours of playtime, the charging case provides an additional 20 hours, and the case supports 1-hour USB-C fast charging.

4.2. Pairing with a Device

The earbuds utilize Bluetooth 5.4 for a fast and stable connection. Follow these steps to pair them with your device:

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for available Bluetooth devices and select "T7 Pro" from the list.
5. Once connected, the earbuds are ready for use.

ONE - STEP QUICK PAIRING

0.01 ms ultra-low latency by Bluetooth 5.4



Image 4.2: One-step quick pairing process with a mobile device, showing the earbuds connecting as "T7 Pro".

5. Operating Instructions

5.1. Touch Controls

The yobola LY27203168 earbuds feature sensitive touch controls for easy management of music and calls. Refer to the table below for specific functions:

Action	Function
Single Tap (L/R)	Play/Pause Music, Answer/End Call
Double Tap (L/R)	Next Song (Right earbud), Previous Song (Left earbud)
Long Press (2 seconds, L/R)	Volume Up (Right earbud), Volume Down (Left earbud), Reject Call

Action	Function
Triple Tap (L/R)	Activate Voice Assistant



Image 5.1: Visual guide to the touch controls for music, calls, and voice assistant.

5.2. Wearing the Earbuds

For optimal sound quality and comfort, ensure the earbuds are properly seated in your ears. The semi-in-ear design is crafted to provide a secure yet comfortable fit for extended listening periods.

6. Maintenance

6.1. Cleaning

Regularly clean your earbuds and charging case with a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals. Do not allow moisture into any openings.

6.2. Water Resistance (IPX7)

The earbuds are rated IPX7 waterproof, meaning they can withstand sweat, accidental splashes, and light rain. They are not designed for swimming or submersion in water. Ensure the earbuds are dry before placing them back in the charging case to prevent damage.

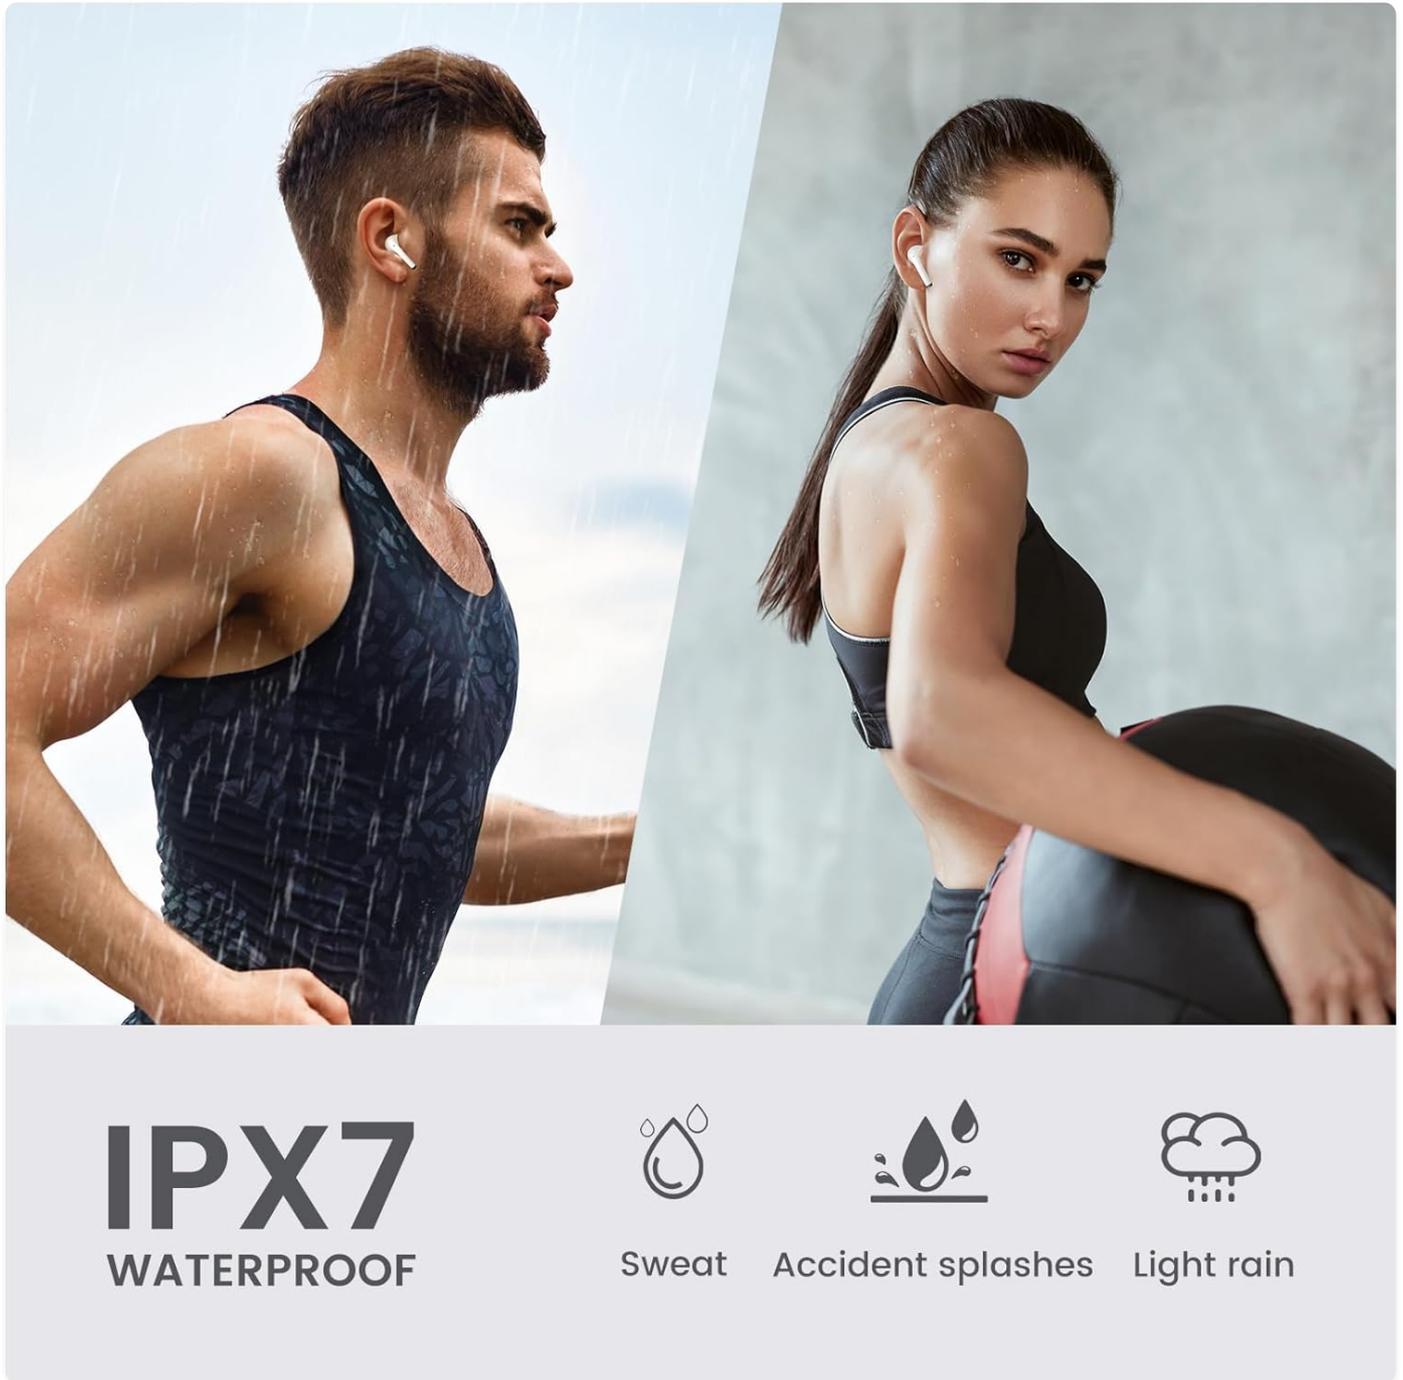


Image 6.1: IPX7 waterproof capabilities, showing protection against sweat, accidental splashes, and light rain.

7. Troubleshooting

If you encounter any issues with your earbuds, please refer to the following common problems and solutions:

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on your device's Bluetooth. Reset earbuds by placing them in the case and closing/opening the lid.



Problem	Solution
No sound from one earbud	Check battery level of both earbuds. Re-pair the earbuds with your device.
Low volume	Adjust volume on both your device and the earbuds using touch controls.
Charging issues	Ensure the USB-C cable is securely connected. Try a different charging cable or power adapter. Clean charging contacts on earbuds and case.
Unstable connection	Ensure no obstructions between earbuds and device. Move closer to your device. Avoid environments with strong electromagnetic interference.

8. Specifications

Feature	Detail
Model Name	LY27203168
Bluetooth Version	5.4
Connectivity Technology	Wireless (Bluetooth)
Water Resistance Level	IPX7
Battery Life (Earbuds)	Up to 5 hours per charge
Total Playtime (with Case)	Up to 25 hours
Charging Port	USB-C
Audio Driver Type	Dynamic Driver
Speaker Size	14.22mm
Frequency Range	20-20000Hz
Impedance	32 Ohm
Control Method	Touch
Material	Acrylonitrile Butadiene Styrene (ABS), Polycarbonate (PC)
Product Dimensions	0.67 x 0.67 x 1.57 inches
Item Weight	2.82 ounces

9. Warranty and Support

yobola products are designed with quality and reliability in mind. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official yobola website. Keep your proof of purchase for warranty claims.

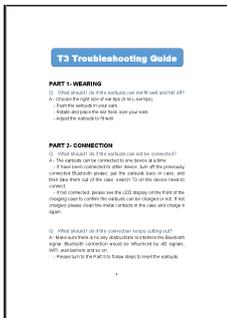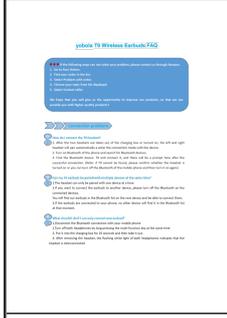 <p>T3 Troubleshooting Guide</p> <p>PART 1 - WEARING</p> <ul style="list-style-type: none"> 1. Check the fit: The earbuds can fit too loose or too tight. 2. Check the fit: The earbuds can fit too loose or too tight. 3. Check the fit: The earbuds can fit too loose or too tight. <p>PART 2 - CONNECTION</p> <ul style="list-style-type: none"> 1. Check the fit: The earbuds can fit too loose or too tight. 2. Check the fit: The earbuds can fit too loose or too tight. 3. Check the fit: The earbuds can fit too loose or too tight. 	<p>T3 Wireless Earbuds Troubleshooting Guide</p> <p>A comprehensive troubleshooting guide for T3 wireless earbuds, covering common issues related to wearing, connection, charging, sound quality, and calls. Includes steps for resetting the earbuds and contacting customer support.</p>
 <p>Safety Information for Bluetooth Headphones</p> <p>SAFETY INFORMATION</p> <p>WARNING: Do not use while driving or operating machinery.</p> <p>CAUTION: Do not use while operating heavy machinery.</p> <p>PRECAUTION: Do not use while operating heavy machinery.</p>	<p>Safety Information for Bluetooth Headphones</p> <p>This document provides essential safety warnings and instructions for the use of Bluetooth headphones, covering multiple languages including English, German, French, Italian, Spanish, Dutch, Swedish, Polish, and Turkish. It advises against extreme temperatures, humidity, and proximity to eyes, prohibits disassembly by non-professionals, and warns about small parts being unsuitable for children under three years old.</p>
 <p>yobola T9 Wireless Earbuds FAQ</p> <p>FAQ</p> <p>1. How do I connect my earbuds to my phone?</p> <p>2. How do I charge my earbuds?</p> <p>3. How do I reset my earbuds?</p>	<p>yobola T9 Wireless Earbuds FAQ and Troubleshooting Guide</p> <p>Frequently asked questions and troubleshooting guide for yobola T9 Wireless Earbuds, covering connection, charging, sound, and power issues.</p>
 <p>yobola T9 Auriculares Inalámbricos FAQ</p> <p>FAQ</p> <p>1. ¿Cómo conecto mis auriculares a mi teléfono?</p> <p>2. ¿Cómo cargo mis auriculares?</p> <p>3. ¿Cómo reinicio mis auriculares?</p>	<p>yobola T9 Auriculares Inalámbricos FAQ - Guía de Solución de Problemas</p> <p>Guía de preguntas frecuentes y solución de problemas para los auriculares inalámbricos yobola T9, cubriendo conexión, señal, carga, llamadas, sonido y uso.</p>
 <p>yobola T9 Cuffie Bluetooth FAQ</p> <p>FAQ</p> <p>1. Come collego le cuffie al mio telefono?</p> <p>2. Come ricarico le cuffie?</p> <p>3. Come riavvio le cuffie?</p>	<p>yobola T9 Cuffie Bluetooth: Domande Frequenti e Risoluzione Problemi</p> <p>Risolvi i problemi comuni con le cuffie Bluetooth yobola T9. Questa guida FAQ offre soluzioni per problemi di connessione, ricarica, audio, chiamate e indossabilità, oltre a istruzioni per l'accensione e lo spegnimento.</p>
 <p>T8 Troubleshooting Guide</p> <p>PART 1 - WEARING</p> <ul style="list-style-type: none"> 1. Check the fit: The earbuds can fit too loose or too tight. 2. Check the fit: The earbuds can fit too loose or too tight. 3. Check the fit: The earbuds can fit too loose or too tight. <p>PART 2 - CONNECTION</p> <ul style="list-style-type: none"> 1. Check the fit: The earbuds can fit too loose or too tight. 2. Check the fit: The earbuds can fit too loose or too tight. 3. Check the fit: The earbuds can fit too loose or too tight. 	<p>T8 Wireless Earbuds Troubleshooting Guide</p> <p>A comprehensive troubleshooting guide for T8 wireless earbuds, covering issues with fit, connection, charging, sound, and calls. Includes steps to resolve common problems and contact customer support.</p>