

## FJFJOPK DC402

# FJFJOPK DC402 Digital Camera User Manual

Model: DC402 | Brand: FJFJOPK

4K Vlogging Camera for YouTube Autofocus 48MP UHD Cameras for Photography with Anti-Shake, 16X Digital Zoom

## INTRODUCTION

Thank you for choosing the FJFJOPK DC402 Digital Camera. This compact and versatile camera is designed for ease of use, making it ideal for beginners, teenagers, and adults looking to capture high-quality photos and videos. With its 4K UHD video recording, 48-megapixel photo capabilities, autofocus, and anti-shake features, you can preserve your memories with clarity and detail. Please read this manual thoroughly to understand the camera's functions and ensure optimal performance.



Image: The FJFJOPK DC402 Digital Camera, showcasing its sleek design, included rechargeable batteries, and 32GB memory card.

## WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- 1X Digital Camera (DC402)
- 1X USB Cable
- 1X Adapter
- 2X Rechargeable Batteries (Li-ion polymer, 3.7V 700mAh)
- 1X 32GB Memory Card
- 1X User Manual (this document)
- 1X Lanyard
- 1X Camera Bag



Image: Visual representation of the complete packing list for the FJFJOPK DC402 Digital Camera.

## SETUP

### 1. Charging the Battery

Before first use, fully charge both included batteries. Insert a battery into the camera, then connect the camera to the adapter using the USB cable. Plug the adapter into a power outlet. The indicator light will show charging status. A full charge typically takes 2-3 hours.



Image: Illustration of the camera charging process and battery life indicators.

### 2. Inserting the Memory Card

Locate the memory card slot on the side of the camera. Insert the provided 32GB memory card with the gold contacts facing the front of the camera until it clicks into place. To remove, gently push the card in again until it springs out.

### 3. Inserting the Battery

Open the battery compartment cover at the bottom of the camera. Insert one of the charged batteries according to the polarity indicators (+/-) inside the compartment. Close the cover securely.

### 4. Attaching the Lanyard

Thread the lanyard through the hook on the side of the camera to prevent accidental drops during use.

## OPERATING INSTRUCTIONS

## Compact camera, bring it to everywhere



Image: Detailed diagram of the camera's components and controls.

### Basic Operation

1. **Power On/Off:** Press and hold the Power Button located on the top of the camera to turn it on or off.
2. **Taking Photos:** Frame your shot using the 2.8-inch IPS screen. Press the Shutter Button halfway down to activate autofocus (the focus frame will change from yellow to green). Once focused, press the Shutter Button fully to capture the image.
3. **Recording Videos:** Switch to video mode using the Mode Button. Press the Shutter Button to start recording. Press it again to stop.
4. **Playback:** Press the Playback button (often labeled with a triangle icon) to review your photos and videos. Use the Up/Down/Left/Right buttons to navigate.

### Advanced Features

- **Autofocus:** The camera features an innovative autofocus system. When taking a picture, press the shutter button halfway down. The camera will automatically adjust focus, indicated by the focus frame changing from yellow to green.



# Upgraded Autofocus Function



Image: Demonstration of the camera's autofocus function, highlighting its ability to achieve clear images.

- **16X Digital Zoom:** Use the W (Wide) and T (Telephoto) buttons to adjust the 16x digital zoom. This allows you to magnify distant subjects. Note that digital zoom may reduce image quality compared to optical zoom.

# 16X Digital Zoom



Image: Visual examples of the 16X digital zoom at different magnifications.

- **Shooting Modes & Filters:** The camera offers nine shooting modes (e.g., Night, Landscape, Backlight) and 20 optional filters to enhance your photos. Access these through the Menu button.
- **Anti-Shake Function:** The built-in anti-shake feature helps to reduce blur caused by camera movement, resulting in clearer images, especially in challenging conditions.





Image: Comparison illustrating the effectiveness of the anti-shake function.

- **Self-Timer:** Set a delay (2s, 5s, 10s) before the camera takes a photo, allowing you to be in the shot.
- **Continuous Shooting:** Capture a rapid sequence of photos by holding down the shutter button.
- **Smile Detection:** The camera can automatically detect smiles and capture photos when a smile is detected.
- **Pause Function (Video):** During video recording or playback, press the 'OK' button to pause the video. Press again to resume. This allows for seamless recording without creating multiple files.

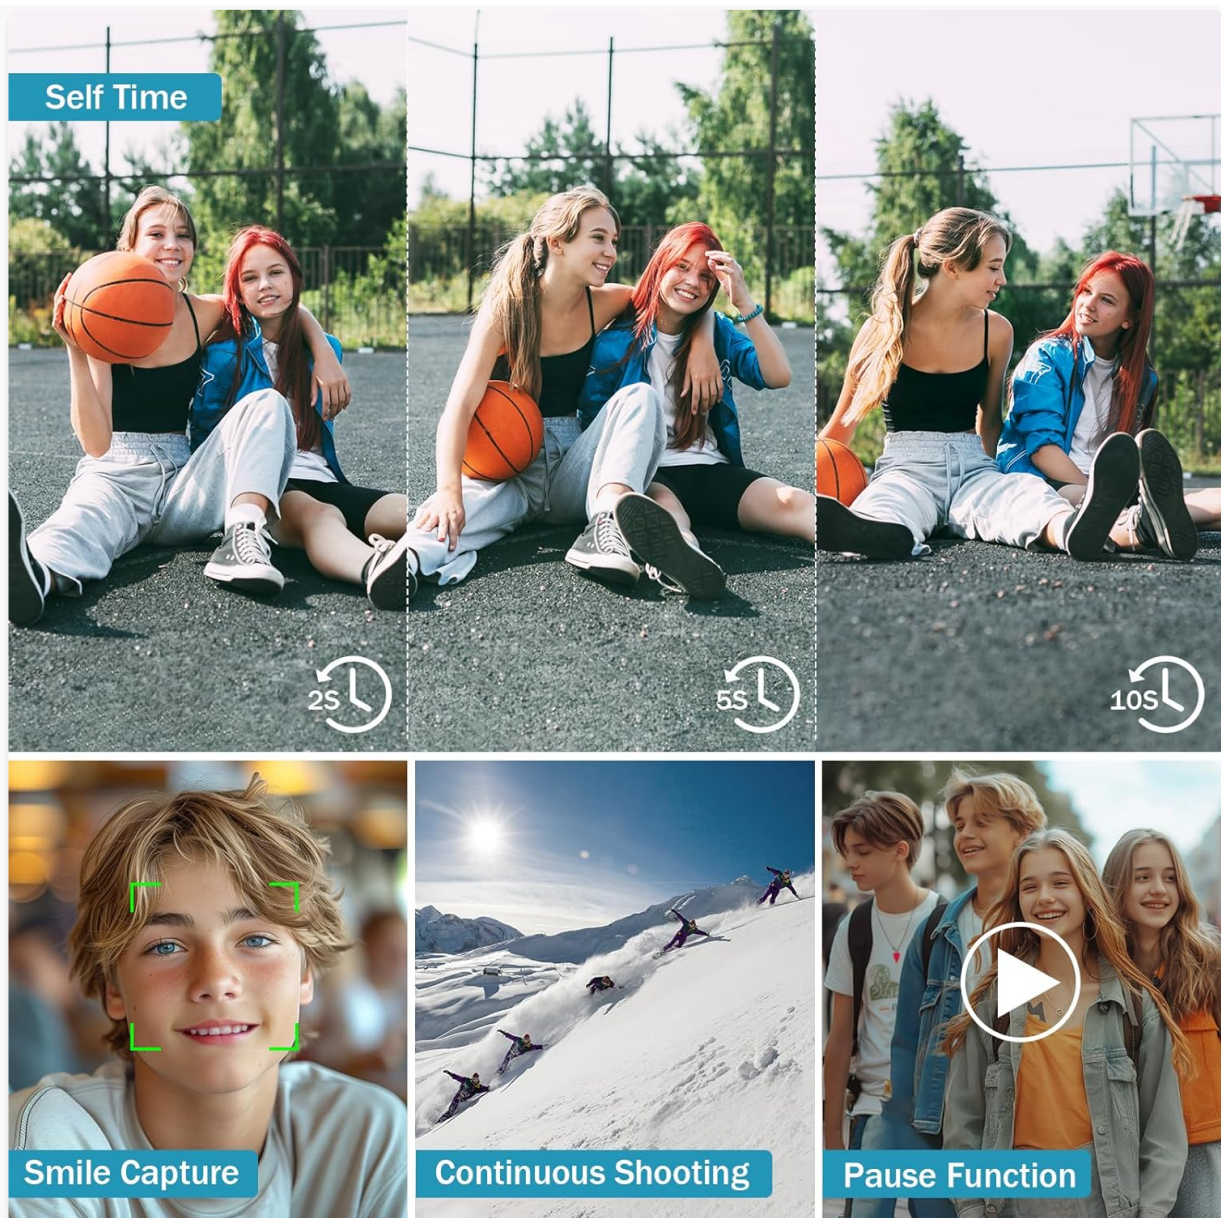


Image: Visual guide to self-timer, smile capture, continuous shooting, and video pause features.

## Video Recording & Webcam Features

The DC402 supports 4K Ultra HD video recording. You can record while charging the camera. To use the camera as a webcam or transfer files, connect it to your computer using the provided Type-C USB cable. The camera will appear as a removable disk, allowing you to drag and drop files. For webcam functionality, select the webcam mode on the camera when connected to a computer.



## Vlogging Digital Camera



## Transfer Photos & Videos Via USB



Image: Demonstrating the camera's use for vlogging and its USB transfer capabilities.

## MAINTENANCE

- **Cleaning the Lens and Screen:** Use a soft, lint-free cloth specifically designed for camera lenses to clean the lens and screen. Avoid using abrasive materials or harsh chemicals.
- **Storage:** When not in use, store the camera in a cool, dry place, away from direct sunlight and extreme temperatures. Use the provided camera bag for protection.
- **Battery Care:** To prolong battery life, avoid fully discharging the batteries regularly. Store partially charged batteries if not using the camera for an extended period.
- **Firmware Updates:** Check the FJFJOPK official website periodically for any available firmware updates to ensure optimal performance and new features.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	Battery is depleted or incorrectly inserted. Ensure batteries are fully charged and inserted with correct polarity.

Problem	Possible Cause / Solution
Photos are blurry.	Insufficient lighting, camera shake, or incorrect focus. Ensure good lighting, use the anti-shake function, and half-press the shutter button to allow autofocus to engage (focus frame turns green).
Cannot transfer photos/videos to computer.	Ensure the camera is connected to the computer via the Type-C USB cable and powered on. The camera should appear as a removable drive. Try a different USB port or cable.
Short battery life.	Battery may not be fully charged, or it's an older battery. Ensure full charge before use. Carry a spare charged battery.
No flash lamp.	The DC402 features an LED fill light for low-light conditions, not a traditional xenon flash. Activate the fill light via the camera's settings.
Memory card error.	Ensure the memory card is inserted correctly. If the issue persists, try formatting the card (this will erase all data) or use a different compatible memory card.

## SPECIFICATIONS

Feature	Detail
Model Name	DC402
Photo Sensor Resolution	48 MP
Video Resolution	4K (2160p) at 30 FPS
Digital Zoom	16X
Screen Size	2.8 Inches (IPS LCD)
Image Stabilization	Optical
Autofocus	Yes (Hybrid Auto Focus)
Supported File Format	JPEG (Photos), MP4 (Videos)
Memory Storage Capacity	32 GB (included)
Connectivity Technology	USB (Type-C)
Battery Type	2 AA Lithium Polymer batteries (included)
Special Features	Time-lapse, Smile Detection, Continuous Shooting, Pause Function, Webcam Function
Camera Flash	No (features LED Fill Light)

## WARRANTY AND SUPPORT

FJFJOPK offers a full year of comprehensive support for your DC402 Digital Camera, ensuring a worry-

free experience. We are committed to providing excellent customer service.

- **Warranty:** 1-Year Hassle-Free Warranty.
- **Technical Support:** Lifetime technical customer support is available.
- **Returns:** 30-day return policy for an exchange or refund.
- **Contact:** For any questions, troubleshooting, or support needs, please refer to the contact information provided on the product packaging or the official FJFJOPK website.



Image: Visual representation of FJFJOPK's commitment to customer support and warranty services.

© 2025 FJFJOPK. All rights reserved.

Related Documents - DC402

<div>Digital Camera User Guide</div> <div></div> <div>1</div>	<div><a href="#">48MP 4K Digital Camera User Guide - Features, Operation, and Webcam Use</a></div> <div>Comprehensive user guide for the 48MP 4K digital camera, covering setup, operation, photography, videography, and webcam functionality. Includes instructions for battery and SD card insertion, charging, formatting, autofocus, media playback/deletion, and webcam use.</div>
<div>Digital Camera User Manual</div> <div></div>	<div><a href="#">Digital Camera User Manual - 48MP, 16X Zoom, 4K</a></div> <div>Comprehensive user manual for the 48MP 4K Digital Camera with 16X Zoom. Learn how to operate, charge, insert memory cards, and utilize various modes and settings for photography and video recording.</div>