

[manuals.plus](#) /› [FLEXISPOT](#) /› [FLEXISPOT E3 Dual Motor Electric Standing Desk 48x24 Instruction Manual](#)

FLEXISPOT E3

FLEXISPOT E3 Dual Motor Electric Standing Desk 48x24 Instruction Manual

Model: E3

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your FLEXISPOT E3 Dual Motor Electric Standing Desk. Please read this manual thoroughly before assembly and use to ensure proper function and safety. The FLEXISPOT E3 desk features a robust dual-motor system for smooth height adjustments and programmable memory presets for convenience.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Ensure all components are securely fastened before use.
- Keep children and pets away from the desk during operation.
- Do not overload the desk; the maximum weight capacity is 220 lbs.
- Avoid placing liquids directly on the control panel or near electrical components.
- Disconnect power before cleaning or performing maintenance.
- Operate the desk on a level surface.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Desktop (48"x24" Black)
- Dual Motor Frame (Black)
- Control Panel with Memory Presets
- Power Adapter and Cables
- Assembly Hardware (screws, tools)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly of the FLEXISPOT E3 desk is designed to be straightforward. It typically takes approximately 25-30 minutes. Ensure you have adequate space and, if possible, a second person to assist with handling the desktop.

4.1 Unpacking and Preparation

- Carefully remove all components from the packaging.
- Lay out all parts on a soft, clean surface to prevent scratches.
- Identify all hardware components using the provided parts list.

4.2 Attaching the Legs to the Desktop

Position the desktop upside down on a protected surface. Attach the dual motor frame legs to the pre-drilled holes on the underside of the desktop using the provided screws. Ensure all connections are tight and secure.



Image: The FLEXISPOT E3 Dual Motor Electric Standing Desk, showcasing its black desktop and white frame, ready for use with typical office equipment.

4.3 Connecting the Control Panel and Power

Connect the control panel cable to the motor control box. Then, connect the power adapter to the control

box and plug it into a standard wall outlet. Ensure cables are routed safely to avoid tripping hazards.



Image: Detail of the dual motor frame, highlighting the smooth and continuous height adjustment capability of the desk.

4.4 Manufacturing Precision

The FLEXISPOT E3 desk is manufactured with precision and innovation. The production process involves advanced robotics and quality control measures to ensure durability and reliable performance.


Your browser does not support the video tag.

Video: An overview of the FlexiSpot manufacturing facility, demonstrating the precision and innovation involved in producing their products, including robotic assembly and quality checks.

5. OPERATING INSTRUCTIONS

Your FLEXISPOT E3 desk is equipped with an intuitive control panel for easy height adjustment and memory functions.

5.1 Control Panel Overview

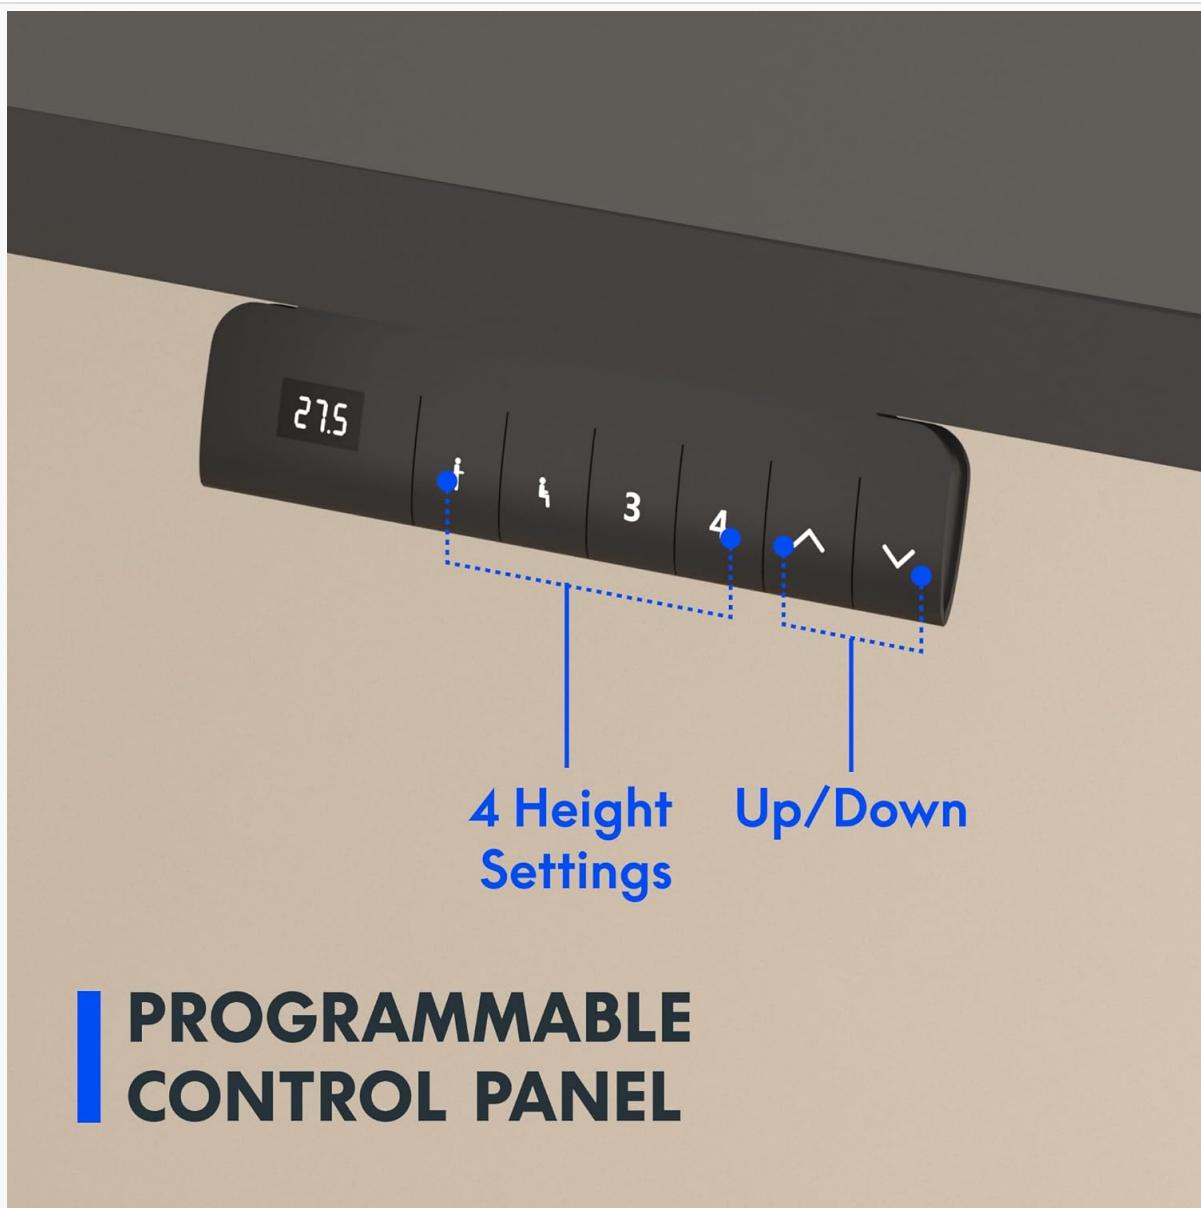

PROGRAMMABLE CONTROL PANEL

Image: The programmable control panel of the FLEXISPOT E3 desk, featuring a digital display for current height, up/down adjustment buttons, and four customizable memory preset buttons.

- **Up/Down Arrows:** Press and hold to manually adjust the desk height.
- **Digital Display:** Shows the current desk height in inches.
- **Memory Presets (1, 2, 3, 4):** Store and recall preferred desk heights.

5.2 Adjusting Height

Press and hold the up or down arrow button on the control panel to move the desk to your desired height. Release the button to stop the movement. The dual motors provide seamless and silent operation, typically under 50 dB.

5.3 Setting Memory Presets

To save a specific height:

1. Adjust the desk to your desired height using the up/down arrows.
2. Press the 'M' or 'Set' button (often indicated by a checkmark or 'S' symbol).
3. Immediately press one of the number buttons (1, 2, 3, or 4) to save the current height to that preset.

To recall a saved height, simply press the corresponding number button (1, 2, 3, or 4). The desk will automatically move to the saved position.

5.4 Anti-Collision System

The desk is equipped with an anti-collision system to prevent damage. If the desk encounters an obstacle during height adjustment, it will automatically stop and reverse slightly. This feature enhances safety during operation.

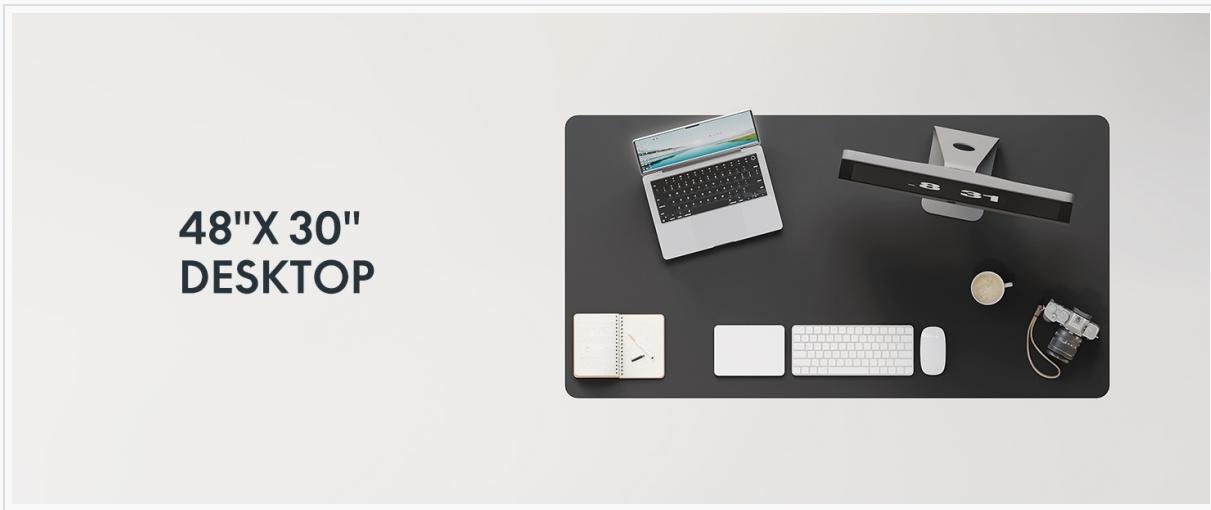


Image: Visual representation of the anti-collision system, demonstrating how the desk detects and avoids obstacles during movement for improved safety.

5.5 Load Capacity

The FLEXISPOT E3 desk is designed to support up to 220 lbs, providing a stable and reliable workstation for various tasks and equipment.

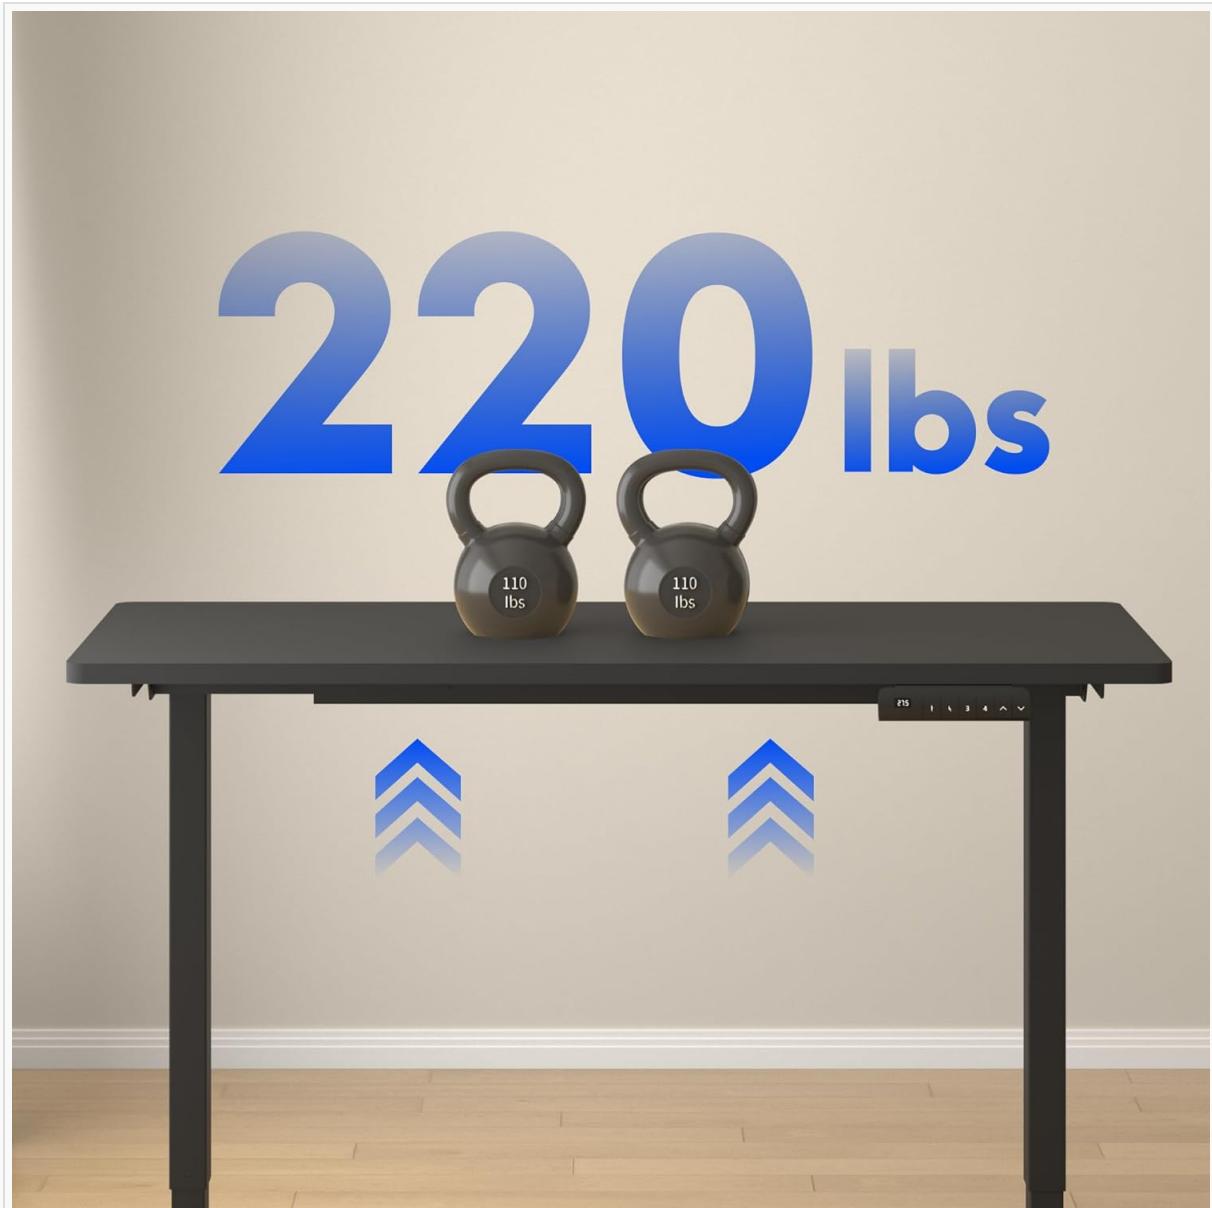


Image: A visual demonstration of the desk's robust load capacity, showing it can comfortably support up to 220 lbs.

6. MAINTENANCE

Regular maintenance helps prolong the life of your standing desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cable Management:** Periodically check and organize cables to prevent tangling or damage.
- **Fasteners:** Ensure all screws and bolts remain tight. Re-tighten if necessary.

7. TROUBLESHOOTING

If you encounter issues with your desk, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move	Power cable disconnected; Overload; Motor error	Check power connection; Reduce weight on desk; Reset the system (refer to specific reset instructions in full manual).

Problem	Possible Cause	Solution
Uneven height adjustment	Obstruction; Unbalanced load	Clear any obstructions; Redistribute weight evenly on the desktop.
Noise during operation	Normal motor sound; Loose components	A slight motor sound is normal (under 50 dB); Check and tighten all assembly fasteners.

For further assistance, please contact FLEXISPOT customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model	E3
Shape	Rectangular
Product Dimensions	47.2"D x 23.6"W x 27.6"H
Color	Black Frame + Black Top
Style	Modern
Base Material	Metal
Top Material Type	Wood
Finish Type	Wood
Special Feature	Corded
Recommended Uses	Office, Gaming
UPC	840460427302
Item Height	27.6 inches
Mounting Type	Tabletop
Is Customizable?	Yes
Tabletop Thickness	23.6 Inches
Required Assembly	Yes

9. WARRANTY AND SUPPORT

FLEXISPOT offers a comprehensive warranty for your peace of mind:

- **5-Year Coverage:** Applies to the desk frame and motor.
- **2-Year Coverage:** Applies to the control panel and electronics.

For any assistance, warranty claims, or technical support, please contact FLEXISPOT customer service directly. Refer to the contact information provided with your product packaging or visit the official

