

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HUMHOLD](#) /

› [HUMHOLD 54" Low Profile Ceiling Fan with Lights and Remote User Manual](#)

HUMHOLD Low Profile Ceiling Fans with Lights and Remote

HUMHOLD 54" Low Profile Ceiling Fan with Lights and Remote User Manual

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the HUMHOLD 54" Low Profile Ceiling Fan with Lights and Remote. This manual provides essential instructions for the safe installation, operation, and maintenance of your new ceiling fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.

Important Safety Precautions:

- Always disconnect power at the main circuit breaker before installation or servicing.
- Ensure all electrical connections comply with local codes and ordinances.
- Consult a qualified electrician if you are unfamiliar with electrical wiring.
- Mount the fan to a ceiling joist or support structure capable of supporting the fan's weight.
- Ensure fan blades are at least 7 feet (2.1 meters) from the floor.
- Do not operate the fan if any part is damaged.

2. PACKAGE CONTENTS

Verify that all components are present before installation. If any parts are missing or damaged, contact customer support.

- Ceiling Fan Motor Housing
- Fan Blades (4)
- Light Kit with LED Module
- Remote Control
- Mounting Bracket
- Hardware Pack (screws, wire nuts, etc.)
- Instruction Manual

3. SPECIFICATIONS

Feature	Specification
Brand	HUMHOLD
Model Name	Low Profile Ceiling Fans with Lights and Remote
Product Dimensions	54"D x 54"W x 12.6"H
Item Weight	13.57 pounds
Color	Black (with reversible blade options)
Electric Fan Design	Ceiling Fan
Power Source	DC
Motor Type	Brushless DC Motor
Number of Power Levels	6 Speed Settings
Air Flow Capacity	Up to 3,070 CFM
Wattage	48 watts
Voltage	110 Volts
Light Type	LED (3 brightness levels)
Luminous Flux	Up to 2400 Lumens
Control Method	Remote Control
Special Features	Energy Efficient, Lightweight, Timer (1H/4H/8H), Reversible Mode, Memory Function, Mute Button
Indoor/Outdoor Usage	Indoor, Outdoor

Note: Product dimensions are approximately 54 inches in diameter and 12.6 inches in height from the ceiling.



Figure 3.1: Ceiling Fan Dimensions and Remote Control Features Overview

4. SETUP AND INSTALLATION

The HUMHOLD ceiling fan is designed for easy DIY installation with preassembled parts, typically taking about 30 minutes. Always ensure power is off at the circuit breaker before starting.

4.1 Blade Assembly

Your fan includes double-sided blades, offering two aesthetic options: a farmhouse-style walnut color and an industrial-style black color. Choose the side that best suits your decor.

2 Colors in one Blade

Double-Sided Fan Blade

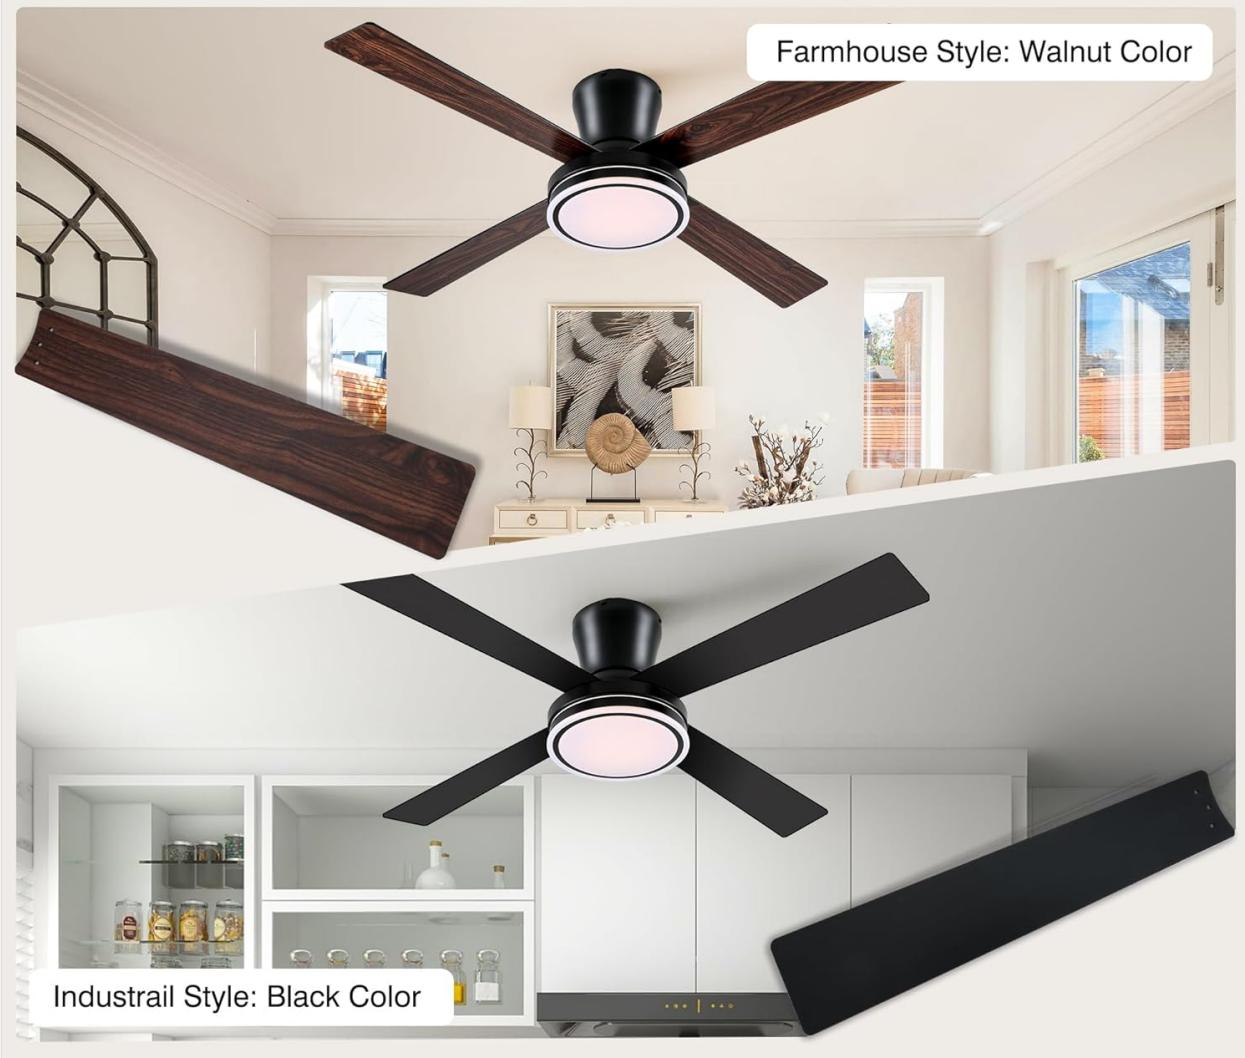


Figure 4.1: Double-Sided Fan Blades (Walnut and Black)

4.2 Mounting the Fan

Secure the mounting bracket to a ceiling joist or a fan-rated electrical box. Connect the electrical wiring according to the provided wiring diagram in the separate installation guide. Ensure all screws are tightened securely with a screwdriver for safety.



Figure 4.2: Installed Ceiling Fan with Remote Control

5. OPERATING INSTRUCTIONS

Your HUMHOLD ceiling fan is controlled by the included remote. Ensure batteries are installed correctly in the remote control.

5.1 Fan Speed Control

The fan features 6 speed settings. Use the fan speed buttons on the remote to adjust the airflow from a gentle breeze to a powerful circulation.

54 Inch Ceiling Fan

Mighty Wind Under Your Control



Figure 5.1: Fan Airflow and Volume

5.2 Light Control

The integrated LED light offers 3 brightness levels and adjustable color temperature (3000K Warm Yellow, 4500K Natural White, 6500K Bright White). Use the light control buttons on the remote to cycle through brightness and color temperature options.



Figure 5.2: Adjustable Light Color Temperatures

5.3 Reversible Mode (Summer/Winter)

Activate the one-touch reversible mode using the remote control. In **Summer Mode**, the fan blades rotate counter-clockwise to force cool air downward. In **Winter Mode**, the blades rotate clockwise to gently draw warm air upward, circulating it throughout the room.



SUMMER



WINTER



Figure 5.3: Summer and Winter Reversible Modes

Your browser does not support the video tag.

Video 5.1: Demonstration of Fan Operation and Reversible Function

5.4 Timer Function

Set the fan to automatically turn off after 1 hour, 4 hours, or 8 hours using the timer buttons on the remote. This feature is useful for bedtime or when leaving a room.



Figure 5.4: Timer Settings and Quiet Operation

5.5 Mute Function

Press the mute button on the remote to eliminate operational sounds, such as button presses, for a quieter user experience.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically wipe the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Care:** Check the blades for any signs of damage or warping. Ensure they are securely fastened.
- **Light Kit:** The LED module is designed for long life and typically does not require replacement. If the light malfunctions, refer to the troubleshooting section.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are tight.

Always ensure the power is disconnected before performing any cleaning or maintenance.

7. TROUBLESHOOTING

If you experience issues with your HUMHOLD ceiling fan, consult the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wiring; Remote control battery dead or not paired.	Check circuit breaker; Verify all wire connections; Replace remote battery or re-pair remote (refer to remote pairing instructions in the full manual).
Light does not work	Loose wiring; LED module failure; Remote control issue.	Check light kit wiring; Contact customer support if LED module is suspected; Check remote battery.
Fan wobbles	Loose blades or mounting hardware; Unbalanced blades.	Ensure all blade screws and mounting screws are tight; Use a balancing kit (not included) if necessary.
Remote not responding	Dead battery; Not paired with fan; Obstruction.	Replace remote battery; Re-pair remote with fan; Ensure clear line of sight to fan receiver.

If the problem persists after attempting these solutions, please contact HUMHOLD customer support.

8. WARRANTY AND SUPPORT

Your HUMHOLD ceiling fan is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical assistance, replacement parts, or warranty claims, please contact HUMHOLD customer support through the retailer where the product was purchased or visit the official HUMHOLD website.

Contact Information:

- **Website:** [HUMHOLD Store on Amazon](#)
- Refer to your purchase documentation for additional support contacts.