

## TIMEX TWEG24902

# TIMEX Vector Analog Watch TWEG24902 User Manual

Model: TWEG24902

## 1. INTRODUCTION

This manual provides detailed instructions for the proper use and care of your TIMEX Vector Analog Watch, model TWEG24902. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. This watch features a classic analog display, chronograph functionality, and is designed for everyday wear.



Image: Front view of the TIMEX Vector Analog Watch, showcasing its black dial, red accents, and stainless steel bracelet.

## 2. INITIAL SETUP

### 2.1 Unpacking

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. Retain all packaging materials for future reference or warranty claims.

### 2.2 Adjusting the Time

1. Pull the crown (located on the right side of the watch case) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Once the time is set, push the crown back into position 1 to start the watch.



Image: Side view of the watch, highlighting the crown used for time and date adjustments.

### 2.3 Setting the Date

1. Pull the crown out to position 1 (first click).
2. Turn the crown clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.
3. Once the date is set, push the crown back into its original position.

### 2.4 Adjusting the Bracelet

The stainless steel bracelet can be adjusted for a comfortable fit. This typically involves removing or adding links. It is recommended to have this adjustment performed by a qualified jeweler or watch technician to prevent damage to the bracelet or watch.



Image: Top-down view of the watch bracelet, showing its link design.

### 3. OPERATING YOUR WATCH

---

#### 3.1 Reading the Time

The watch displays time using traditional hour, minute, and second hands on the main dial.

#### 3.2 Using the Chronograph Function

Your TIMEX Vector watch is equipped with a chronograph (stopwatch) function.

1. **Start/Stop:** Press the upper pusher (button A) to start the chronograph. Press it again to stop.
2. **Reset:** While the chronograph is stopped, press the lower pusher (button B) to reset all chronograph hands to their zero positions.



Image: Angled view of the watch, illustrating the chronograph pushers on the side of the case.

### 3.3 Water Resistance

This watch is water resistant up to 100 meters (10 ATM). This rating means it is suitable for swimming, snorkeling, and showering. However, it is not recommended for scuba diving. Ensure the crown is fully pushed in before any contact with water. Do not operate the crown or pushers while the watch is wet or submerged, as this can compromise the water resistance.

## 4. CARE AND MAINTENANCE

### 4.1 Cleaning

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.

### 4.2 Battery Replacement

The watch is powered by a quartz movement and requires a battery. When the battery runs low, the second hand may start to skip or stop. Battery replacement should be performed by a qualified watch technician to ensure the watch's water resistance is maintained and to prevent damage to the movement.



Image: Back view of the watch, showing the case back where battery access is located.

### 4.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box is ideal for storage.

## 5. TROUBLESHOOTING

---

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Incorrect time/date:** Refer to sections 2.2 and 2.3 for proper setting procedures.
- **Condensation inside the crystal:** This may indicate a loss of water resistance. Avoid further contact with water and have the watch inspected by a professional immediately.
- **Chronograph hands not resetting to zero:** This may require a chronograph hand calibration. Consult a professional watch technician.

## 6. PRODUCT SPECIFICATIONS

---


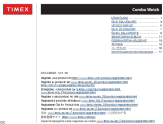

Feature	Specification
Model Number	TWEG24902
Movement Type	Quartz
Case Diameter	44 Millimetres
Band Material Type	Stainless Steel
Band Colour	Black
Water Resistance	100 Meters (10 ATM)
Item Weight	90 Grams
Product Dimensions	10 x 10 x 10 Centimeters
Batteries	1 Product Specific battery required (included)




## 7. WARRANTY AND CUSTOMER SUPPORT

Your TIMEX Vector Analog Watch TWEG24902 comes with a one-year warranty covering manufacturing defects from the date of purchase. This warranty does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For warranty service or technical support, please contact TIMEX customer service. Keep your proof of purchase for warranty validation.

### Related Documents - TWEG24902

	<p><a href="#">Timex Watch User Manual: Features, Operation, and Care</a></p> <p>Comprehensive user manual for Timex watches, detailing features like analog and digital time, multiple time zones, alarms, chronographs, timers, water resistance, and bracelet adjustment.</p>
	<p><a href="#">Timex Combo Watch User Manual and Guide</a></p> <p>Comprehensive user manual and guide for the Timex Combo Watch, covering features, basic operation, time setting, stopwatch, alarm, INDIGLO night-light, water and shock resistance, battery replacement, and international warranty.</p>
	<p><a href="#">Timex Analog Watch User Manual - Features, Settings, and Care</a></p> <p>Comprehensive user guide for Timex Analog watches, covering setup, features like INDIGLO® Night-Light, water resistance, alarms, perpetual calendar, and maintenance. Available in multiple languages.</p>

	<p><a href="#">Timex Higher-Function Analog Watch User Guide</a></p> <p>Explore the features and operation of Timex Higher-Function Analog watches with this comprehensive user guide. Learn about time setting, alarms, chronograph functions, Indiglo Night-Light, water resistance, and more. Available in multiple languages.</p>
	<p><a href="#">TIMEX Higher-Function Analog Watch User Guide (991-096572-01)</a></p> <p>Comprehensive user guide for the TIMEX Higher-Function Analog watch (model 991-096572-01). Learn to operate its features including Indiglo night-light, chronograph, alarms, and water resistance. Includes instructions for analog and digital time settings, bracelet adjustment, and warranty information.</p>
	<p><a href="#">Timex LCD Analog Watch User Manual and Guide</a></p> <p>Official user manual and guide for the Timex LCD Analog watch (model 04K-096000-02), detailing features, operation, settings, water resistance, battery, and warranty information.</p>