
[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Bluetooth Earbuds ASHATA41rm3086uk User Manual

ASHATA ASHATA41rm3086uk

ASHATA Bluetooth Earbuds User Manual

Model: ASHATA41rm3086uk

INTRODUCTION

Thank you for choosing the ASHATA Bluetooth Earbuds. This manual provides essential information for setting up, operating, and maintaining your new earbuds. Please read it carefully to ensure proper use and to maximize your listening experience.

PACKAGE CONTENTS

- ASHATA Bluetooth Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual



Image: The ASHATA Bluetooth earbuds, their charging case, and the included USB charging cable are displayed together.

PRODUCT OVERVIEW

The ASHATA Bluetooth Earbuds feature an in-ear design for comfortable wear and a portable charging case with a digital display. Each earbud is equipped with touch controls for easy operation.

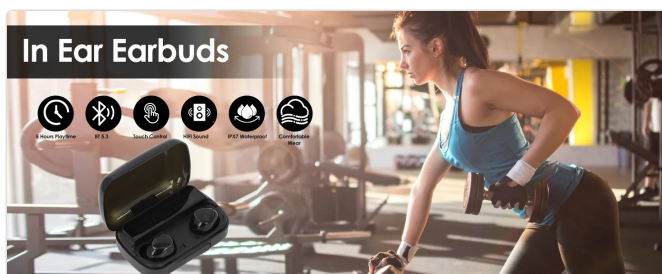


Image: An illustration highlighting the touch-sensitive panel on the earbud for various operations.



Image: The charging case displaying its battery level and the charging status of the earbuds.



Image: A close-up view of the left and right ASHATA earbuds, showing their ergonomic design and charging contacts.



Image: The ASHATA earbuds resting inside their open charging case, ready for use or charging.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The charging case has a 350mAh battery and can provide multiple charges to the earbuds.

1. Place both earbuds into the charging case. Ensure they are correctly seated; magnetic contacts will hold them in place.
2. Connect the USB charging cable to the charging port on the case and the other end to a USB power source (e.g., computer, wall adapter).
3. The digital display on the charging case will show the battery percentage and charging status of the earbuds.
4. Once fully charged, the earbuds can provide approximately 5 hours of playtime on a single charge.



Image: The ASHATA charging case connected via a USB cable to a power source, indicating it is being charged.

2. Pairing with a Device

The earbuds use Bluetooth 5.4 for a fast and stable connection.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for available Bluetooth devices and select "ASHATA Earbuds" (or similar name) from the list.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.
5. The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the

device.

OPERATING INSTRUCTIONS

Touch Controls

The earbuds feature sensitive touch controls on their outer surface. Specific functions may vary slightly by device or application.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud.

MAINTENANCE

Cleaning

To maintain optimal performance and hygiene:

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Ensure charging contacts on both earbuds and case are clean and dry.

Water Resistance (IPX7)

The earbuds are rated IPX7, meaning they are protected against the effects of temporary immersion in water (up to 1 meter for 30 minutes). This makes them suitable for use during workouts or in light rain.

- Do not intentionally submerge the earbuds for extended periods or in depths greater than 1 meter.
- The charging case is not water-resistant. Keep it dry.
- Ensure earbuds are completely dry before placing them back into the charging case to prevent damage.



Image: A woman wearing the ASHATA earbuds during a workout, demonstrating their IPX7 water resistance against sweat or light rain.

Storage

Store the earbuds in their charging case when not in use to protect them and keep them charged. Avoid extreme temperatures and direct sunlight.

TROUBLESHOOTING

- **Earbuds not pairing:** Ensure both earbuds are charged. Place them back in the case, close it, then open it again to reset. Check your device's Bluetooth settings and try re-pairing.
- **Only one earbud working:** Place both earbuds back in the charging case, close the lid, and then open it again. Ensure both earbuds are charged. If the issue persists, try resetting the earbuds (refer to manufacturer's website for specific reset instructions if needed).
- **No sound:** Check the volume level on your connected device. Ensure the earbuds are properly paired and selected as the audio output.
- **Charging case not charging:** Ensure the USB cable is securely connected to both the case and the power source. Try a

different USB cable or power adapter.

- **Poor sound quality:** Ensure the earbuds are clean and properly seated in your ears. Move closer to your connected device to avoid interference.

SPECIFICATIONS

Model Name	ASHATA41rm3086uk
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.4 (Inferred from product title)
Form Factor	In Ear
Playtime (Single Charge)	Up to 5 hours
Charging Case Battery Capacity	350mAh
Water Resistance Rating	IPX7
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	3.28 ounces (93 Grams)
Manufacturer	ASHATA

WARRANTY AND SUPPORT

Warranty Information

ASHATA products are covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official ASHATA website. Keep your proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions not covered in this manual, please contact ASHATA customer support. Contact details can typically be found on the product packaging, the official ASHATA website, or through your retailer.