

[Manuals.plus](#) /

› [Fisher](#) /

› Fisher Studio Pro SBX835K Portable PA Speaker System User Manual

Fisher SBX835K

Fisher Studio Pro SBX835K Portable PA Speaker System User Manual

Model: SBX835K

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Fisher Studio Pro SBX835K Portable PA Speaker System. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not open the casing. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.
- Ensure proper ventilation. Do not block any ventilation openings.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Use only attachments/accessories specified by the manufacturer.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Fisher Studio Pro SBX835K Portable PA Speaker System
- Power Cable
- Warranty Card

4. PRODUCT FEATURES

The Fisher Studio Pro SBX835K offers a range of features for versatile audio playback and entertainment:

- **Powerful Audio:** 40 Watt RMS (80W Peak) stereo sound with dual 8-inch audio drivers.
- **Bluetooth Connectivity:** Bluetooth 5.3 for stable wireless streaming up to 33 feet.
- **True Wireless Stereo (TWS):** Connect two SBX835K speakers wirelessly for an enhanced stereo experience.
- **Dynamic LED Lights:** 11 Light FX Show Modes that synchronize with music.
- **Rechargeable Battery:** Built-in 3600mAh 7.4V battery for up to 3 hours of playtime, with a level indicator.
- **Multiple Inputs:** USB flash drive reader, Micro SD card reader, AUX input, and two microphone inputs.
- **Karaoke Functionality:** Dedicated microphone inputs with adjustable echo effect.
- **Integrated FM Radio:** Digital LED display for FM radio tuning.
- **Audio Control:** Adjustable Bass, Treble, and Digital Equalizer modes.
- **Portability:** Extendable carry handle for easy transport.

5. PRODUCT OVERVIEW AND CONTROL PANEL

Familiarize yourself with the speaker's components and control panel.



Image Description: A detailed diagram of the top control panel of the Fisher Studio Pro SBX835K speaker. Labels point to various buttons and ports including AUX IN, MIC 1, MIC 2, MIC ECHO, MIC VOLUME, MODE, RECORDING, LED MODE, VOLUME knob, LED DISPLAY, USB, TF CARD, DC 9V INPUT, POWER ON/OFF, CHARGE LED INDICATOR, BASS, TREBLE, PAUSE/TWS, NEXT, and PREVIOUS buttons.

Control Panel Functions:

- **AUX IN:** 3.5mm audio input for external devices.
- **MIC 1 / MIC 2:** 6.35mm microphone inputs.
- **MIC ECHO:** Adjusts the echo effect for microphones.
- **MIC VOLUME:** Adjusts microphone volume.

- **MODE:** Switches between Bluetooth, FM Radio, AUX, USB, and Micro SD modes.
- **RECORDING:** Initiates or stops recording audio (to USB/Micro SD).
- **LED MODE:** Cycles through different LED light effects.
- **VOLUME:** Master volume control knob.
- **LED DISPLAY:** Shows current mode, track number, or FM frequency.
- **USB:** USB port for flash drive playback and recording.
- **TF CARD:** Micro SD card slot for playback and recording.
- **DC 9V INPUT:** Power input for charging the speaker.
- **POWER ON/OFF:** Main power switch.
- **CHARGE LED INDICATOR:** Indicates charging status.
- **BASS / TREBLE:** Adjusts bass and treble levels.
- **PAUSE / TWS:** Plays/pauses audio; long press to activate/deactivate TWS pairing.
- **NEXT / PREVIOUS:** Skips tracks or tunes FM radio stations.

6. SETUP

6.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided power cable to the DC 9V INPUT port on the speaker and plug the other end into a standard power outlet. The CHARGE LED INDICATOR will illuminate during charging and turn off when fully charged. A full charge takes approximately 3-4 hours.

6.2 Powering On/Off

To power on the speaker, toggle the POWER ON/OFF switch to the 'ON' position. To power off, toggle the switch to the 'OFF' position.

7. OPERATING INSTRUCTIONS

7.1 Bluetooth Pairing

1. Power on the speaker. The LED DISPLAY will show 'BLUE' and a voice prompt will indicate Bluetooth mode.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available devices and select 'FISHER SBX835K' from the list.
4. Once paired, the speaker will emit a confirmation tone. You can now stream audio wirelessly.

True Wireless Stereo (TWS) Function

To pair two SBX835K speakers for a stereo experience:

1. Ensure both speakers are powered on and in Bluetooth mode, but not yet connected to any device.
2. On one of the speakers (this will be the primary speaker), long press the 'PAUSE / TWS' button. The speaker will emit a pairing tone.
3. The primary speaker will automatically search for and pair with the second speaker. Once connected, both speakers will emit a confirmation tone.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described above. Audio will play through both speakers in stereo.



Image Description: Two Fisher Studio Pro SBX835K speakers standing upright, illuminated with colorful LED lights, with musical notes floating between them, illustrating the True Wireless Stereo (TWS) multi-speaker connection feature.

7.2 USB / Micro SD Playback

1. Insert a USB flash drive or Micro SD card (with MP3 audio files) into the respective port.
2. The speaker will automatically switch to USB or Micro SD mode and begin playback. If not, press the 'MODE' button to select the correct input.
3. Use the 'NEXT' and 'PREVIOUS' buttons to navigate tracks. Press 'PAUSE' to pause/resume playback.

7.3 AUX Input

1. Connect an external audio device (e.g., MP3 player, DVD player) to the 'AUX IN' port using a 3.5mm audio cable (not included).
2. Press the 'MODE' button until 'AUX' is displayed on the LED screen.
3. Control playback from your connected device.

7.4 FM Radio

1. Press the 'MODE' button to switch to FM radio mode. The LED display will show the FM frequency.
2. Long press the 'PAUSE' button to automatically scan and save available FM stations.
3. Use the 'NEXT' and 'PREVIOUS' buttons to cycle through saved stations.

7.5 Microphone Usage (Karaoke)

1. Connect a microphone to either 'MIC 1' or 'MIC 2' input.
2. Adjust the microphone volume using the 'MIC VOLUME' knob.
3. Adjust the echo effect using the 'MIC ECHO' knob for karaoke.

7.6 LED Light Modes

Press the 'LED MODE' button to cycle through the 11 available light effects. The lights will pulse and change color in

sync with the music.



Image Description: The Fisher Studio Pro SBX835K speaker showcasing its vibrant, multi-colored LED light display, creating a dynamic visual effect.

7.7 Equalizer Adjustment (Bass & Treble)

Use the 'BASS' and 'TREBLE' knobs on the control panel to fine-tune the audio output to your preference.

7.8 Recording Function

When playing audio from a microphone or AUX input, you can record to a connected USB flash drive or Micro SD card. Press the 'RECORDING' button to start recording and press it again to stop.

8. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

9. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

- **No Power:** Ensure the power cable is securely connected and the POWER ON/OFF switch is in the 'ON' position. Check if the battery is charged.
- **No Sound:** Check the master volume level and ensure it is not muted. Verify the correct input mode is selected (Bluetooth, AUX, USB, FM). For Bluetooth, ensure the device is properly paired.

- **Bluetooth Disconnection:** Ensure your device is within the 33-foot range. Try unpairing and re-pairing the speaker with your device.
- **Microphone Not Working:** Ensure the microphone is securely plugged in and the 'MIC VOLUME' knob is turned up.
- **Poor FM Reception:** Try repositioning the speaker to improve signal reception.

If the problem persists, contact customer support.

10. SPECIFICATIONS

Brand	Fisher
Model Number	SBX835K
Speaker Type	Portable Speaker
Speaker Maximum Output Power	80 Watts (Peak)
Audio Driver Size	8 Inches (Dual)
Connectivity Technology	Bluetooth 5.3
Bluetooth Range	33 Feet
Power Source	Battery Powered
Battery Capacity	3600 mAh 7.4V
Playtime	Up to 3 hours
Input Voltage	9 Volts
Product Dimensions (L x W x H)	12.7" x 11.8" x 28.14"
Item Weight	14.33 Pounds
Material	Metal, Plastic
Included Components	Power Cable, Warranty Card

11. WARRANTY AND SUPPORT

11.1 Warranty Information

This product comes with a Limited Warranty. Please refer to the included Warranty Card for detailed terms and conditions, including coverage period and claim procedures.

11.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Fisher customer support. Contact details can be found on the warranty card or the official Fisher website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DRW7WWW1>

More documents and user manuals: <https://manuals.plus/>