

## YsChois 1688-AA

# YsChois Electric Fly Swatter Instruction Manual

Model: 1688-AA

## INTRODUCTION

The YsChois Electric Fly Swatter is designed to effectively eliminate various flying insects such as flies, mosquitoes, moths, gnats, and spiders. Featuring a high-voltage grid and a durable design, this battery-powered racket provides a convenient and chemical-free solution for pest control both indoors and outdoors.

## SAFETY INFORMATION

Please read and understand all safety instructions before using the product.

- **Do not touch the inner metal mesh:** The inner mesh carries a high voltage when activated. The outer grids are designed to be safe to touch, but direct contact with the inner mesh should be avoided.
- **Keep out of reach of children and pets:** Although designed with safety in mind, supervision is recommended.
- **Do not use near flammable gases or liquids:** Avoid using the swatter in environments where flammable materials are present.
- **Do not wash with water:** This is an electrical device. Clean only with the provided brush or a dry cloth.
- **Store in a dry place:** Protect the device from moisture.

## PRODUCT FEATURES

- **Gold Zone 3000V Power:** Equipped with a powerful high-voltage grid for efficient and fast insect elimination.
- **Densest 3 mm Mesh:** Upgraded spider-web mesh design ensures effective capture of insects.
- **Durable Construction:** Features a 53% stronger support structure, designed for long-lasting performance and stability.
- **Lightweight Design:** Weighs approximately 7 oz, similar to an apple, allowing for maximum swing speed and ease of use.
- **AA Battery Powered:** Operates on AA batteries (not included), offering portability and freedom from cords.
- **5-Layer Safety Design:** Provides physical pest control that is chemical-free, odorless, and safe for indoor

USE.

## SETUP

The YsChois Electric Fly Swatter requires 2 x AA batteries for operation.

1. Locate the battery compartment on the handle of the swatter.
2. Open the battery compartment cover.
3. Insert 2 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Figure 1: Battery Compartment and Key Components. The image displays the swatter's handle with the battery compartment clearly visible, along with labels for the one-button operation and work indicator light. Dimensions of 8.6 inches by 16 inches are also shown.

## OPERATING INSTRUCTIONS

Using your YsChois Electric Fly Swatter is simple and effective:

1. **Activate the Swatter:** Press and hold the activation button located on the side of the handle. A red indicator light will illuminate, signifying that the high-voltage grid is active.
2. **Swat Insects:** Swing the swatter towards the target insect. When the insect makes contact with the

electrified mesh, it will be zapped. You may hear a "zap" sound and see a small spark.

3. **Deactivate:** Release the activation button to turn off the high-voltage grid.



Figure 2: Electric Fly Swatter in Use. This image shows the white electric fly swatter actively zapping various flying insects, with visual effects indicating the electric discharge.



Figure 3: Gold Zone Voltage. The image highlights the 3000V Gold Zone Voltage feature, showing insects twitching, sparking, and sizzling upon contact with the swatter's mesh.

## MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your swatter.

- **Cleaning the Mesh:** After use, small insect debris may accumulate on the mesh. Use the provided cleaning brush to gently remove any residue. The brush is designed to fit into the mesh for effective cleaning.
- **Do Not Use Water:** Never rinse the swatter with water or any other liquid. This can damage the electrical components.
- **Battery Replacement:** If the indicator light does not illuminate or the zapping power decreases, replace the AA batteries.



Figure 4: Densest 3mm Mesh. This image focuses on the upgraded 3mm mesh, illustrating its effectiveness in trapping various insects like mosquitoes, flies, moths, and gnats.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Swatter not zapping/indicator light off	Batteries are dead or incorrectly inserted.	Replace batteries with new AA batteries, ensuring correct polarity.
Weak zapping power	Low battery power or dirty mesh.	Replace batteries. Clean the mesh thoroughly with the provided brush.
Insects not being zapped effectively	Mesh is dirty or insect is too small/fast.	Clean the mesh. Ensure direct contact with the electrified mesh.

## SPECIFICATIONS

Brand	YsChois
Model Number	1688-AA

<b>Power Source</b>	2 x AA Batteries (not included)
<b>Voltage</b>	3000V (Gold Zone Voltage)
<b>Material</b>	Plastic, Metal
<b>Product Dimensions</b>	16"L x 8.6"W x 0.99"H
<b>Item Weight</b>	8.96 ounces
<b>Mesh Type</b>	Upgraded 3 mm spider-web mesh

## WARRANTY AND SUPPORT

The YsChois Electric Fly Swatter comes with a one-year after-sales service for worry-free use. For any questions, concerns, or support needs, please contact YsChois customer service through the retailer where the product was purchased.